



**POWER™**  
**WAND**

**BATTERY  
PACK  
SHORTY**



## BATTERY PACK SHORTY



Voltage Range 4.5V - 13V

Weight: 1.4 oz

Length: 1.59"

Diameter: 1.45"

# ENHANCED WITH CRITICAL CORE



## PRECISE VOLTAGE

No "Sag" in voltage drop during any part of the tattoo session



## LOW BATTERY INDICATOR

At 5% charge life, a low battery icon is displayed along with a beep for 5 seconds at every minute



## OUTPUT INDICATOR

Flashing decimal point informs user device is in use



## TEMPERATURE PROTECTION

Power shuts off if temperature ever reaches at unsafe levels (176°F)



## CRITICAL CORE

Smart & accurate



## VERSATILE CHARGE CONNECTION

Easy charge connection with any USB-C connection

# HOW TO USE:

- 1 Attach power pack to tattoo machine
- 2 Turn device on by holding power button 3 seconds
- 3 Select desired voltage by using +/- button
- 4 Start device by clicking power button 1 time
- 5 Stop device by clicking power button 1 time
- 6 Turn device off by holding power button 3 seconds

## OLED SCREEN

### WHEN CHARGING

Screen will remain on while charging, will display battery status

Screen will idle once fully charged after 60 seconds


## CHARGING

Use USB Type C Connector





Universal Battery Dock (Sold Separately)
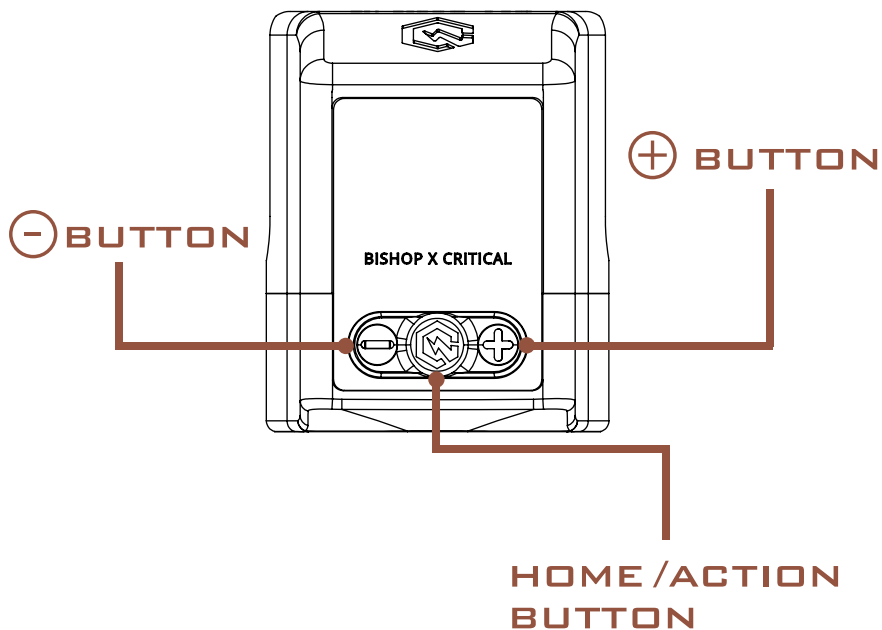
# HOW TO PAIR

## BATTERY TO FOOT SWITCH



- Any Critical Connect Battery (up to 4)
- 1x Critical Connect Foot Switch

- 1** Hold both  and  Buttons for 3 seconds to enter Bluetooth Menu
- 2** Click  1 time for Search Mode
- 3** Quickly tap Foot Switch (sold separately) 1 time to pair with battery pack
- 4** Click Button  1 time to return to Home Menu

## BLUETOOTH MENU SYMBOLS



**NOT PAIRED**



**SEARCH MODE**




**DEVICE NOT FOUND**



**BLUETOOTH PAIRED**

# HOME SCREEN

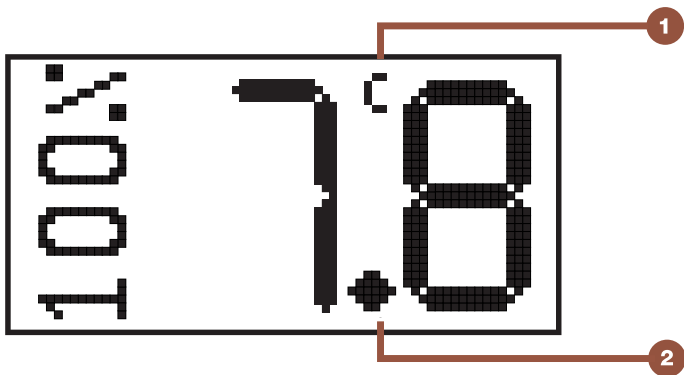

## BATTERY TO FOOT SWITCH




### 1 CRITICAL CONNECT INDICATOR

"C" Symbol will be visible on home screen when battery is paired with Foot Switch

### 2 MOMENTARY/CONTINUOUS MODE

Click both the  and  once to toggle between modes on the Foot Switch

 Solid decimal for continuous



 Hollow decimal for momentary

# HOW TO PAIR MULTIPLE BATTERIES



+



- 1 Pair 1st battery to Foot Switch
- 2 Double click  to enter “standby” mode
- 3 Turn on or exit standby by double clicking  on 2nd device
- 4 Pair 2nd battery to Foot Switch

---

Pair and switch between up to 4 batteries and 1 Foot Switch

Only 1 battery can be operated at a time per Foot Switch. All batteries not in use should be on standby mode or off.



# COMPATIBLE PRODUCT

(SOLD SEPARATELY)

## CRITICAL CONNECT™ FOOT SWITCH



**COMPATIBLE PRODUCT**  
**(SOLD SEPARATELY)**

**UNIVERSAL**  
**BATTERY DOCK**



# VIDEO TUTORIAL



SCAN QR CODE FOR VIDEO LINK

CREATE  MAGIC.

# POWERED BY CREATIVE FORCES



## PATENT INFO

US PATENT 10471246, 29/736,884

AU PATENT 2019359618

CN PATENT 202030297770.3

CA PATENT 196581

Additional US, AU, CN, CA, EU Patents Pending

