


INSTALLATION GUIDE



52111 Bucket Set

FORD E150 - E450 (2009-2019)

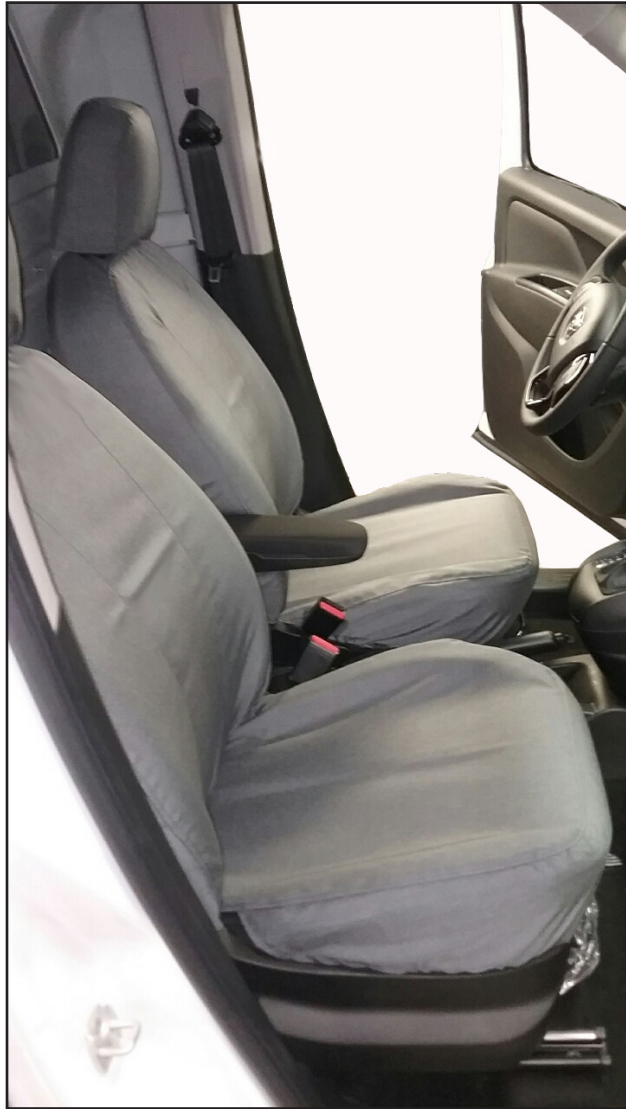

BILL OF MATERIALS

ITEM	QUANTITY
Driver Seat Back Cover	1
Driver Seat Bottom Cover	1
Passenger Seat Back Cover	1
Passenger Seat Bottom Cover	1

Seat Backs & Bottoms have tag signifying Driver or Passenger.

Ensure airbag patch (same side as the TigerTough tag) goes on the outside edge of the seat.

General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.
Drip dry or machine tumble dry on a no heat cycle.
Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.



1 - Preparation

- ❑ 1.1 - Slide seat forward and raise to highest position, if possible.

2 - Install Seat Back Cover



- ❑ 2.1 - Turn seat back cover 3/4 of the way inside out and pull over seat back.
- ❑ 2.2 - Continue pulling the cover down over the seat, unrolling it as you go.
- ❑ 2.3 - Push front flap between seat back and seat bottom.
- ❑ 2.4 - Pull front flap tight and fasten to Velcro on seat back.

3 - Install Seat Bottom Cover



- ❑ 3.1 - Put cover over seat bottom.
- ❑ 3.2 - Tuck outside of cover behind plastic trim. Tuck inside of cover between seat bottom and center console.
- ❑ 3.3 - Pull inside flap behind and under seat bottom. Fasten to carpet on back of seat bottom.
- ❑ 3.4 - Tuck outside string between seat bottom and trim, where the back and bottom meet.
- ❑ 3.5 - Pull strings tight.
- ❑ 3.6 - Tie a loop in one string. Run the other string through the loop, pull tight, and tie string back on itself. It is important to pull tight as this is what keeps your cover from shifting.
- ❑ 3.7 - Push top flap between seat back and seat bottom.
- ❑ 3.8 - Run front flap over seat adjustment lever, wires, and brackets.
- ❑ 3.9 - Pull front flap tight and fasten to Velcro on top flap.