It's not rocket science, but following these instructions will make installing your seat covers installing your seat covers a lot easier.

We promise.





Basically, you break it, we buy it.


Seriously.

Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

Register your seat covers at: ttcovers.com/RegisterMyCovers

INSTALLATION GUIDE

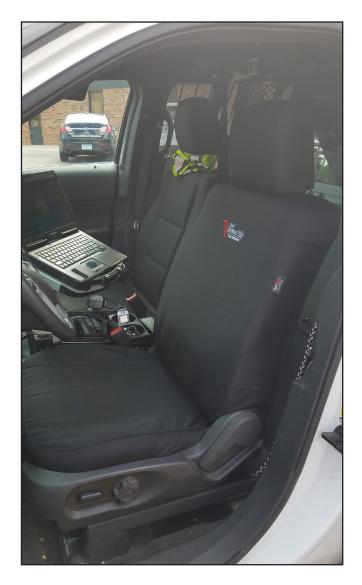

52116 Bucket Set FORD EXPLORER (2006-2010)



BILL OF MATERIALS

ITEM	QUANTITY
Driver Seat Back Cover	1
Driver Seat Bottom Cover	1
Passenger Seat Back Cover	1
Passenger Seat Bottom Cover	1
Headrest Cover	2

Seat Backs & Bottoms have tag signifying Driver or Passenger.

Ensure airbag patch (same side as the TigerTough tag) goes on the outside edge of the seat.

General care instructions:

- 1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
- 2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.
 - Drip dry or machine tumble dry on a no heat cycle.
 - Straps should be coiled and secured with rubber bands for machine washing and drying.
- 3. Soil may be removed with spray cleaner or detergent and water.
- 4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
- 5. Do not use bleach.



1 - Preparation





- □ 1.1 Slide seat forward and raise to highest position, if possible. Remove Headrest
- 1.2 Push button at base of headrest and pull headrest up.
- 1.3 With headrest in the up position, push a paperclip or other small tool into the hole on the trim of the inside headrest base to release the headrest.
- ☐ 1.4 Pull headrest out of seat back.



2 - Install Seat Back Cover









- 2.1 Turn seat back cover 3/4 of the way inside out and pull over seat back.
- 2.2 Work plastic headrest trim through holes in seat cover.
- □ 2.3 Continue pulling the cover down over the seat, unrolling it as you go.
- □ 2.4 Push front flap between seat back and seat bottom.
- □ 2.5 The slit in the flap is to go around a wire running from the seat bottom to the seat back.
- 2.6 Pull front flap tight and fasten to Velcro on seat back.

3 - Install Seat Bottom Cover









- 3.1 Put cover over seat bottom.
- 3.2 Tuck cover behind plastic trim around seat bottom.
- 3.3 Tuck outside string between seat bottom and trim, where the back and bottom meet. Inside string will go under seat bottom, in front of rear seat mount.
- 3.4 Ensure both strings are in front of rear seat mounts when pulled under the seat.
- 3.5 Pull strings tight under the seat, and secure using the StringLock device (see next page). The tighter, the better. This is what keeps your cover from shifting

For assistance with installation, call us at 507.246.3545

THE STRINGLOCK





Run one string through the channel on the end of the StringLock.



Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.



Run the second string through the StringLock just like the other one.



Pull the loose end of the second string until everthing is tight and lock it into place as well.



3 - Install Seat Bottom Cover (Cont.)

- □ 3.6 Push top flap between seat back and seat bottom.
- □ 3.7 Run front flap over seat adjustment lever, wires, and brackets.
- □ 3.8 Pull front flap tight and fasten to Velcro on top flap.

4 - Install Headrest Cover





- 4.1 Push headrest back in seat.
- □ 4.2 Pull cover over head rest with "loop" Velcro in front and "hook" Velcro in rear.
- □ 4.3 Pull front flap tight under headrest, tuck inside rear of headrest and fasten to Velcro.



