It's not rocket science, but following these instructions will make installing your seat covers a lot easier.

We promise.

PART: I E82243

PRODUCT: VOLVO EXCAVATOR SEAT COVER

PIECES: (1) SEAT BACK COVER

(1) SEAT BOTTOM COVER(1) HEADREST COVER(1) STRINGLOCK

LIFETIME WARRANTY

Basically, you break it, we buy it.

Seriously.

Your new seat covers are covered by an unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're suppose, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

This warranty only applies to the original purchaser.

General care instructions:

- 1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
- 2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
- 3. Soil may be removed with spray cleaner or detergent and water.
- 4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
- 5. Do not use bleach.

Install Seat Cover

Pull headrest cover on with tab towards the front.

Secure the tab underneath the headrest to the patch sewn inside the back of th headrest.





Work the tab around the metal of the armrest mount.

Un-fasten all patches on the seat back cover.

Pull over headrest.

Make sure the tabs at the bottom are facing the front.






Fasten tightly to the patch at the back.





Push the tabs on the front side of the seat in between the seat back and bottom.

Pull tight and secure patches at the back.

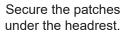





Place the seat bottom cover over the seat bottom. Make sure the yellow adjustment tabs come through their slots.

Install Seat Cover

Push the flap in between the seat back and bottom.



Pull tight and secure to the patch at the back.



Secure the strings with the StringLock (see next page)



Tuck the sides of the cover between the plastic trim on the side of the seat.



THE STRINGLOCK





Run one string through the channel on the end of the StringLock.



Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.



Run the second string through the StringLock just like the other one.



Pull the loose end of the second string until everthing is tight and lock it into place as well.

