



Hey there!

It's not rocket science, but following the instructions will make installing your seat covers a lot easier. We promise.

If you have any questions, comments, or issues, we're here to help! You can reach us at 507.246.3545 (call or text) or email orders@tigertough.com.

PART NUMBER

S0322000

PRODUCT TYPE

SINGLE SEAT COVER

PIECES

(1) SEAT BACK

(1) SEAT BOTTOM

(1) STRINGLOCK

(2) ARMRESTS



*Basically, you break it, we buy it.
Seriously.*

Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.





1 - Preparation



Seat bottom release tab on front of seat.
Two per seat bottom.



- ❑ 1.1 - Raise seat to the highest position and slide forward.
- ❑ 1.2 - Remove seat bottom.
 - ❑ 1.2.1 - Using a small pick, release the driver's side of the seat bottom by inserting a small pick near the front of the seat and pushing up to release the retaining clip. Pull the seat bottom forward.
 - ❑ 1.2.2 - Repeat on the passenger's side of the seat bottom.
 - ❑ 1.2.3 - Note - If you are doing this alone, you will need to use a small flat screwdriver to keep the seat adjustment lever from latching. When the seat is slid forward, push the screwdriver in to the last hole of the adjustment mechanism, above the latch peg.
- ❑ 1.3 - Slide the seat bottom forward and lift off the frame.

2 - Install Seat Bottom Cover

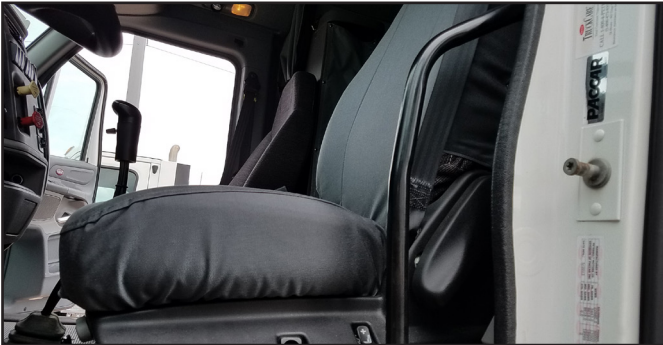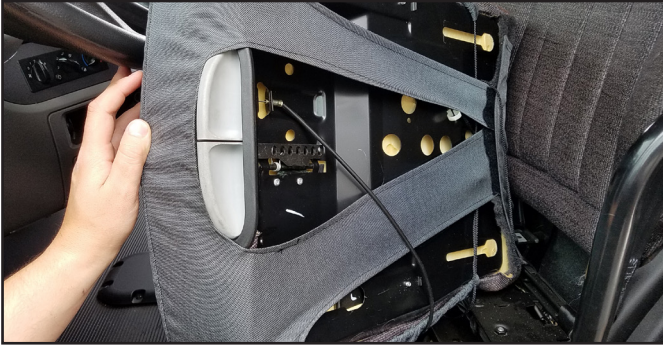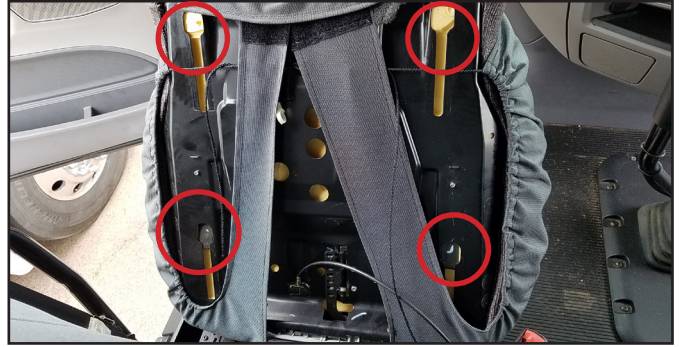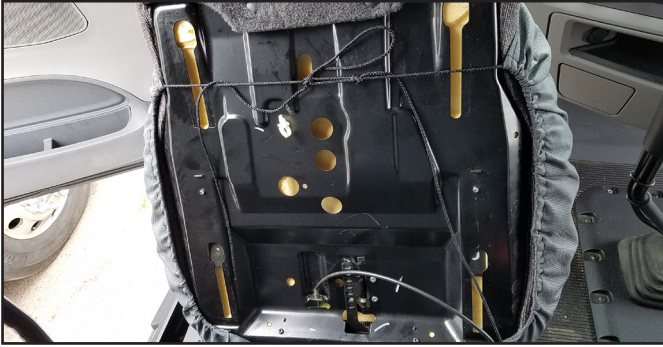

- ❑ 2.1 - Place cover over seat bottom, making sure buttons on front of seat line up with the cutout in the front of the cover.
- ❑ 2.2 - Pull strings tight, and secure using the StringLock device (see next page). The tighter, the better. This is what keeps your cover from shifting.
- ❑ 2.3 - Pull fabric straps from front of seat across seat bottom. Pull front and rear straps as tight as possible and fasten Velcro together. When running straps across seat bottom, ensure that the four mounting holes (circled in red above) are not covered by the straps.
- ❑ 2.4 - Put the seat bottom back on the frame, lining the four mounting holes up with the plastic tabs on the seat frame.
- ❑ 2.5 - Press down on the seat bottom and slide back while pulling up on the seat adjustment lever. This will mount the seat back on the frame.
- ❑ 2.6 - Press the bottom of the seat cover behind the plastic trim of the seat. You may use a flat screwdriver to do this without damaging the cover.

THE STRINGLOCK

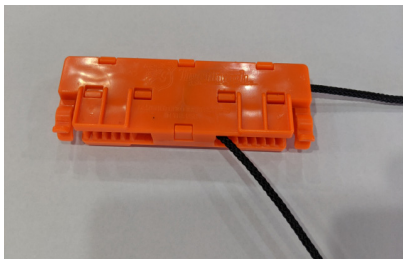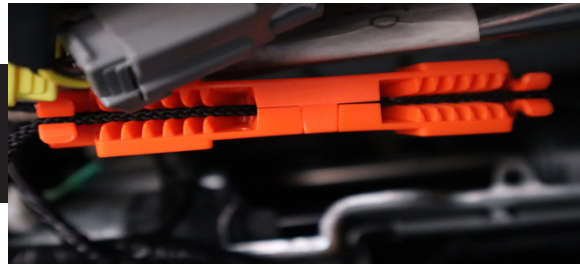


①

Run one string through the channel on the end of the StringLock.




②

Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.

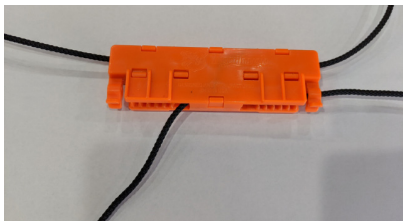

③

Run the second string through the StringLock just like the other one.

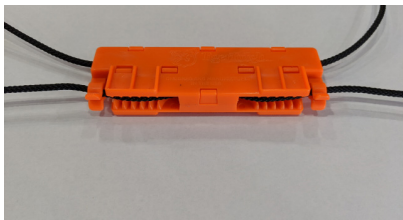

④

Pull the loose end of the second string until everything is tight and lock it into place as well.

3 - Install Seat Back Cover



- 3.1 - Remove two “Christmas Tree” fasteners holding fabric flap to seat frame. Pull out of flap and stick back into seat frame for safekeeping.
- 3.2 - Fold cover 3/4 of the way inside out and pull down tight against the headrest. The TigerTough tag should be on the side toward the door.
- 3.3 - Pull the cover down over the seat back, unrolling it as you go. The seams in the cover should be lined up with the seams on the seat.
- 3.4 - Tuck the seat back flap up into the seat cover.
- 3.5 - Push fabric flap from front of seat between the seat back and bottom.
- 3.6 - Pull the front flap as tight as possible and fasten to Velcro on back of cover.



TigerTough.