

Fig. D.

Fig. F.

1. Unpack the unit

Remove unit from box. Check for any signs of concealed damage. Be sure all optional brackets have been included. Contact Wine Guardian immediately if components are missing or unit has been damaged in shipping.






Fig. D

Fig. F

Fig. J

Fig. A Fig. B



B. Cut opening in wall or provide suffi-

cient opening within racking system to

Remove the humidifier front cover plate

by removing two screws located at the

base of the cover plate and sliding the

at the top of the unit. (Fig. C)

D. Secure the through wall bracket to the

perimeter of the opening at the pre-

drilled locations on the adapter using

the screws supplied with the kit. (Fig.

E. Attach 1/4" (0.6cm) water line at top of

cover up and off of the two plastic tabs

accommodate the humidifier. (Fig. B)







Fig. B






C. Attach bracket to wall using screws provided within humidifier. Note: Wall anchors may be required depending on wall construction and stud placement. (Fig. B)






- Attach 1/2" (1.3cm) drain line at bottom of humidifier. Note: Water supply line and drain line should be routed at the back side of the unit between the mounting bracket and humidifier chassis. Attach to humidifier prior to step Step G below.
- Slide the humidifier through the bracket and attach at the side mounting locations. (Fig. G,H)
- H. Re-install the humidifier front cover plate by sliding the cover over the two top plastic tabs and securing at the bottom of the humidifier with two screws. (Fig. I, J)
- Guardian unit as shown at main control panel. (Fig. K)



- Turn the Wine Guardian ON/OFF switch to the OFF position. (Fig. A)
- Remove side access cover at the evaporator section of unit (section wine room). (Fig. B)










Fig. E.




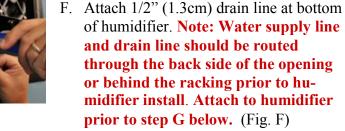


humidifier. (Fig. E)


D)







- Re-install the humidifier front cover plate by sliding the cover over the two top plastic tabs and securing at the bottom of the humidifier with two screws. (Fig. I, J)
- Plug in power/control wire to Wine Guardian unit as shown at main control panel. (Fig. K)
- Proceed to Step 6—controller set up.









- F. Attach 1/2" (1.3cm) drain line at bottom of humidifier. (Fig. F)
- G. Plug in power/control wire to Wine Guardian unit as shown at main control panel. (Fig. G)
- H. Proceed to Step 6 Controller Set up.





Fig. K






Fig. E



Fig. F



Fig. I





Fig. H



Fig. J



Fig. K



Fig. G

Fig. C.

cient access for water supply line, drain line, power cord and service. (Fig. A) Place the mounting bracket at the desired location and mark the holes required to mount the bracket to the wall. (Fig. A)

4. Install Freestanding


Humidifier—Surface Mount


the humidifier within the wine cel-


lar ensuring the location has suffi-


A. Determine mounting location for








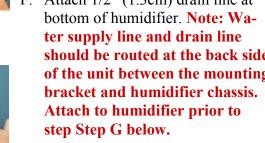










Fig. A




5. Installing Freestanding Humidifier—with power cord and humidistat

- A. Follow Step 3 (TTW or within racking) or Step 4 (surface mount),
- B. Plug power adapter into 120 volt/1 phase/60 hertz receptacle. (Fig. A)
- C. Mount independent humidistat within wine room mid-point on wall or racking in an area that has sufficient access. (Fig. B)
- D. Refer to Humidistat Operations Manual for additional information
- E. Installation is complete.



Fig. A (TTW)



A Locate the Wine Guardian remote interface controller within the wine cellar or proceed to the Wine Guardian Through-the-Wall (TTW) main control panel. (Fig. A & Fig. B)

Press the mode button and hold it

down for five (5) seconds. The screen

will advance to the set up menu and "1 F" or "Setting # 1" will appear on



Fig. B (Ducted)



Fig. E (TTW)




Fig. G (TTW)

SETTING #6



Fig. H (Ducted)


- the screen. (Fig. C & Fig. D) Continue to press the mode button to advance to setup screen "60" or "Setting # 6". (Fig. E & F)
- D Press the up arrow to advance this setting to either "1" for Integrated Humidifier (mounted at Wine Guardian or "2" for Freestanding Humidifier Unit. (Fig. G & H)
- E Controller setup is complete.

Wine Guardian® Humidifier "Quick Start" Installation Guide

This document is a pictorial guide on installing the Wine Guardian humidifier system. It is not intended to replace the detailed instructions found in the WG Humidifier Installation, Operation and Maintenance (IOM) manual, which includes important safety messages all WG installers and owners should carefully follow for safe and optimal performance of the system.

Refer to the IOM manual for installation instructions related to duct collars and duct collar kits, optional remote interface control and remote sensors.



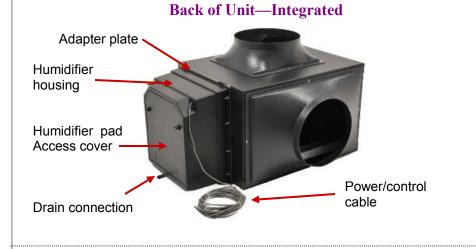



Wine Guardian® Humidifier Integrated and Freestanding



Quick Start Installation Guide

Visit www.wineguardian.com/distributors Or call 800-825-3268 or 315-452-7400

