


JESIMAIK

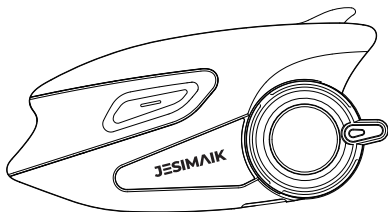

バイク用インカム

Motorcycle Bluetooth Headset

X6S

取扱説明書
User Manual

ENGLISH.....	01~23
日本語.....	24~49

Introduction

Thank you for purchasing the "JESIMAIK Motorcycle Bluetooth Headset X6S".

Please be sure to read this user manual carefully before use to ensure safe and correct operation.

The illustrations and contents of this manual may differ from those of the actual product due to specification changes or other reasons.

CONTENTS

Main Features	01
Safety Use	02
Product Details	03
Operation List	04
Package Contents	05
Main Unit Charging	06~07
• Charging Method	06
• Power On	07
• Power Off	07
Installation Instructions	08~10
• Bracket Installation	08
• Main Unit Installation	09
• Speakers&Microphone Installation	09~10
Pairing	10~17
• Pairing with Smartphone	10~11
• QIK-MESH Intercom Connection	12~15
• Pairing with Other Companies' Headsets	16
• Pairing with R16 Pro	16~17
Listen-Talk	17~18
Music Sharing	19
Music Sound Effect Switching	20
FM Radio	20
Troubleshooting	21~22
Specifications	22
Warranty	23

Main Features

1 User

Listening to music and making phone calls



2 Users

One-on-one intercom conversation and music sharing



Multiple Users

Group intercom conversation



- Equipped with the "Listen-Talk" function! You can have a conversation while listening to music or navigation audio!
- Riders can communicate together at the same time.
- Ultra-thin 0.27in speakers! No ear pain!
- Pairing is a snap, easy group talk!
- Noise cancellation for a good call quality.
- The waterproof design has been upgraded to IP67 through superior molding technology.
- English voice guidance system provides users with easy-to-understand instructions.


Safety Use

The following symbols are used to ensure safe and effective operation. Make sure that you fully understand the meaning of the symbols before using the product correctly.

Caution

	Do not place the device in an extremely dusty, humid, or hot environment.
	Do not try to disassemble the device.
	Do not drop or knock the device.
	Do not wipe the device with corrosive liquids.
	Please note that the Bluetooth intercom distance will be affected by the surrounding environment.
	To prevent electromagnetic interference/compatibility conflicts, please comply with notices posted in some places asking you to turn off the intercom.
	Do not use the device near medical equipment. The equipment used in hospitals or medical places is particularly sensitive to external radio frequency signals, so please turn off the device.
	Drive safely. Check the laws and regulations for the use of intercoms in the place where you drive and follow them. When using the intercom while driving, please adjust the volume to an appropriate level, concentrate on driving, and pay attention to road conditions.

Product Details

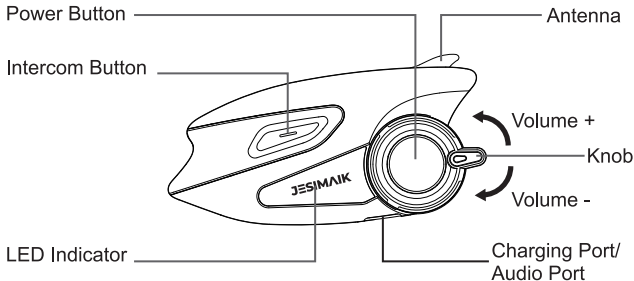

Notes

Before installing the headset, please connect the smartphone and check the audio output.

A slight change in the speakers position will result in a different sound. It is recommended to adjust the speakers position and remember the position where you hear best.

Operation List



Function	Button	Operation
Power On	Power Button	Press and hold for 2s
Power Off	Power Button	Press and hold for 2s
Phone Pairing	Power Button	Press and hold for 4s when power off
Voice Assistant	Power Button	Press twice
Answer/ End Phone Call	Power Button	Press once
Reject Phone Call	Power Button	Press twice
Call Volume Control	Volume +/- Buttons	Turn the knob up/ down once
Phone Reconnect	Power Button	Press once
Call Auto-Answer Mode	Power Button & - Button	Press and turn the knob down simultane- ously for 4s when power off
Clear Pairing	Power Button & + Button	Press and turn the knob up simultane- ously for 4s when power off
Play/Pause Music	Power Button	Press once
Music Volume Control	Volume +/- Buttons	Turn the knob up/ down once
Next/Previous Song	Volume +/- Buttons	Turn the knob up/ down twice
Music Effect Switch	Power Button & - Button	Press and turn the knob down simultane- ously for 4s while playing music

Package Contents

The following is the contents of the product package.
First, please make sure that everything is included in the package before using the product.
If any parts are missing, please contact the retailer from whom you purchased the product.




Main Unit x 1




Boom Microphone x 1



Adhesive Tape for Fixing Speakers x 2




Clip Bracket x 1



Speakers x1



Adhesive Tape for Fixing Boom Microphone x 1




Tape Bracket x 1



Button Microphone x 1



Adhesive Tape for Fixing Button Microphone x 1



Speaker Booster Cushions x 2



Type-C Charging Cord



User Manual

Main Unit Charging


■ Charging Method

Connect the device with the included USB Type-C cable and a commercially available USB power adapter.

LED Indicator

Charging: Red light

Charging complete: Blue light

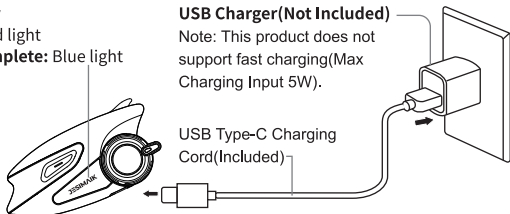

⚠ Caution

⚠	Be sure to charge the device before using it for the first time.
⚠	Try to use the USB Type-C cable that comes with the main unit to ensure the best charging effect.
⚠	When charging, ensure the charging environment is dry and well-ventilated, away from humid and high-temperature environments.
⚠	When charging, keep the main unit away from flammable materials such as paper, cloth, alcohol, etc. to prevent fire.
⚠	After charging is completed, unplug the charger in time to avoid leaving the main unit in a charging state for a long time.


■ Power On

1. Press and hold the power button for 2 seconds to turn the power on.
2. When the power is turned on, the blue light will flash and the speaker will voice prompt power on and battery level.

■ Power Off


1. Press and hold the power button for 2 seconds to turn the power off.
2. When power is turned off, the red light will stay on and the speaker will voice prompt power off

ON: Blue light flashes slowly



Press and hold

OFF: Red light stays on and then turns off




Press and hold

Installation Instructions

■ Clip Bracket Installation


Open the clip and fix it to the edge of the helmet.

Note: The clip bracket is tight, be careful to avoid damage during installation

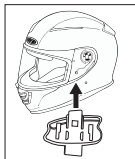

•Adhesive Bracket Installation

1. Select a suitable position on the helmet; wipe, and clean the adhesive area to ensure the surface is clean;
2. Tear off the adhesive protective film of the bracket, stick it on the helmet, and press it to fix.

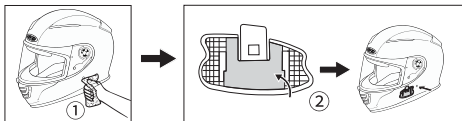


Note:

1. Just use a wet cloth/alcohol cotton pad to wipe the surface of the helmet, avoid using strong acid or strong alkaline cleaners to avoid damaging the bracket adhesive;
2. Place the intercom main unit after 12 hours of pasting to ensure that the adhesive is fully dry, enhancing stability.

■ Main Unit Installation

- ① Push the main unit in from the top of the bracket until it "clicks" into place.
- ② Plug the speaker and microphone jack into the audio port.

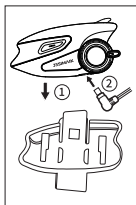

Note

To enhance waterproofing, the main unit is designed to be pushed in in two steps. The speaker and microphone jack must be firmly inserted.


■ Speakers & Microphone Installation

Note

Before installing the headset, please connect your phone to play music and test whether the sound and microphone functions are normal.

•Speakers Installation


1. Remove the helmet liner first.
2. Pass the headset line through the helmet shell from the back or top of the liner, and adjust the line length and position to ensure that it will not fall off during use.
3. Use the matching adhesive patch to install the speaker. The speaker should be installed on both sides of the helmet, close to the ear. Ensure that the installation position is correct and will not affect the comfort and safety of wearing.
4. Reinstall the liner into the helmet and make sure that the liner fits the helmet shell exactly.

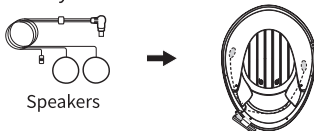

•Microphone Installation


Determine the installation position. The microphone is usually close to the mouth to ensure clear voice transmission.

Boom Microphone: Suitable for half helmets, needs to be installed on the inside of the helmet, and stuck; the white mark needs to face the mouth.



Please use the boom microphone

Button Microphone: Suitable for full helmets, needs to be installed on the inside of the helmet, pass the microphone cable through the inside of the helmet, and stick it.

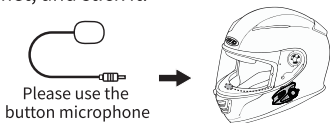


Please use the button microphone

Pairing

■Pairing with Smartphone

- ① In the power-off state, press and hold the power button for 4 s.
- ② When the LED blinks blue/red alternately and the speakers will prompt such as "power on", "battery xx percent" and "intercom pairing", the device is in pairing mode.
- ③ Turn on the Bluetooth of your smartphone and select "JESIMAIK X6S" displayed in the device list.
- ④ When pairing is completed, the speakers will prompt "device connected" and the LED indicator will turn on blue.

Flashing red&blue alternately

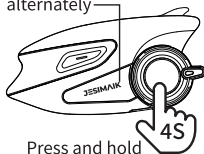

Press and hold




•Connect with Phone Already Paired.

If the smartphone is already paired before, turn on the phone, check the Bluetooth verification section of the phone and select "JESIMAIK X6S".

Make/Answer a call


Start a call:

Press the power button once




End a call:

Press the power button once



Reject a call:

Press the power button twice



•Play Music from Your Smartphone

Listen to music


Play/Pause music:

press the power button



Adjust music volume:

turn the knob up/down once




Next song:

turn the knob up twice




Previous song:

turn the knob down twice



Voice Assistant Function

If pairing with your smartphone has been completed, press the power button twice. (Siri/Google Assistant is activated)



■ QIK-MESH Intercom Connection

QIK-MESH Channel Selection

Note: Before intercom, the devices antenna needs to be turned on. Channel selection needs to be operated when the intercom mode is turned off.

1. Press and hold the knob down and click the intercom button at the same time, the channel position will increase by single digits: channel 0, channel 1, channel 2, channel 3, channel 4, channel 5, channel 6, channel 7, channel 8..., and so on.




2. Press and hold the knob up and click the intercom button at the same time, the current channel position will increase by tens digits: channel 0, channel 10, channel 20, channel 30, channel 40, channel 50, and the "two-person intercom mode" cycle.

Note: All headsets need to be on the same channel, there are 60 channels in total, 0-59.

Note: When intercom mode is turned off, press the intercom button and turn the knob up(or down) for 5 seconds to restore to the default "Channel 0".

Tone: 4 times of "beep".

Lights: Green light stays on.

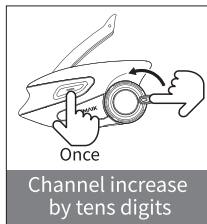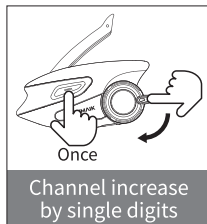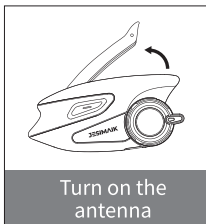

QIK-MESH Network Activation

Take 4 devices, set to channel 1 as an example:

1. Set the channel of all 4 devices to "Channel 1".
2. Press and hold the intercom button on the four X6S devices for 3 seconds to enter the intercom mode.
3. Press and hold the knob down while pressing the intercom button for 3 seconds of any of the 4 devices, acting as the leader to activate the QIK-MESH network intercom, the speaker will prompt "NO1 MESH active", and the green light will flash slowly.
4. The 4 devices set to the same channel will automatically connect and enter the QIK-MESH intercom.
5. If a new device is added, set it to channel 1, press and hold the intercom button for 3 seconds to enter the intercom mode, and it will automatically enter the QIK-MESH group intercom.

①

1st unit

Once Long press



Flashing blue
Channel 1

2nd unit

Once Long press



Flashing blue
Channel 1

3rd unit

Once Long press



Flashing blue
Channel 1

4th unit

Once Long press



Flashing blue
Channel 1

Select the same channel

②

1st unit

3S Long press



Green light
flashes quickly

2nd unit

3S Long press



Green light
flashes quickly

3rd unit

3S Long press



Green light
flashes quickly

4th unit

3S Long press



Green light
flashes quickly

Enter the intercom mode

3

Long press



Green light flashes slowly

Operate any of the 4 devices. All devices set to the same channel will automatically connect and enter the QIK-MESH intercom.

Note: The device selected for operation is device NO.1.


4

1st unit



Green light flashes slowly

2nd unit



Green light flashes slowly

3rd unit



Green light flashes slowly

4th unit




Green light flashes slowly

QIK-MESH network activated

Link Status & Location Query

After activating the QIK-MESH group network, press the intercom button once to query the number of devices connected and their location.

For example, if No.2 presses the intercom button once, the speaker will prompt "Four riders, No.2".



Press once

Exit QIK-MESH Intercom Mode

Press and hold the intercom button for 3 seconds, the speaker will prompt "intercom off" and the blue light flashes slowly, and the device will exit.



Long Press

For example, if No.2 presses and holds the intercom button for 3 seconds and exits, No.1 will automatically connect to other devices. The next time No.2 enters the group intercom mode, it will automatically connect to the QIK-MESH network and fill in the end position.

Note: After restarting the devices without changing channels, set all devices to the intercom mode, press the volume knob down and hold the intercom button simultaneously for 3 seconds of any device all X6S will connect automatically.

Intercom Volume Adjustment

Volume up: press and hold the knob up

Volume down: press and hold the knob down

Note: During volume adjustment, there will be a beep when the minimum or maximum volume is reached.

Role of No. 1 leader device:

①When No. 1 is active: the other devices can connect in and out at any time and connect automatically.

②When No. 1 turns off the intercom mode: No. 2 will automatically take over the leader role and become No. 1, and the other devices will automatically change their position numbers in sequence, and can connect in and out at any time and connect automatically.

③When No. 1 turns off: No. 2 will automatically take over the leader role and become No. 1, and the other devices will automatically change their position numbers in sequence, and can connect in and out at any time and connect automatically.

④When No. 1 exceeds the distance and drops offline: the other devices can continue to talk, but the QIK-MESH network is paralyzed. In this case, the position number cannot be recognized, and the disconnected devices cannot be automatically reconnected; when No. 1 returns to the effective distance and reconnects, it will automatically take over the leader position, and the QIK-MESH network returns to normal.

Note: No. 1 and No. 2 cannot exit at the same time or you will need to redo the QIK-MESH intercom steps.

■ Pairing with Other Companies' Headsets

1. Press and hold the power button for 2 seconds to turn on the power.



2. Long press and hold the intercom button for 6 seconds until the green light flashes alternately to enter the pairing state, the speaker will prompt "intercom on", "two-player mode", "Intercom pairing".



3. Press and hold the intercom button while turning the knob down for 3 seconds to search, the speaker will prompt "searching", and then connect to the device from another company.



Press at the same time

■ Pairing with R16 Pro

1. Turning the R16 Pro on, press and hold the intercom button for 3 seconds to enter the intercom mode.

2. Turning the X6S on, switch the channel to "two-person intercom mode" first, and then press the intercom button for 6 seconds to the intercom pairing mode (voice prompts: "intercom on" → "two-player mode" → "intercom pairing").

3. For X6S, press the intercom button and turn the knob down simultaneously for 3 seconds, voice prompts: "searching", you can search and establish intercom with the nearby headset.

4. Click the intercom button can hang up and reconnect intercom.
Note: If X6S and R16 Pro have been paired before, when rebooting, X6S needs to press the intercom button for 3s to enter the intercom mode. (voice prompt: "intercom on" → "two-player mode", then you only need to click the intercom button again to connect R16 Pro).

End the Intercom

Press the intercom button once to end the intercom talk

Reconnect the Intercom

Press the intercom button once again to re-activate the intercom talk

Note:

- You can only pair with one headset of another brand at a time. If the devices have been paired before, let both devices enter intercom mode first, then click one of the intercom buttons.
- Some models of other brands may be paired in a different way, please consult your dealer or support@jesimaik.com for details.

Listen-Talk



The X6S's "Listen-Talk" feature allows you have an intercom conversation with others while listening to music or navigation audio.

Even if you are disconnected due to distance while driving, you can connect automatically when you return to a distance where communication is considered to be good. (within a short period of time)

- 1.If you start an intercom conversation with audio playing on a device such as a smartphone, you will be in the "call&listen" state.
- 2.In the "call&listen" state, when you answer the cell phone call, other devices can still keep intercom conversation normally.
- 3.Your microphone will be turned off, but you can answer an incoming call while listening to an intercom conversation.
- 4.Cell phone calls will not be routed through the intercom and you will automatically return to the intercom conversation when the phone call ends.


How to start "Listen-Talk".

1.X6S Operation




Connecting a smartphone

2.Smartphone Operation



Playing music and navigation audio

3.X6S Operation

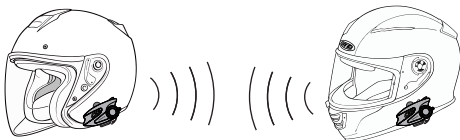


Start intercom conversation

4.X6S State

The system will enter "Listen-Talk" state, which allows the user to have an intercom conversation while listening to music or navigation audio.

Rider A

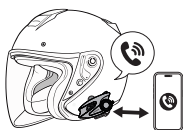

Rider A's smartphone voice
(Only Rider A can hear)

Intercom Talk

Rider B



Rider B's smartphone voice
(Only Rider B can hear)

Music Sharing

The "Music Sharing" function allows you to listen to music that others are listening to.

How to operate:

- ① Turn on the power, connect your cell phone to play music first.
- ② Press and hold the power button and turn the knob up simultaneously for 4 seconds.

Note: Two devices need to be operated simultaneously.

- ③ When the LED lights flash red&blue alternately, the two devices are automatically connected.

- ④ When pairing is complete, the LED light will flash blue and music will be shared with the device on which music is not being played.

Music sharing start/end:

Press and hold the power button and turn the knob up simultaneously once

Note: Only for previously paired devices.

Music Sharing Operation

1.X6S Operation



Connect to smartphone

2.Smartphone Operation



Play music


3.X6S Operation

1st Unit



Press and turn up at the same time

2nd Unit

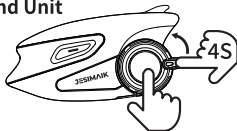


Press and turn up at the same time

Music Sound Effect Switching

When the music is playing, you can switch 4 kinds of sound effects, which are default, bass, rock and pop.

Operation: Press the power button and turn the knob down for 4 seconds.


There will be a crackling sound when switching, if the music is too loud, it may override the tone.



FM Radio

Turn the FM Radio On and Off

Press and hold the power button while turning the knob down once to turn the FM radio on/off.



Search for receivable FM channels

- Next channel: Turn the knob down 2 times continuously
- Previous channel: Turn the knob up 2 times continuously

FM Radio Volume Adjustment

Volume up: Turn the knob up once

Volume down: Turn the knob down once

Troubleshooting

If your problem cannot be solved by the following methods, please contact us via our support email address: support@jesimaik.com

Problems	Solutions
No sound can be heard	1. Check whether the headset interface is plugged in correctly and tightly. 2. Adjust the volume appropriately.
Unable to charge	1. Check whether the charging interface is plugged in correctly. 2. Check whether the interface is damaged. 3. It is recommended to charge with the matching charging cable.
Unable to turn on	1. Charge the device. It may be out of power. 2. Check whether the device has been exposed to rain or water. It may be caused by internal water ingress. Wait until the inside of the device is dry and try again.
No sound can be heard after pairing	1. Check whether the headset cable is connected correctly. 2. Check whether the pairing operation method is correct. 3. Try to reset the intercom, delete the device connection on the phone, and try pairing again.
Unable to pair with intercoms from other companies	It is recommended that you contact the store where you purchased the product to obtain detailed information about the pairing function since the connection methods of intercoms produced by other companies may be different.

Short intercom distance	1. Check whether the pairing method is correct, try to reset it and pair it again. 2. It is recommended to use it in an open suburb with less interference because of environmental influences, such as building obstruction, electromagnetic interference, etc.
-------------------------	---

Specifications

※Specifications are subject to change without notice.

Model No.	X6S
Bluetooth Protocols Supported	A2DP、AVRCP、HFP、HSP、SSP、DID、HID、
Noise Cancellation	DSP&CVC&ENC
Waterproof Rating	IP67
Dimensions	3.74*1.97*0.98in
Weight	2.05oz
Charging Connector	USB Type-C
Group Talk	Support
Long Distance Communication	Support
FM Radio	Support
Voice Assistant	Support
Phone/Navigation	Support
Music & Talk	Support
Music Sharing	Support
Volume Control	Support
Universal Connection (connection and communication with intercom headsets from other manufacturers)	Support

Warranty

- The warranty period for this product is one year from the date of purchase.
- The specifications of this product are subject to change without notice.
- This product may be discontinued due to the discontinuation of production of the components used.
- Before contacting us, please check the following to ensure we can respond to your question as soon as possible.
 - ① Product name
 - ② Order number
 - ③ Serial number on the label on the back of the device.
 - ④ Please describe the problem in as much detail as possible. If you are contacting us by e-mail, we would appreciate it if you could attach a photo or video of the fault.
- If you have any questions or concerns, please contact the dealer from whom you purchased the product or the contacts listed below.

Email Address



support@jesimaik.com

Official Site



www.us.jesimaik.com

Note: Response within 24 hours on business days.

はじめに

このたびは「JESIMAIKバイク用インカム X6S」をお買い上げいただき誠にありがとうございます。安全に正しくお使いいただくために、ご使用前にこの取扱説明書を必ずお読みください。この取扱説明書は、仕様変更等によりイラスト、内容が一部実機と異なる場合があります。取扱説明書は保証書も兼ねておりますので、大切に保管してください。


目次

製品特徴	25~26
安全上のご注意	26
各部の名称	27
操作一覧表	28
各パーツの名称	29
本体の充電	30~31
•充電のしかた	30
•電源のON/OFF	31
ヘルメットへの取り付け	31~33
•クリップタイプ取付マウントの装着	31
•粘着式タイプ取付マウントの装着	31
•本体の取付	32
•スピーカーとマイクの取付	32
•マイクの取付	33
ペアリング	34~40
•スマートフォンとのペアリング	34~35
•ツアーメイト同士とのペアリング	36~39
•他社のインカムとのペアリング	39~40
聴きトーク	41~42
音楽共有機能	42~43
音楽効果	43
FMラジオを聞く	44
こんなときは	45~46
商品仕様	47
保証期間およびお問い合わせ	48
保証書	49

製品特徴

音楽やナビ音声をステレオで聴きながら、クリアな会話を楽しめる!

「聴きトーク」機能搭載!

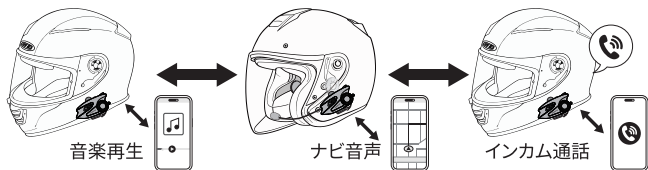

ワンタッチで簡単に全台グループ接続


「QIK-MESH」通話機能搭載

インカム同士集合して、わずか数十秒でグループ通話が始められる!

離れても自動で再接続し、通話再開も一発簡単です。



三つのボタンで簡単操作可能

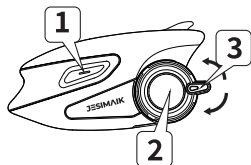

・「聴きトーク」機能! Bluetoothチップ2枚を搭載、音楽やナビ音声をステレオで聴きながら、インカム通話ができる!

・「QIK-MESH」通話機能搭載! グループの1人が操作するだけで、グループトーク開始できます、距離が離れて通信が切れても、近くの「QIK-MESH」仲間を自動で探す。

- ・厚さわずか7mmの超薄型スピーカー採用!長時間装着しても耳が痛くない。
- ・良質な通話品質をお楽しみ頂けるノイズブロックとノイズキャンセル。
- ・卓越された成型技術によって、防水設計をIP67相当までアップ。
- ・音声認識機能で色んな操作を便利に使える。
- ・安心の日本語音声案内で、ユーザーをわかりやすくご案内可能。


安全上のご注意

安全かつ効果的な取り扱いが行えるように、次の見出しを使用しています。
見出しの意味を十分にご理解の上、正しくお使いください。

⚠ 注意

!	極端に高温多湿の場所や、埃っぽい場所に本製品の放置は避けてください。
!	分解禁止・本製品の分解・改造・修理を自分でしないでください。火災・感電・故障の恐れがあります。
!	本製品を叩いたり、落したり、外力を加えたりしないでください
!	腐食性のある液体で本製品を拭かないでください。
!	Bluetoothの通信距離は周囲の環境によって通信距離や通信速度が異なります。
!	電磁干渉/互換性の問題を防ぐために、特定の場所に設置されている通知に従って影響を与えない場所でご利用ください。
!	医療機関、特に病院内では、電源を必ず切ってください。病院や医療機関で使用する機器は、外部からの無線周波数信号の影響を受ける可能性があり、悪影響が出る恐れがあります。
!	安全運転を心掛けて下さい。運転している各地方自治体の条例、各都道府県の道路交通法の法律や規則を確認し、それに従って行動してください。 運転中に本製品を使用する場合は、周囲の状況に十分に注意を払い、音量を適切に調整して運転に集中してください。
!	雷鳴が聞こえたり、雷雲が近づく様子がある時は、直ちに使用を中止し安全な場所に避難して下さい。

各部の名称

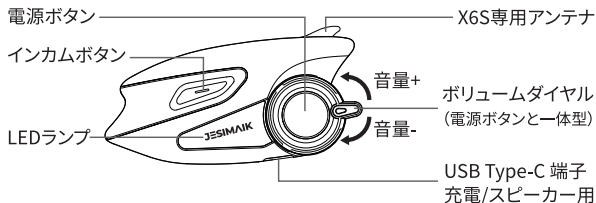

※注意

スピーカーの位置が少し変わるだけで、聞こえ方が異なります。

インカム取付前にスマートフォンを接続し音声出力の確認を行ってください。

スピーカーの位置を調整し、一番聞こえやすい位置を覚えておく事をお勧めします。

操作一覧表

機能	ボタン	操作方法
電源オン／オフ	電源ボタン	オン2秒間長押し/ オフ2秒間長押し
音楽再生／停止	電源ボタン	1回押す
通話開始／終了	電源ボタン	1回押す
着信拒否	電源ボタン	2回押す
通話音量調整	ボリュームダイヤル	上/下に一回まわす
インカム音量調整	ボリュームダイヤル	上/下に長押し
次の曲	ボリュームダイヤル	上に二回まわす
前の曲	ボリュームダイヤル	下に二回まわす
FMラジオオン/オフ	電源ボタンとボリューム ダイヤル音量- (電源オン状態)	電源ボタンを押し た状態でボリューム ダイヤルを下に1 回まわす
リセット	電源ボタンとボリューム ダイヤル音量+ (電源オフ状態)	電源ボタンを押し た状態でボリューム ダイヤルを上にな 4秒間回す
通話自動接続モー ドオン/オフ	電源ボタンとボリューム ダイヤル 音量- (電源オフ状態)	電源ボタンを押し た状態でボリューム ダイヤルを下にな 4秒間回す
音声認識起動	電源ボタン	2回押す

各パーツの名称

以下が商品パッケージ構成内容となります。

最初に、全て揃っているかご確認の上ご使用ください。

万が一不足部品がございましたら、お買い求めの販売店までご連絡ください。




本体×1




ジェットヘルメット用マイク×1



スピーカー固定用
粘着テープ×2




クリップタイプ取付マウント×1




フルフェイス用マイク×1



ジェットヘルメット用マイク
固定用粘着テープ×1




粘着タイプ取付マウント×1



スピーカー×1



フルフェイス用マイク
固定用粘着テープ×1



スピーカー固定用調整パッド



充電用 USB Type-C
ケーブル×1




取扱説明書×1

本体の充電

■充電のしかた


充電方法: 付属のUSB Type-Cケーブルと市販のUSB電源アダプタを本体に接続して充電します。

充電中: 赤色点灯
充電完了: 青色点灯

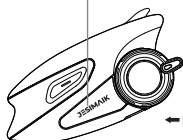

PSEマーク付きの市販
USBチャージャー
ご注意: 当製品は急速充電
出来ません。(最大5Wまで)。

付属品
USB Type-C ケーブル

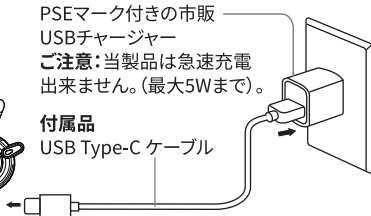

⚠ 注意

⚠	初めて使用する前に、必ず製品を充電してください。
⚠	最高の充電効果を確保するために、できるだけ本体付属のUSB Type-Cケーブルを使用してください。
⚠	充電が完了したら、充電器を引き抜いて、充電状態で長時間放置しないようにしてください。
⚠	充電するときは、充電環境が乾燥し、風通しが良く、湿気や高温の環境から離れていることを確認してください。
⚠	充電するときは、火災を防ぐために、紙、布、アルコールなどのような燃えやすいものから本体を遠ざける必要があります。

■電源のON/OFF

- ・電源ボタンを長押しすると、電源をオン・オフします。
- ・電源を入れると青ライトが点滅し、スピーカーから電源オンと電池残量のガイダンスが流れます。
- ・電源を切ると赤ライトが点灯し、スピーカーから電源オフのガイダンスが流れます。




ヘルメットへの取り付け

■クリップタイプ取付マウントの装着

クリップを開いて、ヘルメットのシェルと内装の間に固定します。


注意：クリップ式マウントは非常にきついため、取り付ける際は損傷を避けるように注意してください。

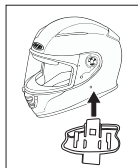

■粘着式タイプ取付マウントの装着

・粘着式マウントの取り付け方法

- 1.ヘルメット上で適切な位置を選び、粘着部分を拭き取って清掃し、表面がきれいであることを確認します。
- 2.マウントのステッカーを剥がします。マウントを貼り付け、しっかりと押し付けます。

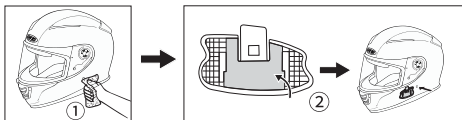


ご注意:

ヘルメットの表面は湿らせた柔らかい布やアルコールパッドで拭き取ってください。強酸性・強アルカリ性の洗浄剤は使用しないでください。粘着フィルムが損傷する恐れがあります。マウントを貼り付けた後、12時間は負荷を掛けないでください。接着が完全に乾燥したら、安定性が向上します。

■本体の取付

- ①マウントの上から本体を「カチッ」と音が鳴るまで押し込みます。
- ②スピーカー&マイクジャックをイヤホンポートに差し込みます。

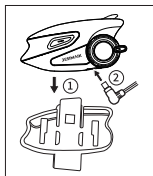

注意:

防水効果を高めるため、二段階の押し込み設計になっております。スピーカー&マイクジャックは、しっかり奥まで差し込んでください。


■スピーカーとマイクの取付

・スピーカーの取付

注意: ヘルメットに取り付ける前に、スマートフォンを接続して音楽を再生し、音声とマイク機能が正常であることを確認してください。

・スピーカーの取り付け方法


1. まずはヘルメットから内装を取り外します。
2. ヘッドセットのケーブルを内装の裏側または上部からヘルメットシェルを通し、ケーブルの長さや位置を調整して、使用中に落ちないようにします。
3. 付属のスピーカー固定用調整パッドを使用してスピーカーを取り付けます。スピーカーはヘルメットの両側、耳の近くに取り付ける必要があります。取り付け位置が正しいことを確認し、装着時の快適さや安全性に影響を与えないようにします。
4. 内装を再びヘルメットに取り付け、内装がヘルメットシェルにぴったりフィットしていることを確認します。

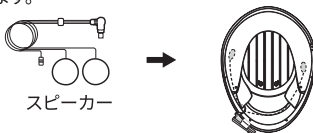


■マイクの取付

- 1.まずはマイクの取り付け位置を決定します。一般的に、マイクは口元の近くに配置され、クリアな音声伝達を確保できます。
- 2.マイクの種類は2種類ありますので、ヘルメットの形状に合わせてマイクをお選びください。

ジェットヘルメット用マイク：ジェットタイプのヘルメットに適しており、ヘルメットの内側に取り付け、粘着固定します。白いマークが口の方向を向くようにしてください。




フルフェイス用マイク：フルフェイスタイプのヘルメットに適しており、ヘルメットの内側に取り付け、マイクのケーブルをヘルメットの内部を通して粘着固定します。



ペアリング

■スマートフォンとのペアリング

- 1.電源オフの状態で電源ボタンを4秒間長押しします。
- 2.LEDが青/赤交互に点滅し、スピーカーから【パワーオンです】、【バッテリーはxxパーセントです】と【ペアリング中です】とガイダンスが流れると、ペアリングモードになります。
- 3.スマートフォンのブルートゥースをONにして、機器一覧に表示された「JESIMAIK X6S」を選択します。
- 4.ペアリングが完了すると、スピーカーから【デバイスを接続しました】とガイダンスが流れ、LEDランプが青色点滅します。

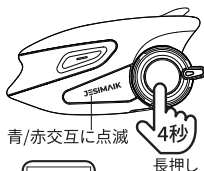

・ペアリング済みの携帯電話と接続する

スマートフォンがペアリング済みの場合、電源オン、携帯電話のBluetooth認証部分をご確認の上、「JESIMAIK X6S」を選択してください。

電話を発信/応答する

通話開始:

電源ボタンを押す



通話終了:

電源ボタンを押す



着信拒否:


電源ボタンを2回押す



・スマートフォンの音楽を再生する

音楽を聴く

音楽再生／停止：電源ボタンを押す

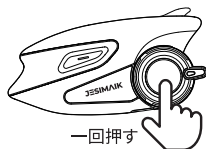

音楽音量調整：

ボリュームダイヤルを上/下に1回回す



次の曲：

ボリュームダイヤルを上/下に2回回す




前の曲：

ボリュームダイヤルを下に2回回す



・音声アシスタント機能

スマートフォンとのペアリング完了している場合、電源ボタンを2回押します。(Siri・Googleアシスタント起動)

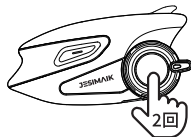

■ ツアーメイト同士とのペアリング

チャンネル選択

1.電源ボタンを2秒長押しして、電源をオンにしアンテナを立てます。



※インカムペアリングモードオフの状態でお願ひします。

2.音量ダウンボリュームダイヤルを押したまま、インカムボタンを1回押す度にチャンネルは1桁ずつ増えます:チャンネル0→チャンネル1→チャンネル2→チャンネル3→チャンネル4→チャンネル5→チャンネル6→チャンネル7→チャンネル8.....チャンネル59

3.音量アップボリュームダイヤルを押したまま、インカムボタンを1回押す度に現在チャンネル数の10桁単位で増えます:チャンネル0→チャンネル10→チャンネル20→チャンネル30→チャンネル40→チャンネル50→そして「2人モード」を循環します。

※インカムのペアリングはすべてのインカムを同じチャンネルに設定してください。チャンネルは合計で60個あります、0から59、そして2人モード。

※音量アップまたはダウンボリュームダイヤルを長押ししたまま、インカムボタンを5秒間長押しするとチャンネル設定がチャンネル0にリセットされます(ヒント音が鳴りランプが緑色に点灯)

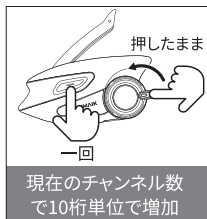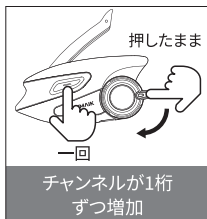

インカムペアリングモード

インカムボタンを3秒間長押しすると、緑のランプが点滅し、スピーカーから【インカム通話起動、チャンネル「X」】とガイダンスが流れます。

ご注意-20分以内にインカム接続しない場合、自動的に終了されます。



例1:4台のX6Sインカム「チャンネル1」に設定する場合

- 1.まずは4台X6Sインカムのチャンネルを「チャンネル1」に設定します。
- 2.4台X6Sインカムのインカボタンを3秒間長押しすると、緑のランプが点滅し、スピーカーから【インカム通話起動、チャンネル「X」】とガイダンスが流れます。
- 3.そのうちの1台をリーダーインカムとしてネットワークを有効にします。リーダーインカムの音量ダウンを押したまま、インカムボタンを3秒間長押しします。音声ガイダンスが「一番目MESH接続起動インカムが接続しました」とアナウンスされ、青と緑ランプが交互して点滅します。
- 3.同じ「チャンネル1」に設定した4台のインカムが自動的にQIK-MESHネットワークに接続されます。
- 4.新たなX6Sインカムを追加で接続したい場合、インカムチャンネルを「チャンネル1」に設定し、インカムペアリングモードを3秒間長押ししてオンにすると、自動的にQIK-MESHネットワークに接続されます。
- 5.X6Sインカムボタンを長押しすることでインカム通話の終了、再起動が可能です。

ペアリング例

①

1台目

一回押す 音量ダウンを
押したまま



青色点滅
チャンネル1

2台目

一回押す 音量ダウンを
押したまま



青色点滅
チャンネル1

3台目

一回押す インカムボタ
ンを長押し



青色点滅
チャンネル1

4台目

一回押す インカムボタ
ンを長押し



青色点滅
チャンネル1

同じチャンネルに設定

②

1台目



3秒間長押し

2台目



3秒間長押し

3台目



3秒間長押し

4台目



3秒間長押し

インカム通話起動、チャンネル「X」

③



リーダーインカムの音量ダウンを押したまま、インカムボタンを3秒間長押しして、同じチャンネルのインカムが自動的にQIK-MESHネットワークに接続されます。

※4台のうちペアリング操作をするインカムが1号になりリーダーインカムになります。

④

1台目



青/緑交互点滅

2台目



青/緑交互点滅

3台目



青/緑交互点滅

4台目



青/緑交互点滅

QIK-MESHネットワークに接続完了

リンク状態と現在位置の確認

QIK-MESHネットワークを接続した後、インカムボタンを押すことで、接続されている人数とその位置を確認できます。例えば、2号インカムのインカムボタンを押すと、音声ガイダンスが「4ライダー 2号」とアナウンスします。



インカム通話モード終了

インカム通話モード終了するには、インカムボタンを3秒間長押しします。音声ガイダンスが「インカム通話終了」とアナウンスされると、インカム通話モードが終了します。例えば、2号インカムがインカム通話モードを終了すると、1号インカムは自動的に3、4号インカムと接続されます。次回2号インカムがインカム通話モードを再開すると、自動的に末尾に追加されます。

※チャンネル変更なしの場合、インカムを再起動後に全てのインカムをインカムペアリングモードに設定し、1台インカムの音量ダウンを押したまま、インカムボタンを3秒間長押しすることで、全体インカムが自動的に接続されます。



リーダーインカムの役割

1. 1号リーダーインカムがオンラインの場合: 他のインカムがいつでも接続・切断が可能、接続も自動的に行われます。
 2. 1号インカム接続モードを終了した場合: 2号のインカムが自動的にリーダーの役割を引き継ぎ、1号インカムになります。他のインカムが自動的に位置番号を変更し、随時接続・切断が可能、接続も自動的に行われます。1号のインカムが再接続すると最後の位置に補充されます。
 3. 1号インカムが電源をオフした場合: 2号のインカムが自動的にリーダーの役割を引き継ぎ、1号インカムになります。他のインカムが自動的に位置番号を変更し、随時接続・切断が可能、接続も自動的に行われます。1号のインカムが再接続すると最後の位置に補充されます。
 4. 1号インカムが距離を超えてオフラインになった場合: 他のインカムが引き続き通話ではありますが、QIK-MESHネットワークがシャットダウンされます。この場合、位置番号が認識されず、切断されたインカムが自動的に再接続も出来ません。1号インカムが再び有効な距離内に戻り再接続すると、自動的にリーダーの役割を引き継ぎ、QIK-MESHネットワークが正常に戻ります。
- ※1号、2号インカムが同時にインカム接続モードを終了または電源をオフした場合、QIK-MESHネットワークが自動的にシャットダウンされ、新たにペアリング操作をする必要があります。

インカム音量の調整

音量UP: ボリュームダイヤルを上長押し


音量DOWN: ボリュームダイヤルを下長押し

※音量調節時に最小最大音量に達するとヒント音が鳴ります。

■他社のインカムとのペアリング

1. 電源ボタン二秒長押しして電源オンになります。
 2. まずはチャンネルを「2人モード」に切り替えます、そしてインカムボタンを6秒間長押しして、インカムペアリングモードに入ります（音声ガイダンス:「インカム通話起動」→「2人モード」→「インカムペアリング」）。
- ※チャンネル「2人モード」の設定はP36ページのチャンネル選択をご参考ください。
3. その後、インカムの音量ダウンを押したままインカムボタンを3秒間長押しして、「搜索中」の音声ガイダンスが流れ、他のデバイスを探して接続を行います。

4. インカムボタン一回押すことでインカム通話の接続、切断が可能です。

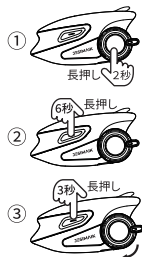

ペアリング例

「例1」当製品 (X6S) と他製品 (B+COM SB6XR) のペアリング方法

- 1.B+COM SB6XRの電源をオンにして、B2ボタンを押すとペアリング状態になります。(赤点滅)
- 2.X6Sの電源をオンにして、チャンネルを「2人モード」に切り替えます、そしてインカムボタンを6秒間長押しして、インカムペアリングモードに入ります(音声ガイダンス:「インカム通話起動」→「2人モード」→「インカムペアリング」)。
- 3.その後、X6Sインカムの音量ダウンを押したまま、インカムボタンを3秒間長押し、「搜索中」の音声ガイダンスが流れ、B+COM SB6XRを探して接続を行います。
- 4.接続が完了すると、インカム通話状態になります。

「例2」当製品 (X6S) と他製品 (DAYTONA DT-E1) のペアリング方法

- 1.X6Sの電源をオンにして、チャンネルを「2人モード」に切り替えます、そしてインカムボタンを6秒間長押しして、インカムペアリングモードに入ります(音声ガイダンス:「インカム通話起動」→「2人モード」→「インカムペアリング」)。
- 2.DAYTONA DT-E1オンにして、DT-E1Aボタンを青ランプ点滅まで長押しして、ペアリング状態に入ります。
- 3.その後、X6Sインカムの音量ダウンを押したまま、インカムボタンを3秒間長押し、「搜索中」の音声ガイダンスが流れ、DAYTONA DT-E1を探して接続を行います。
- 4.接続が完了すると、インカム通話状態になります。

「例3」当製品 (X6S) と(R16 Pro) のペアリング方法

- 1.R16 Proの電源をオンにして、インカムボタンを長押しして、ペアリングモードに入ります。
 - 2.X6Sの電源をオンにして、チャンネルを「2人モード」に切り替えます、そしてインカムボタンを6秒間長押しして、インカムペアリングモードに入ります(音声ガイダンス:「インカム通話起動」→「2人モード」→「インカムペアリング」)。
 - 3.その後、X6Sインカムの音量ダウンを押したまま、インカムボタンを3秒間長押し、「搜索中」の音声ガイダンスが流れ、R16 Proを探して接続を行います。
 - 4.接続が完了すると、インカム通話状態になります。
- ※X6SとR16 Proは互換性があり、再起動する時にインカムボタンを3秒間長押し後に(「インカム通話起動」→「2人モード」)と音声ガイダンスが流れ、インカムボタン一回押すことでインカム通話が接続されます。
- ※互換性の問題により、他社のインカムとペアリング記録を記憶できません。インカム終了する度に再びペアリング操作を行う必要があります。

聴きトーク

X6Sの「聴きトーク」は、音楽やナビ音声を聴きながら、同時にインカム通話を行うことができる機能です。

運転中に距離が離れて切断した場合も、通信状態が良いと思われる距離に戻ると自動で接続できます。(短時間内)

1. スマートフォンなどのデバイスから音声を再生した状態でインカム通話を開始すると、「聴きトーク」状態になります。
2. 「聴きトーク」の場合、誰かが携帯電話の通話に応答するでも、他のデバイスは正常にインカム通話できます。
3. マイクをオフになり、着信応答しながらインカム通話を聴くことができます。
4. 携帯電話通話はインカムを介して伝えず、通話終了すると自動的にインカム通話に戻ります。


「聴きトーク」の始め方

1.X6Sの操作




スマートフォンなどのデバイスと接続する

2.デバイスの操作



音楽やナビ音声を再生する


3.X6Sの操作

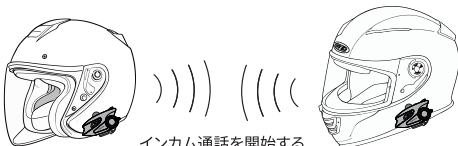

インカム通話を開始する

4.X6Sの状態

音楽やナビ音声を聴きながら、同時にインカム通話を行う「聴きトーク」状態になる

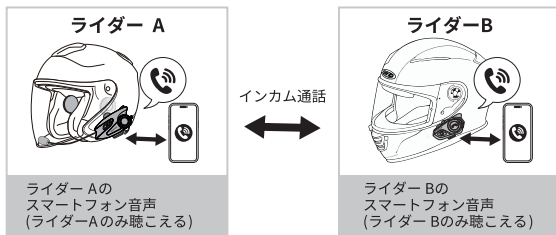

音楽共有機能

本製品は自分が聴いている音楽をみんなで聴ける「音楽共有」を搭載します。

操作方法：

- ①電源をオンにします。
- ②2台のインカムを同時に電源ボタンを押しながら、ボリュームダイヤルを上にも4秒間回ります。
- ③LEDランプが青/赤に点滅すると、2台のインカムが自動的に接続されます。
- ④ペアリングが完了すると、LEDランプが青色点滅になり、音楽共有が開始されます。

音楽共有最大通信距離：約10m

音楽共有中に、電源ボタンを押したまま、ボリュームダイヤルを上にも一回まわすごとで、音楽共有の「一時停止」「開始」をすることができます。

※音楽共有済みのインカムは記憶されますので、次回は電源ボタンを押したまま、ボリュームダイヤルを上にも一回まわすごとで、音楽共有ができます。

「音楽共有」の始め方

1.X6Sの操作



スマートフォンなどのデバイスと接続する


2.デバイスの操作




音楽を再生する

3.X6Sの操作

1台目

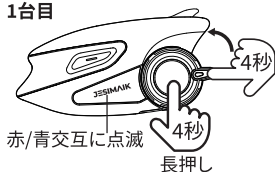

2台目

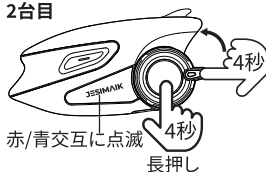


音楽効果

また、音楽再生時には4種類のサウンドエフェクトを切り替えることができます。直通(デフォルト)、低音、ロック、ポップの4種類です。

操作方法:


電源ボタンを押したまま、ボリュームダイヤルを下に4秒間回すことでお望みのモードに切り替えることができます。切り替えの際にブブブツと音がしますが、音楽が大きすぎるとヒント音が上書きされる可能性があります。

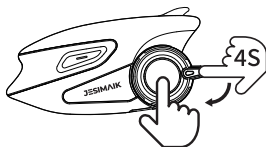

FMラジオを聞く

FMラジオをON/OFFにする

電源オンの状態で電源ボタンを押しながら、ボリュームダイヤルを下に一回まわす。

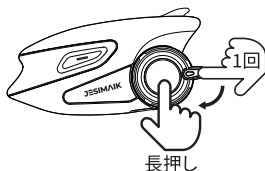

受信可能なFM局をサーチ

- 次のラジオ局に進む: ボリュームダイヤルを下に連続2回回す。
- 前のラジオ局に進む: ボリュームダイヤルを上を連続2回回す。

FMラジオ音量調整

ボリュームダイヤルを上/下に1回まわすことで音量調整ができます。

こんなときは

下記のような場合は、ユーザーズマニュアル、クイックマニュアルをもう一度ご確認ください。それでも解決しないときは、保証書に記載されている連絡先までお問い合わせください。

こんなときは	ここを確かめてください
音が聞こえない	スピーカー&マイクのジャックが正しく接続されているか、しっかりと差し込まれているか確認し、音量を適切に調整してください。
充電ができない	充電ジャックが正しく接続されているか、ジャックに損傷がないか確認してください。付属の充電ケーブルを使用することをお勧めします。
スマートフォンに接続後、LINE通話品質が悪い	LINE通話はインカムでは制御できません。アプリの通信であり、電話ではないため、Bluetoothには権限がありません。通話品質が悪い原因は、LINE通話がネットワークを利用しているため、その時のネットワークが正常かどうかを確認してください。
電源が入らない	製品を充電してください。バッテリーが切れている可能性があります。 本製品が雨に濡れたり浸水したりすることがないかご確認ください。そのような場合は、内部に水が入っている可能性があるため、製品が乾燥するまで待つてから再度電源を入れてみてください。
ペアリング後に音が聞こえない	スピーカー&マイクのジャックが正しく接続されているか確認してください。 ペアリング操作が正しいか確認してください。インカムをリセットし、スマートフォンからデバイスの接続を削除して再度ペアリングを試みてください。

他社インカムと ペアリング出来 ない	他社製のインカムとの接続方式が異なる可能性があるため、ペアリング機能の詳細については、お買い上げの販売店にお問い合わせいただくことをおすすめします。
通話距離が短い	ペアリング方法が正しいか確認し、リセット後に再度ペアリング操作を試してみてください。建物の障害、電磁波干渉などの環境影響によって発生する可能性がありますので、風の影響の少ない場所、空いている郊外や電磁干渉の少ないエリアへ移動した後、通話距離が正常かどうかを確認することをお勧めします。

商品仕様

※本仕様は予告無く変更する場合があります。

型番	X6S
サポートプロファイル	A2DP、AVRCP、HFP、HSP、SSP、DID、HID
ノイズキャンセリング	DSP、CVC、ENC対応
防水性能	IP67
外形寸法	95mm×50mm×25mm
本体重量	約58g
充電コネクタ	USB Type-C
グループ通話	対応
長距離通信	対応
FMラジオ	対応
音声アシスタント	対応
電話/ナビ	対応
ミュージック&トーク	対応
音楽共有	対応
音量調整	対応
ユニバーサル接続 (他社インカムとの接続・通信)	対応

保証期間およびお問い合わせ

- ・本製品の保証期間はご購入より一年間となります。
- ・本製品の仕様は予告なしに変更する場合があります。予めご了承ください。
- ・本製品は使用電子部品の製造中止で、生産及び販売終了となる場合があります。予めご了承ください。
- ・お問い合わせの際、お客様へ確実に迅速に対応させていただくため、あらかじめ下記の事項をご確認の上、ご連絡ください。

①商品名

②ご購入先及びご注文番号

③本体に貼られているシリアル番号

④故障の状況(できるだけ詳しくご説明ください。メールでお問い合わせいただいた場合は不具合症状に関する写真または動画を添付いただけると幸いです。)

・ご不明な点や故障に関するご相談は、ご購入の販売店、または下記営業窓口にお問い合わせください。

メールアドレス



support@jesimaik.com

公式サイト



www.jesimaik.com

受付時間:10:00-13:00、14:30-18:30

(土・日曜、祝祭日・年末年始および当社指定休業日は除く)

本保証書は再発行いたしません。大切に保管してください。

保証書

品 名	JESIMAIKバイク用インカム
品 番	X6S
購 入 日	年 月 日
保証期間	上記ご購入日より1年間（消耗品を除く）
お 客 様	ご住所 〒
	電 話 ()
	お名前
	様

1. 取扱説明書、注意事項などにしたがって正常な使用状態で故障した場合に限ります。
2. 保証期間内に前項に該当する故障が発生した場合に限ります。
3. 消耗品に関しましては、保証対象外となります。
4. 保証期間内でも次の場合は、有料修理となります。
 ＊本書のご提示がない場合や、購入日、販売店名の記載がない場合。
 ＊使用上の誤り、他店・個人での修理、分解、改造、調整による故障等。
 ＊お買い上げ後の移動、落下、天災地変、異常電圧による故障。
5. 保証書の発行により、ご購入者の法律上の権利を制限するものではありません。

免責事項

法律上の請求の原因の種類を問わずいかなる場合においても、本製品の使用または、使用不能から生ずる直接損害、間接損害（事業利益の損失、事業の中断、事業情報の損失等）、特別損害、付随的損害、経済的拡大被害（逸失した利益、ビジネス上の収益、信用あるいは節約すべきし費用を含む）、他の機器や部品に対するデータの損失または損害、第三者からの賠償請求に基づく損害、身体障害（身体障害に起因する死亡及び怪我を含む）に関して、弊社は一切の責任を負わないものとさせていただきます。