

# charli chair

## Contact us



<http://charlichair.com/>



<https://www.facebook.com/Charlichair>



<https://twitter.com/Charlichair>



<http://youtu.be/1KQQWuqTdog>



<http://au.linkedin.com/pub/charlichair-baby-shower-chair/8a/b03/a56>



<https://plus.google.com/+Charlichair/posts>



<http://www.pinterest.com/babyshowerchair/>



[http://instagram.com/charlichair\\_shower\\_chair](http://instagram.com/charlichair_shower_chair)

# charli chair

# charli chair

## 2-in-1 BABY BATH CHAIR WARRANTY

CharliChair is guaranteed for 12 months from the date of purchase.

Our goods come with guarantees that cannot be excluded under the Australian consumer law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonable foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered.

The CharliChair must be inspected that there was not any physical damage as the cause.

If there are any issues please contact us at [enquiry@charlichair.com](mailto:enquiry@charlichair.com) or call us on 1300 558 056.

Head Office:  
CharliChair  
6 Inglis Road Ingleburn  
NSW 2565 Australia

[enquiry@charlichair.com](mailto:enquiry@charlichair.com)  
[www.charlichair.com](http://www.charlichair.com)  
1300 558 056

01

# charli chair

## PARTS



### IMPORTANT:

Please ensure you have all the parts shown on this page. If you are missing any parts please DO NOT return this product to the store. Please call our customer service department on 1300 558 056 or contact us at [enquiry@charlichair.com](mailto:enquiry@charlichair.com)

No tools required for assembly.

02

# charli chair

SAFETY GUIDELINES AND INSTRUCTIONS MUST ALWAYS BE FOLLOWED BEFORE MAKING USE OF THIS PRODUCT. PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

## **WARNING**

- Prevent serious injury or death from falls or sliding out.
- ALWAYS secure child using the waist, crotch and shoulder harness restraint system. The child should be secured in the highchair at all times by the restraint system.
- NEVER allow child to use footrest to climb in or out of highchair.
- Follow the manufacturer's instructions.
- Do not leave children unattended.
- It is unsafe to use accessories other than those supplied by charlichair. Never modify the product in any way. Failure to follow instructions may put the user or carer at risk and will invalidate the warranty on the product.
- The seat is suitable for newborns to 17kg.
- The product will become unstable if the manufacturer's recommended load is exceeded.
- If in any doubt to the continued safe use of your Charlichair product or if any parts should fail, please cease using the product and contact our customer services department as soon as possible.
- Carry out all positional adjustments and ensure that they are securely fastened before you put the user into the product.
- Never leave the product on a sloping surface, only on flat surfaces.
- NEVER allow other children to substitute for adult supervision.
- NEVER lift this product with baby in it.
- NEVER place the child directly under the shower head or flowing water.
- When not in use disconnect shoulder straps from the waist strap and/or buckle.
- The harness can form loops which may be a strangulation hazard.
- Never leave a harness connected when not fitted to a child in the chair.
- To avoid serious injury always use the harness provided to secure the child. (adjust the straps to suit the size of your child's body)
- Always use the crotch strap in combination with the waist strap and shoulder strap.
- This chair should not be used near an open fire or an exposed flame. Position the product so that the child is far from dangers such as electrical wiring, heat sources and flames.
- Do not leave the high chair exposed to sunlight for long periods of time. Wait until it has cooled down before sitting the child in the chair.

# charli chair

## DO's and DON'Ts



Do not place toddler in seat directly under shower head



Do not adjust the seat position with the child in the seat



Do not adjust the height position with the child in the seat

# charli chair

## ASSEMBLY

IMAGE 1



**STEP 1**

Slide H-bar in Image 2 onto the two prods on the U-shaped base in Image 1.

**STEP 2**

Push in buttons to slide H bar in Image 2 onto the U-shaped base in Image 1. Move it into place until button comes out of the leg support as in Image 4.

**STEP 3**

Resulting in Image 3.

IMAGE 3



IMAGE 2



IMAGE 4



05

# charli chair

## ASSEMBLY

IMAGE 5



**STEP 4**

Cup bath tub in Image 6 to back of capsule in Image 5. Adjust so that the holes in the bath tub are aligned with the holes shown in Image 5.

**STEP 5**

Use allen key provided to screw two screws on either side of the capsule.

**STEP 6**

Screw cap to bottom of bath tub. Resulting in Image 7.

IMAGE 6



IMAGE 7



06

# charli chair

## ⚠️ WARNING ⚠️

- Prevent serious injury or death from falls or sliding out.
- ALWAYS secure child using the waist, crotch and shoulder harness restraint system. The child should be secured in the highchair at all times by the restraint system.
- NEVER allow child to use footrest to climb in or out of highchair.

## ⚠️ WARNING


USE THIS HARNESS AT ALL TIMES

- Ⓐ Waist Strap buckle prong and holder
- Ⓑ Shoulder strap connector
- Ⓒ Buckle housing
- Ⓓ Harness Sliders

A five point harness is provided to restrain your child. To secure your child in the harness please follow the steps below carefully. Make sure the connector (B) is connected with the Buckle prongs holder on the waist straps (A). Push buckle (A) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap and shoulder straps. Always adjust the harness when changing the seating position of the child.

To remove the child, release the buckle by squeezing the top and bottom prongs, remove the shoulder straps and lift the child out of the highchair.

07

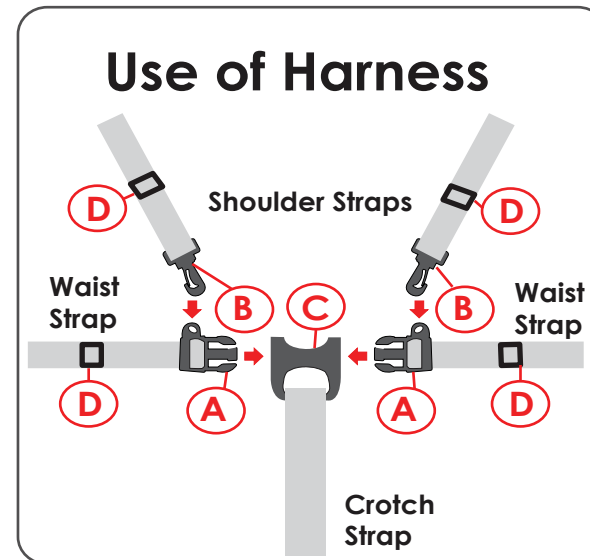

**⚠️ WARNING**  
WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE

# charli chair

## USING THE SEAT

IMAGE 8



ALWAYS use the same height slots for both sides of the shoulder straps. Use the lower shoulder position for newborns.

IMAGE 9



After using the chair you may remove the straps and give the five point harness a clean. To do this feed strap tab back through opening.

When replacing the five point harness push strap tab together and push through opening on its side. Inspect strap tabs and ensure tabs are flat against back seat, as in Image 9. Pull straps to ensure that they are secure.

IMAGE 10



08

# charli chair

## USING THE SEAT

IMAGE 11



To adjust recline position first ensure child is not in seat.

1. Turn adjustment spindle anti-clockwise, as in Image 11.
2. Push seat upwards or downwards according to desired position. Seat has 2 positions.
3. To stabilize position turn adjustment spindle clockwise, as in Image 12. Push down on seat firmly but gently in order to ensure the seat is secure.

IMAGE 12



IMAGE 13



To adjust height position first ensure child is not in seat.

1. Push the buttons located on both sides of the H-bar, as seen in Image 13, and move seat upwards or downwards according to the desired height. The seat has 3 height adjustments.
2. To ensure seat is secure and stable you should hear and see the button pop out of the hole. Pull down on it slightly to ensure the chair is firm.



# charli chair

## CARE AND MAINTENANCE

The shower seat with attached straps and belts may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue.

From time to time check your high chair for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Excessive exposure to the sun or heat could cause fading, yellowing or warping of parts.

**CLEANING THE CHASSIS:** periodically clean all plastic parts with a damp cloth. Do not use solvent or similar cleaning products; keep all metal parts dry to prevent rusting; keep moving parts clean (adjustment mechanisms, locking mechanisms, wheels, ...) and free of dust and sand and, if necessary, lubricate with light machine oil all metallic moving parts. Check all nuts and bolts for tightness and tighten when required. Check all coverings for bolts and sharp edges and replace when required. Replace when required in accordance with the manufacturer's instructions.

DO NOT place any of the parts into a dishwasher or washing machine to clean them.

Clean restraint system straps and buckles using a soft cloth with warm water and mild soap.

Clean seat with a soft cloth using warm water and mild soap. Disinfectant wipes can also be used.

To clean the straps - washed the strap in warm soapy water ,rinse and dry in the sun. If storing away store in airtight bag to avoid mould build up.

