

Key	Part	Description	Key	Part	Description
1	R6E7	Spindle Screw Set	13	R6J7	Spindle Washer Set
2	R7F2B	Handle-plate Lock Nut	14	R7J4	Drag Pawl
3	R4F23	Handle Assy	15	R5G3	Drag Pawl Spring
4	R7E32	Handle-plate Assy	16	R5H1	Drag Lever Spring
5	R7D19	Drag Wheel	17	R5E5	Ratchet Assembly
6	R7B/C28	Friction Washer Set	18	R7K2	Drag Knob & Wheel
7	R4A	Spool Only	19	R5C2	Drag Lever & Rivet
8	R7L3	Silent Drag Cam	20	R6F3	Dome Nut
9	R5B3	Fish Alert Wheel	21	R2G9	Base Lock Spring
10	R7H4	Friction Tube Washer	22	R2DEF4	Base Bolt Assembly
11	R7A13	Friction Tube	23	R2H1	Index Lever & Rivet
12	R6A22	Spindle	24	R2A1	Index Plate Assembly



62Ti

STEALTH TITANIUM 62



CONGRATULATIONS and thank you for purchasing our Australian made Super Light Carbon Fibre Titanium Surf Reel as your choice of fishing reel. These reels are constructed from the highest quality materials including carbon fibre infused resin and space grade titanium to ensure your reel will last for many years.

Plus, all these other advantages -
Long, accurate casts:
 Now, with only the minimum of practice you will be able to cast further and more accurately than ever before.

Control large fish with ease:
 Even with the fast recovery this reel will still control a large fish with drag pressure & pump and wind action.

You can fish hard with this reel, but more care needs to be taken to avoid too much sand in the working parts or the reel.

More comfortable fishing:
 Low winch-mount rods let you fish with your arms in a relaxed position.

Special Features

- Titanium Back Plate
- Super Light Carbon Fibre Constructed Spool
- Carbon Fibre Handle Plate
- Titanium Friction Tube
- Titanium Handle Screws
- GLO-X Handles

No line twist: Use a small free-running swivel as the last piece in any rig and you'll minimise any line twist.



Care Instructions

We recommend a thorough wash in fresh water after use in salt water.


NOTE: DO NOT USE heavy grease on parts inside the back plate as they will hold sand and cause excessive wear or malfunction to your reel.

Reel Icon Pty Ltd Trading as
 Alvey Reels Australia ABN 57 625 261 707
 2-6 Antimony Street Carole Park Qld 4300
 t: +61 7 3271 2844 f: +61 7 3271 2451

For more hints and tips on maintenance, please visit the **spare parts** page at www.alvey.com.au
 e: info@alvey.com.au
#alveyreels

Recommended Line Size

Your 62Ti reel will hold approximately 300 metres of 6 kg line. If fishing near rocks or other hazards use heavier line to help avoid line breakage.

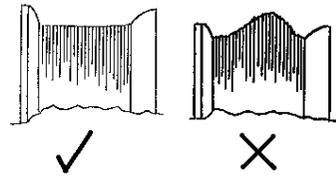

Filling the Spool with Line

Always take the line from the front of the dispenser, never the side.

Wind firmly and evenly onto the spool, spreading the line with your fingers to give a smooth casting base.

Never stretch a nylon monofilament onto a spool; when it goes back to its original length it will exert strong enough crushing action to damage your spool.

Never allow loose coils to develop on your spool through careless uneven winding.

Adopt the habit of applying light finger tension when retrieving line and spread evenly over its bed.


Selecting a Rod

Your rod and reel outfit should be balanced so you can hold it comfortably over long periods. A matched set, which has a point of balance where it's held in the left hand, will give you the most comfortable posture. The ideal rod for this reel should be 3.2 to 4.0 m in length. The use of a short butt brings the reel into a natural position for rewinding with your elbows at your side and without strain.

Would suit Alvey rods R55, R62L, R65S

The Simple method for LONG DISTANCE SURF CASTING With the world's best side-cast reel – ALVEY!

1. To begin, place fingers of left hand on spool lip and thumb on release lever. Press lever... turn spool

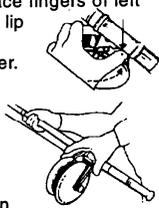

2. Turn spool a full quarter to open-face casting position.


3. Release line from open runner. Restrain line with thumb on spool.



4. Casting position: Arms high rod held over shoulders, reel above rod.



5. Casting action: Punch hard with right hand, pull downward with left hand.



6. Casting drive: Follow through while releasing line grip as power is applied. Rod butt must clear left leg.



7. End of cast: Trap line at reel base. Turn drum back to fishing position.



8. Return line to open runner.



9 & 10 A comfortable fishing position makes hooking, playing or landing a fish more efficient.




If you're left-handed simply carry out above instructions the other way round.

Rigs & Swivels

When used properly a brass swivel is a very inexpensive and efficient way to keep a fishing line in good condition. Curls and twists in a line can be caused by many things, but can be kept to a minimum by the correct use of a swivel

Line breaking strain	Swivel size
1 – 5 kg	No 14
5 – 8 kg	No 12
8 – 15 kg	No 10
15 – 20 kg	No 9

Swivel must be above sinker

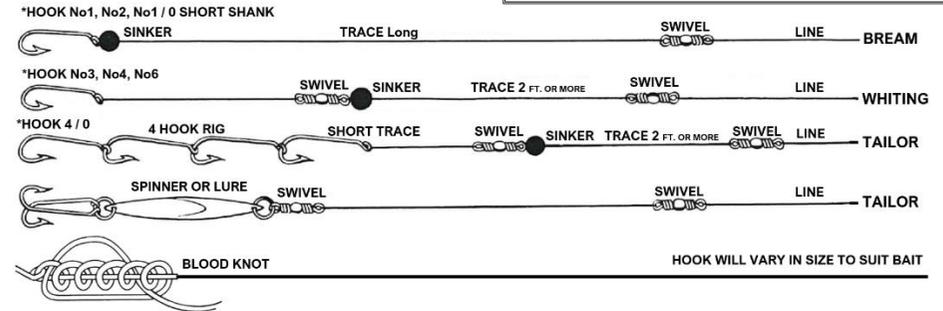

62Ti



Non-Reversing Drag

The non-reverse series of reels allows line to be released under a pre-set pressure while the reel handle remains in a stationary position. This model incorporates carbon fibre friction washers matched with laser cut stainless steel washers. This gives a smooth range of tension settings with fish stopping power.

Setting the Drag

Make sure the drag activating lever on the back of the reel is in the 'On' position. Using a small spring balance to pull the line off the reel. Set the tension of the drag to be approximately one third of the breaking strain of your line by rotating the drag tensioning star on the front of the reel. (Clockwise to increase tension.) It is better to have the drag set light as a short sharp run from a large fish could snap the line on an over set drag.

The Star is easily adjusted while fighting the fish and the unique style of the Alvey reel allows extra drag pressure to be applied directly to the spool by using the palm of your hand against the bottom of the reel.

Fish Alert

When leaving the rod and reel unattended, activate the fish alert on the back of the reel by pushing the button to the 'ON' position. If a fish takes line a warning noise will be heard. Turn off the alert by pushing to the 'OFF' position as marked on the back of the reel.

Playing the fish

Once the fish has been hooked always keep a bend in the rod by holding it at an angle to the fish. With the power of an Alvey reel you are in control. Do not rush the fish. Allow the drag to tire the fish. Many times the fish is lost in the shore break. Keep a steady tension on your line, a bend in the rod and ease the fish ashore.

Maintenance

Light machine oil is better to lubricate the reel rather than grease which tends to make sand stick to everything. Flush the reel out in salt water when fishing to remove excess sand and when you get home, flush well in a bucket of water and wind reel when flushing.