

SAFETY NOTICES
WARNING

FAILURE TO FOLLOW ALL SAFETY PRECAUTIONS AND INSTRUCTIONS MAY RESULT IN PROPERTY DAMAGE, SERIOUS INJURY OR DEATH TO YOU OR OTHERS

SAFETY MESSAGE TO INSTALLERS, USERS, AND MAINTENANCE PERSONNEL

IT IS THE RESPONSIBILITY OF THE INSTALLER, TO INSTALL THIS PRODUCT, IN COMPLIANCE WITH ALL GOVERNMENT, STATE, TOWN OR ANY LOCAL CODES THAT HAVE JURISDICTION OVER THIS INSTALLATION.

IT IS IMPORTANT TO FOLLOW ALL INSTRUCTIONS SHIPPED WITH THIS PRODUCT. THIS DEVICE IS TO BE INSTALLED BY A TRAINED INSTALLER WHO IS THOROUGHLY FAMILIAR WITH THE NATIONAL ELECTRIC CODES AND LOCAL CODES AS WELL.

THE SELECTION FOR THE MOUNTING LOCATION FOR THE DEVICE, ITS CONTROLS AND THE ROUTING OF THE WIRING IS TO BE ACCOMPLISHED UNDER THE DIRECTION OF THE FACILITIES ENGINEER. IN ADDITION, LISTED BELOW ARE SOME OTHER IMPORTANT SAFETY INSTRUCTIONS AND PRECAUTION YOU SHOULD FOLLOW:

- READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLING OR OPERATING THIS EQUIPMENT.
- DO NOT CONNECT THIS DEVICE TO THE SYSTEM WHEN THE POWER IS TURNED ON.
- AFTER INSTALLATION, ENSURE THAT ALL SCREWS AND THREADED JOINTS ARE PROPERLY TIGHTENED.
- AFTER INSTALLATION, TEST THE SYSTEM REGULARLY TO ENSURE THAT IT IS OPERATING PROPERLY.
- AFTER INSTALLATION AND TESTING IS COMPLETE, PROVIDE A COPY OF THIS INSTRUCTION SHEET TO ALL OPERATING PERSONNEL.

INSTALLATION

1. UNPACKING

AFTER UNPACKING THE EQUIPMENT, EXAMINE IT FOR DAMAGE THAT MAY HAVE OCCURRED IN TRANSIT. IF THE EQUIPMENT HAS BEEN DAMAGED, DO NOT ATTEMPT TO INSTALL OR OPERATE IT, FILE A CLAIM IMMEDIATELY WITH THE CARRIER STATING THE EXTENT OF THE DAMAGE. CAREFULLY CHECK ALL ENVELOPES, SHIPPING LABELS AND TAGS BEFORE REMOVING OR DESTROYING THEM.

2. MOUNTING AND WIRING

A. STROBE SWITCH DETECTOR

- MOUNT THE STROBE SWITCH IN A LOCATION THAT WILL ALLOW IT TO BE AIMED TO VIEW THE ACCESS ROADWAY LEADING TO THE GATE.

B. POWER SUPPLY

- THE POWER SUPPLY IS MOUNTED ON THE BACK OF THE ENCLOSURE COVER

C. CONTROL WIRES TO GATE

- ROUTE THE LOW VOLTAGE GATE CONTROL WIRES FROM THE GATE TO THE POWER SUPPLY LOCATION. MAKE SURE THE WIRES ARE PROTECTED AND SECURED.

- CONNECT THE LOW VOLTAGE GATE CONTROL WIRES TO THE RELAY OUTPUT ON THE TB-2 TERMINAL BLOCK OF THE #1790M-2 POWER SUPPLY.


D. POWER WIRES TO GATE

- LOCATE THE 24VAC POWER SOURCE ON THE GATE CONTROL UNIT AND ROUTE TWO WIRES FROM THIS POWER SOURCE TO THE #1790M-2 POWER SUPPLY.
- CONNECT ONE OF THE TWO WIRES TO THE COMMON-NEG TERMINAL OF THE TB-1 TERMINAL BLOCK. CONNECT THE OTHER WIRE TO THE ONE AMP IN-LINE FUSE HOLDER.
- IF A 12 TO 24 VDC POWER SOURCE IS BEING USED, BE SURE TO NOTE POLARITY AS SHOWN.

INSTALLATION IS COMPLETE

3. OPERATION

- WHEN DETECTOR #1 OR DETECTOR #2 OR DETECTOR #3 RECEIVES A SIGNAL, THE #1790M-2 POWER SUPPLY RELAY OUTPUT WILL CLOSE AND THE RED L.E.D. WILL BE ILLUMINATED. THE RELAY WILL REMAIN CLOSED AND THE L.E.D. WILL REMAIN ILLUMINATED UNTIL THE SIGNAL TO THE DETECTOR AND THE DELAY TIME SELECTED ON THE (S-1 DELAY SWITCH) RUNS OUT. AT THAT TIME THE RELAY WILL OPEN AND THE RED L.E.D. WILL BE OFF.
- IF YOU SELECT THE CONTINUOUS MODE ON THE (S-1 DELAY SWITCH) AND A SIGNAL IS RECEIVED TO THE DETECTORS THE RELAY AND THE RED L.E.D. WILL STAY LATCHED "ON" UNTIL YOU PUSH THE RESET SWITCH (S-2) ON THE POWER SUPPLY.
- A REMOTE MOMENTARY RESET SWITCH CAN BE USED IF NEEDED.

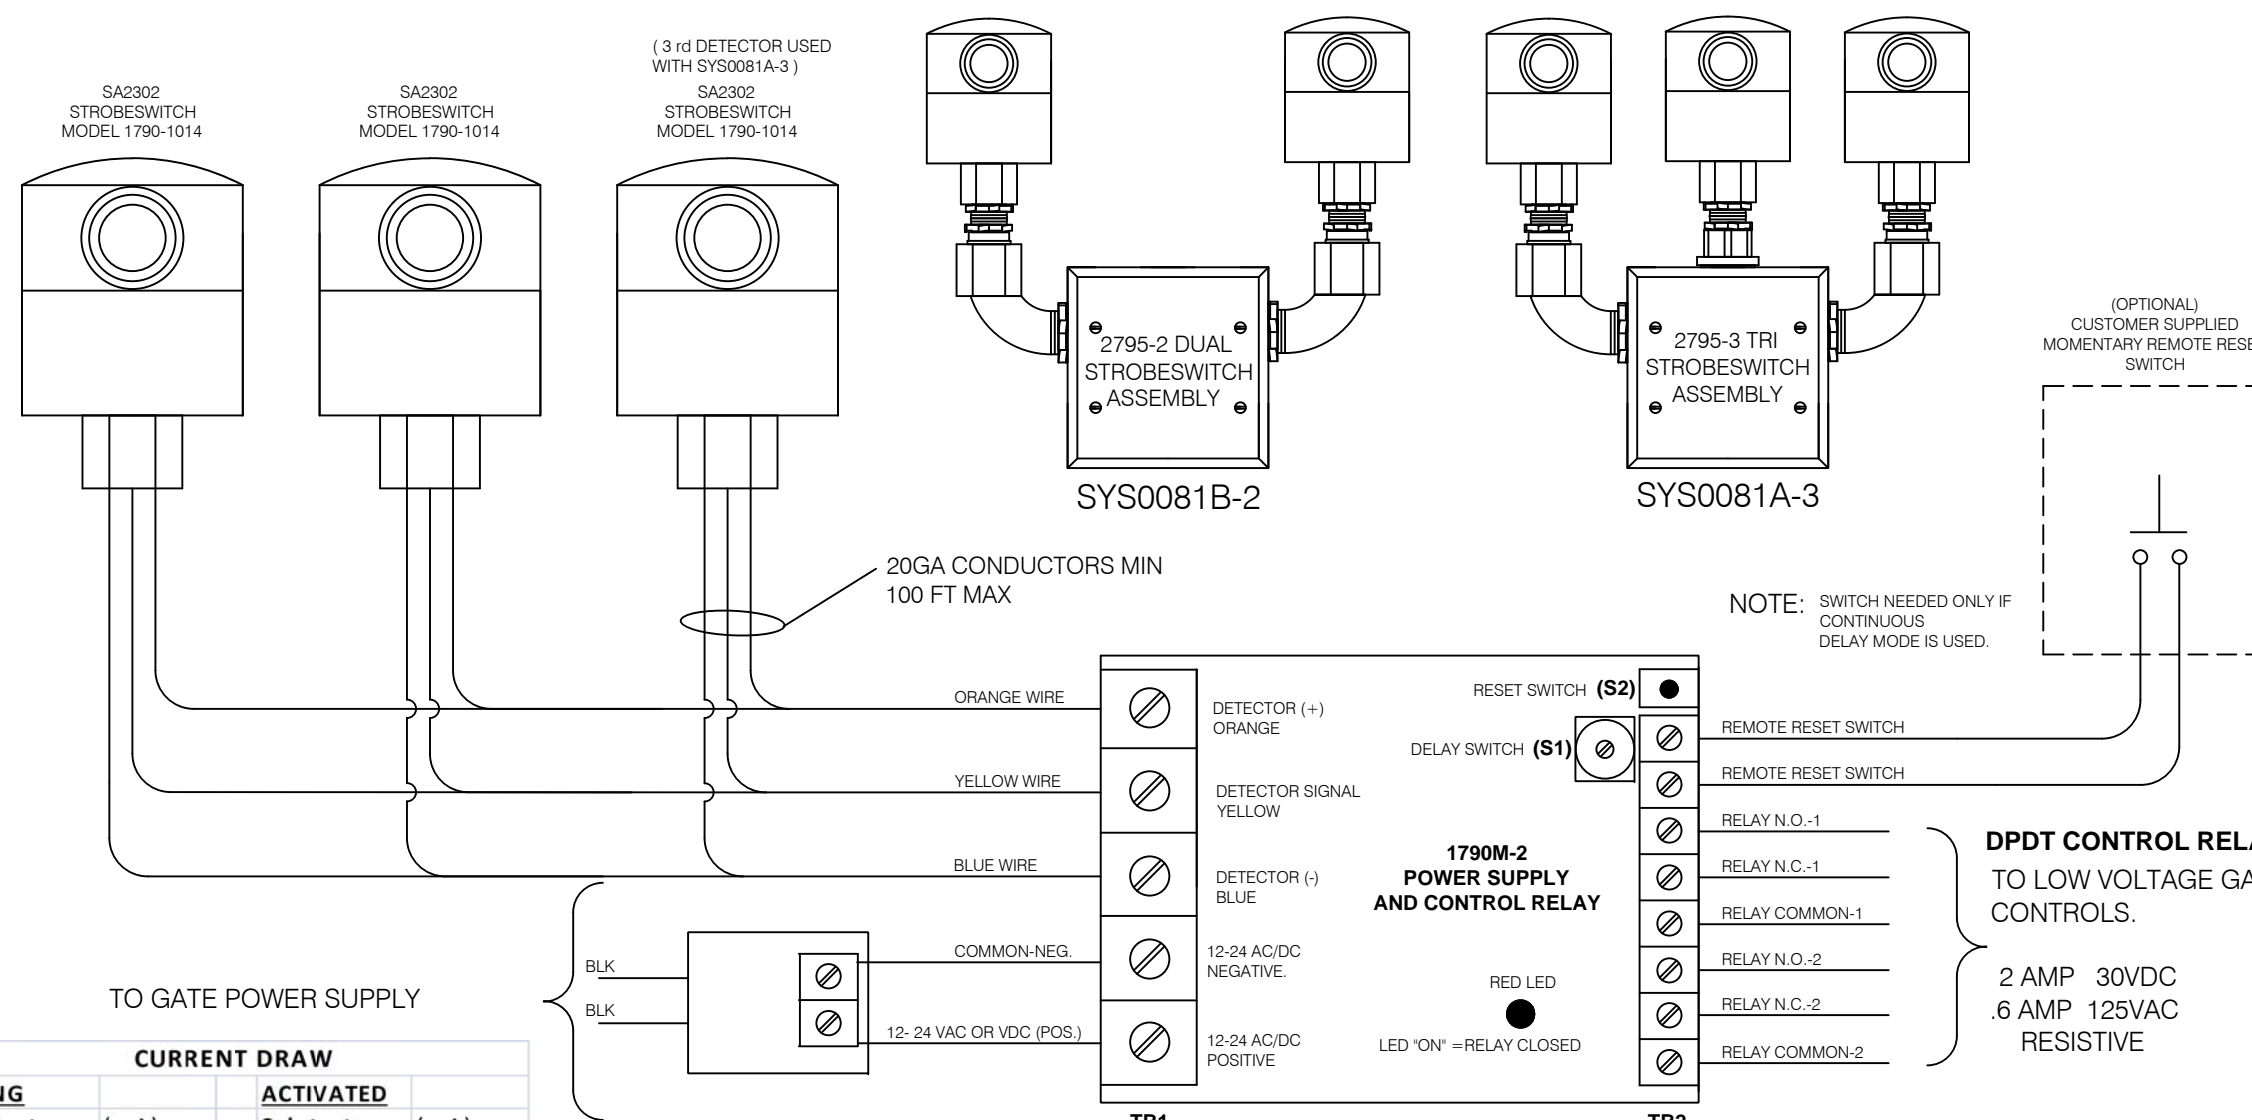

NOTE: SWITCH NEEDED ONLY IF CONTINUOUS DELAY MODE IS USED.

DPDT CONTROL RELAY TO LOW VOLTAGE GATE CONTROLS.


2 AMP 30VDC
.6 AMP 125VAC
RESISTIVE

STROBE SIGNAL FROM DETECTOR CLOSES RELAY FOR DURATION OF STROBE SIGNAL PLUS TIME DELAY

(S1) DELAY SWITCH POSITION DELAY TIME

- 0 = NO DELAY
- 1 = 15 SECONDS
- 2 = 30 SECONDS
- 3 = 01 MINUTE
- 4 = 02 MINUTES
- 5 = 03 MINUTES
- 6 = 04 MINUTES
- 7 = 05 MINUTES
- 8 = 06 MINUTES
- 9 = 07 MINUTES
- A = 10 MINUTES
- B = 15 MINUTES
- C = 20 MINUTES
- D = 25 MINUTES
- E = 30 MINUTES
- F = CONTINUOUS

OPTIONAL TRANSFORMER
120 OR 240/16VAC 20VA 60HZ
CLASS 2 INHERENTLY LIMITED
UL LISTED
TOMAR P/N T165-120 OR T165-240

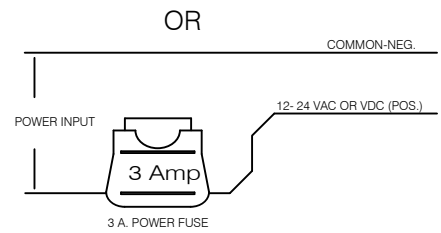

NOTE:
IF INPUT POWER IS 12 TO 24 VDC YOU MUST CONNECT THE POS. LEAD TO THE WIRE WITH THE ONE AMP FUSE.

CURRENT DRAW

IDLING		ACTIVATED	
2 detectors	(mA)	2 detectors	(mA)
12VDC	35	12VDC	92
24VDC	39	24VDC	122
24VAC	130	24VAC	328
3 detectors		3 detectors	
12VDC	55	12VDC	170
24VDC	63	24VDC	229
24VAC	222	24VAC	622

S2 PUSHBUTTON OPERATION

The S2 pushbutton initiates press-to-test and press-to-reset functions.

If the ROTARY DELAY SWITCH is in position (F), S2 operates as a reset switch to open the relay and end the CONTINUOUS delay after a valid signal from a detector.

If S1 is in any other position (0 thru E) S2 operates as a test switch that is; when S2 is pressed the relay will be turned on (closed) for as long as S2 is depressed and remain closed for the delay time selected by the rotary selector switch after S2 is released. If during the delay period, S2 is depressed, the relay will opened immediately.

S2 will not function if there is a valid signal from a detector. If a valid detector signal is received after S2 has been depressed, the test will be interrupted, and the detector signal serviced. After the detector signal and any delay time has expired, a new test can be started by depressing S2.
PROGRAM REV. 03

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES.

REV	DATE	DESCRIPTION
00	09/09/15	ECO 2304
01	10/21/15	ECO 2304
02	10/30/15	ECO 2304

TOLERANCES:
DECIMALS .XX + - - - -
.XXX + - - - -
ANGLES ± - - - -
SCALE NONE DO NOT SCALE DRAWING
DRAWN FAS 11/10/2004
APPROVED
© COPYRIGHT 1998 TOMAR ELECTRONICS INC.

TOMAR ELECTRONICS INC. 2100 WEST OBISPO GILBERT, ARIZONA 85233	
SYS0081B-2 / 2795-2 DUAL SYS0081A-3 / 2795-3 TRI STROBESWITCH INSTALLATION AND OPERATING INSTRUCTIONS TOMAR PART NO: IS0466B	
DRAWING NO.	REV
15242	02

