
# BP36S-A (LP/NG)


Variable Control Safety Valve (VCSV)

### **ISOMETRIC VIEW**

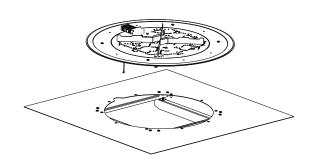

# **TOP VIEW**

(5.5 IN. MAXIMUM WALL THICKNESS 1 IN. MINIMUM SUPPORT)

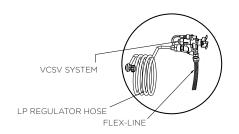





#### FRONT ELEVATION



# Specifications:

KIT NAME	BURNER	BTUs	FIRE
	WEIGHT	(LP/NG)	MEDIA
BP36S-A (LP/NG)	39.7 LBS	105/106K	65 LBS

TESTING AGENCY: UNDERWRITERS LABORATORIES (UL LLC) STANDARD: ANSI Z21.97-02017 / CSA 2.41-2017 OUTDOOR DECORATIVE GAS APPLIANCES

# Notes:

- ENCLOSURES
  - Recommend 2 ea 10 sq in. vents on opposing sides.
- 2. CLEARANCE TO COMBUSTIBLES
  - 72" from top of burner to any overhead combustible material. 24" from edge of burner trim to any combustible side walls. 4" from bottom of burner to combustible materials.
- 3. GAS SUPPLY
  - All VCSV burners ship standard for use with Liquid Propane (LP). Necessary orifice(s) to convert VCSV burners to Natural Gas (NG) are included with each burner.
  - RECOMMENDED: Noise reducing flex-line with 1/2" flared connector ends recommended when converting from LP to NG (PT# T200-9898-16, T200-9898-22, T200-9898-34, T200-9898-46).
- 4. ELECTRICAL
  - · AAA battery required for the push button sparker.
  - Electricity not needed for VCSV burner systems. Refer to Direct Spark Ignition specification sheets if electronic ignition is desired.
- 5. CONTROLS
  - VCSV Control Valve comes standard and is the only control panel approved for use with all VCSV burners.
  - Control panel must be located within 30" of the electrode. A longer flex-line (34") is required if installing control panel more than 24" from the electrode (PT# T200-9898-34).