

## **Mixing Cartridge (A107) Directions**





Remove the Blue and Red button.

Remember when re-installing that the Blue half goes on the right side.





Insert a flat blade screwdriver into the buttonhole (it may take a 2.5mm allen wrench instead). Choose the proper size.

Engage the setscrew and loosen a couple of turns – DO NOT REMOVE.

Remove the faucet handle.






Unscrew the silver crown by turning counter-clockwise.





Unscrew the brassretaining ring. It's a large size ring – approximately 30mm. A large crescent wrench should be able to grab it. NOTE: The following pictures are guidelines – some Keller Mixing Cartridges are different sizes – but ALL are replaced the same way.

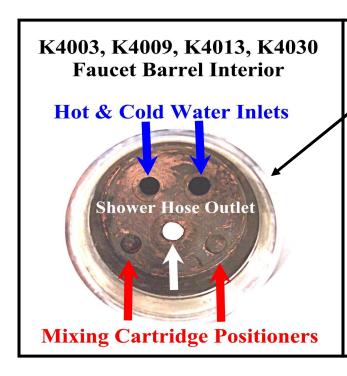

Remove the defective mixing cartridge.

Notice the Faucet Barrel Interior.

Install the new mixing cartridge.

Use the 2 locator pins on the bottom of the new mixing cartridge to properly position the mixing cartridge inside the faucet barrel.



Re-assemble the faucet by reversing the disassembly process.

SPECIAL NOTE: When re-attaching the faucet handle – be sure the handle is positioned with the setscrew dimple in line with the setscrew. Otherwise your faucet handle will not operate the water flow as intended.



