

If you have any questions or missing parts, contact us. DO NOT return product parts to the store from where it was purchased before contacting Delta Children's Products Customer Service. Make sure that all preassemble parts are tight. The appearance of your product may be different from that pictured in this booklet.

To register your product for important safety alerts and updates to your product please visit **http://deltaenterprise.com/register.asp** 

# **WARNING**:

#### Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

Place heaviest items in the lowest drawers.

•Unless specifically designed to accommodate, **do not** set TV's or other heavy objects on the top of this product. •**Never** allow children to climb or hang on drawers, doors,or shelves.

•Never open more than one drawer at a time.

#### Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

Always monitor your child's activity when in the nursery.

•Do not allow standing in drawers.

•Do not allow standing on top of this product.

Accessory Items must be securely fastened to this product according to the instructions provided with those items.

•To avoid head injury, do not allow children to play underneath open drawers.

Do not leave drawers open when not in use.

### NOTES ON ASSEMBLY:

-During the assembly process whenever using screws or bolts, check each by placing the screw/bolt on the diagram of the item which is drawn actual size and design. Be sure to use the proper size and shape specified in the instructions.

-To assemble this unit you may be required to place the unit on it's side and face. It is strongly recommended that assembly is done on a soft, non-abrasive surface to avoid damaging the finish.

## NOTES ON CARE AND MAINTENANCE:

- Do not scratch or chip the finish.
- Inspect the product periodically, contact delta children's products for replacement parts or questions.

- **Do not** store the product or any parts in extreme temperatures and conditions such as a hot attic or a damp, cold basement. These extremes can cause a loss of structural integrity.

-To preserve the luster of the high quality finish on your product, it is recommended to place a doily or felt pad under any items you place on the finish.


-Clean with a damp cloth, then a dry cloth to preserve the original luster and beauty of this fine finish.


-Do not use abrasive chemicals.


-Do not spray cleaners directly onto furniture.

-Lift slightly when moving on carpeting to prevent leg breakage.


-Use of a vaporizer near furniture will cause wood to swell and finish to peel.

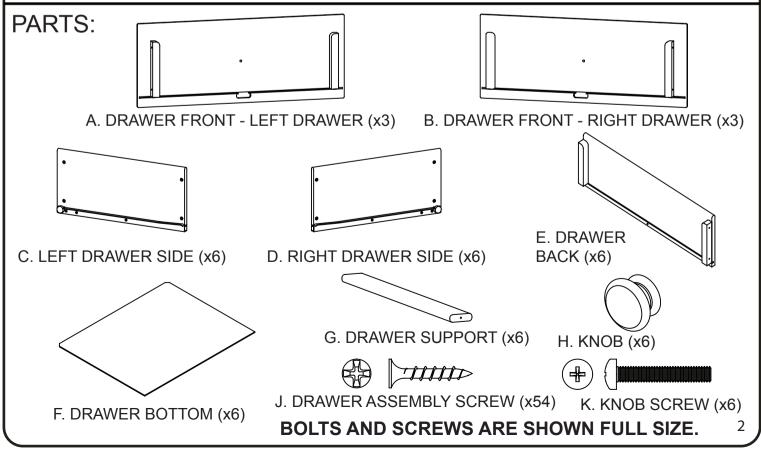

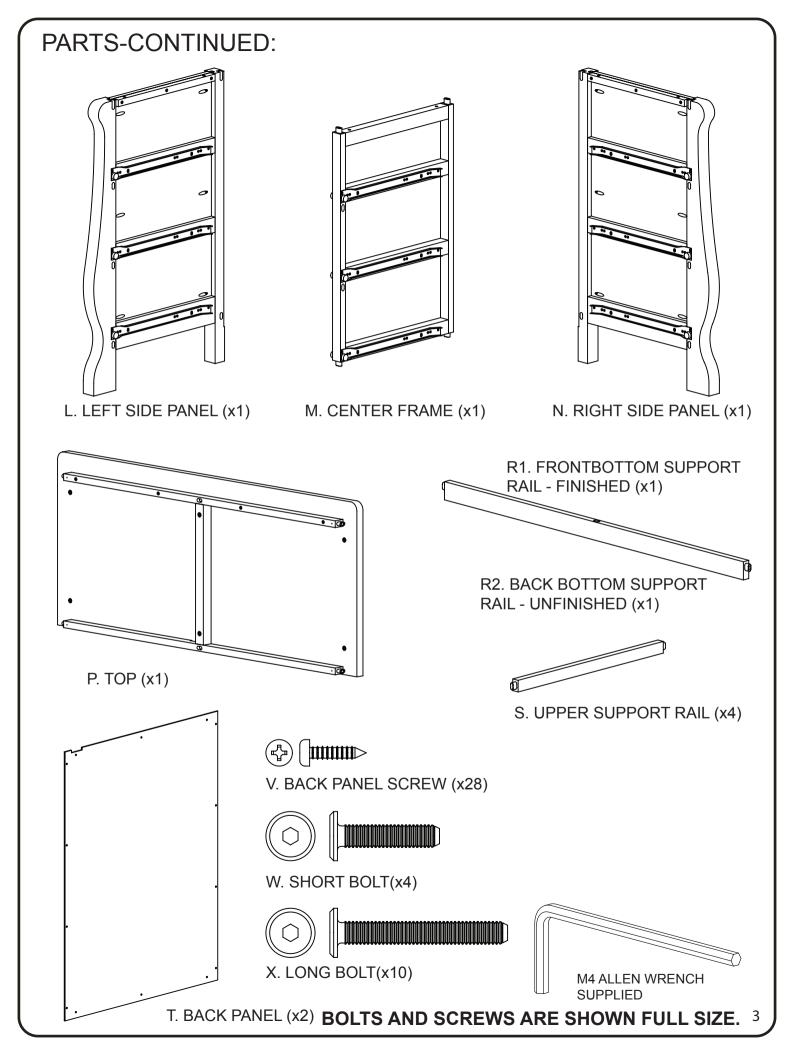


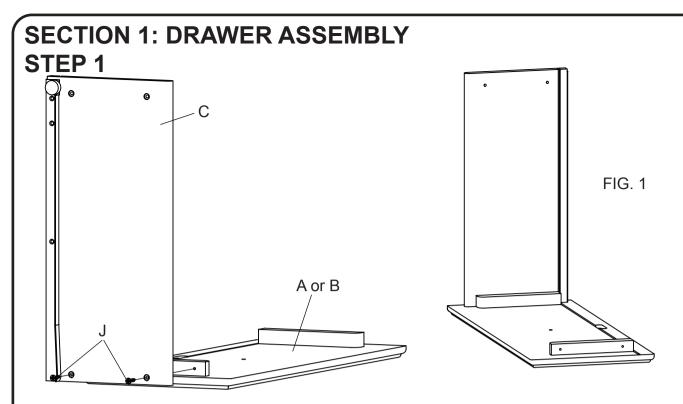


1. ATTACH THE LEFT DRAWER SIDE (PART C) TO THE DRAWER FRONT (PART A OR B) USING (2) DRAWER ASSEMBLY SCREWS (PART J), TIGHTEN WITH THE PHILLIPS SCREWDRIVER. BE SURE THE GROOVE IN THE BOTTOM OF THE PARTS LINE UP. SEE FIGURE 1. THE METAL DRAWER GUIDE MUST BE TO THE OUTSIDE. REPEAT WITH THE RIGHT DRAWER SIDE (PART D)

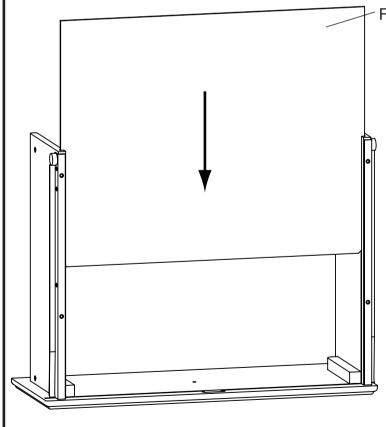



2. SLIDE THE DRAWER BOTTOM (PART F) INTO THE GROOVES ON THE DRAWER SIDES, UNTIL IT IS IN THE GROOVE ON THE DRAWER FRONT. BE SURE THE NOTCHED CORNERS ARE TOWARDS THE DRAWER FRONT.

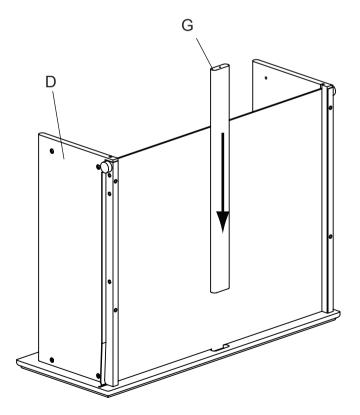

3. INSERT THE DRAWER SUPPORT (PART G) INTO THE CUTOUT IN THE DRAWER FRONT. BE SURE THE END OF THE DRAWER SUPPORT WITH THE PRE-DRILLED HOLE IS TO THE BACK.

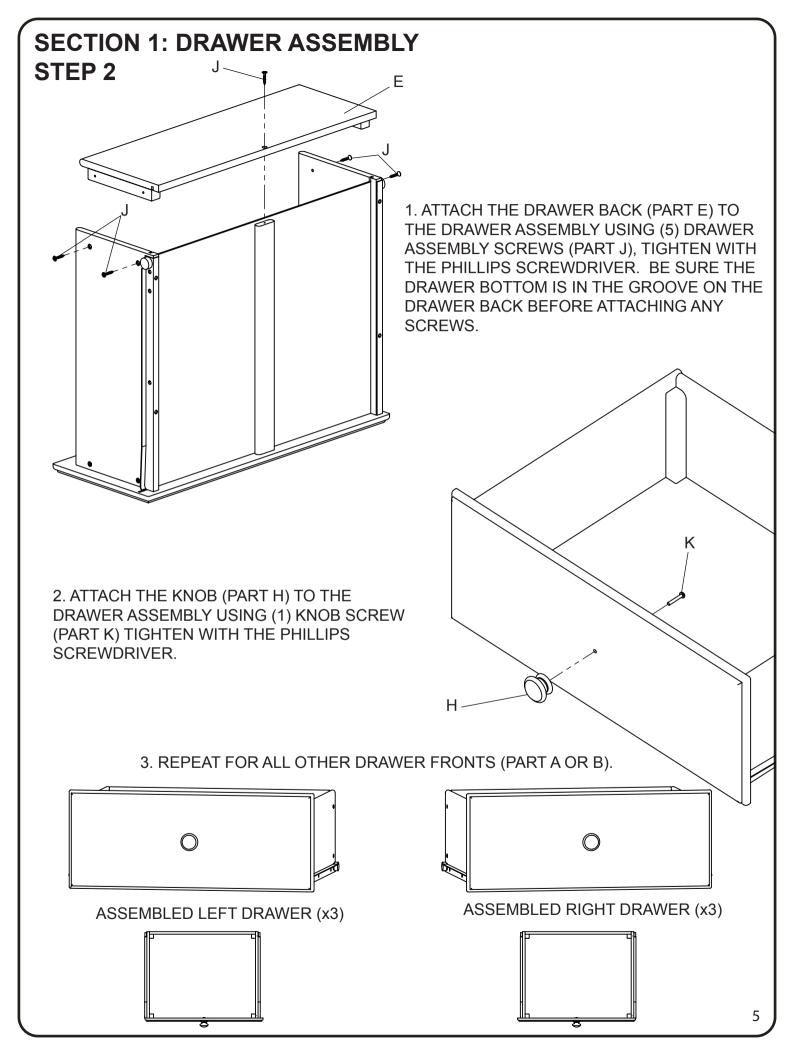

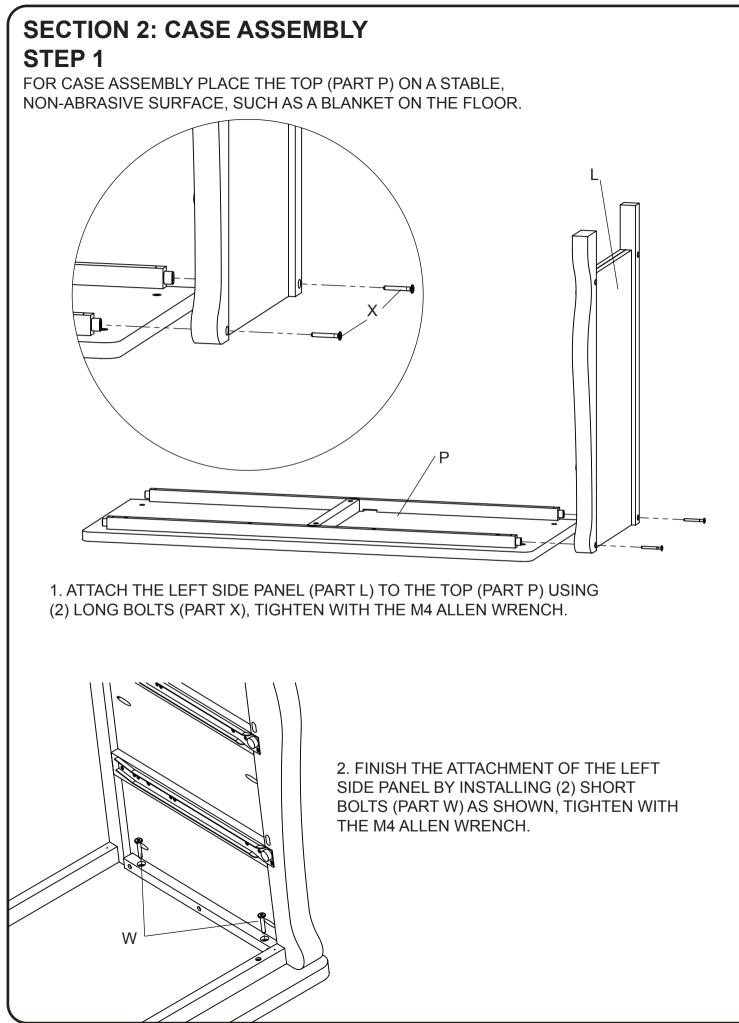

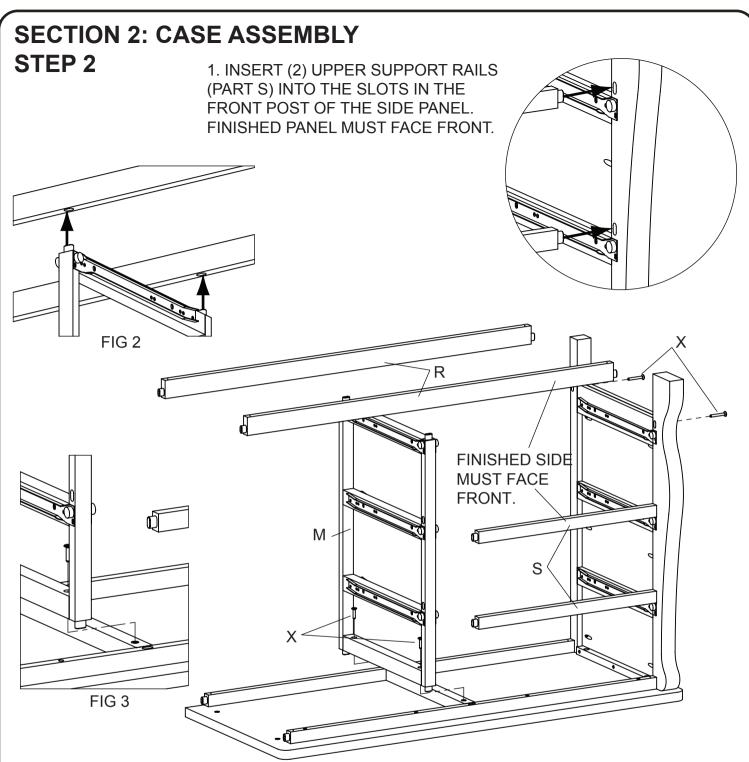


2a. INSERT THE TABS ON THE END OF THE CENTER FRAME (PART M) INTO THE SLOTS IN THE RAILS ON THE TOP. BE SURE THE DRAWER GUIDES ARE IN THE SAME DIRECTION AS THOSE ON THE SIDE PANEL. INSERT THE UPPER SUPPORT RAILS INTO THE SLOTS ON THE CENTER FRAME. TAKE CARE NOT TO SCRATCH THE FINISH.

2b. INSTALL (2) BOTTOM SUPPORT RAILS (PART R) BY INSERTING THE TABS ON THE BOTTOM SUPPORT RAILS INTO THE SIDE PANEL AND INSERTING THE TABS ON THE CENTER FRAME INTO THE BOTTOM SUPPORT RAILS. SEE FIGURE 2. FINISHED SIDE MUST FACE FRONT.


2c. INSTALL (2) LONG BOLTS (PART X) THROUGH THE SIDE PANEL. TIGHTEN WITH THE M4 ALLEN WRENCH.

2d. INSTALL (2) LONG BOLTS (PART X) THROUGH THE CENTER FRAME, TIGHTEN WITH THE M4 ALLEN WRENCH. SEE FIGURE 3.

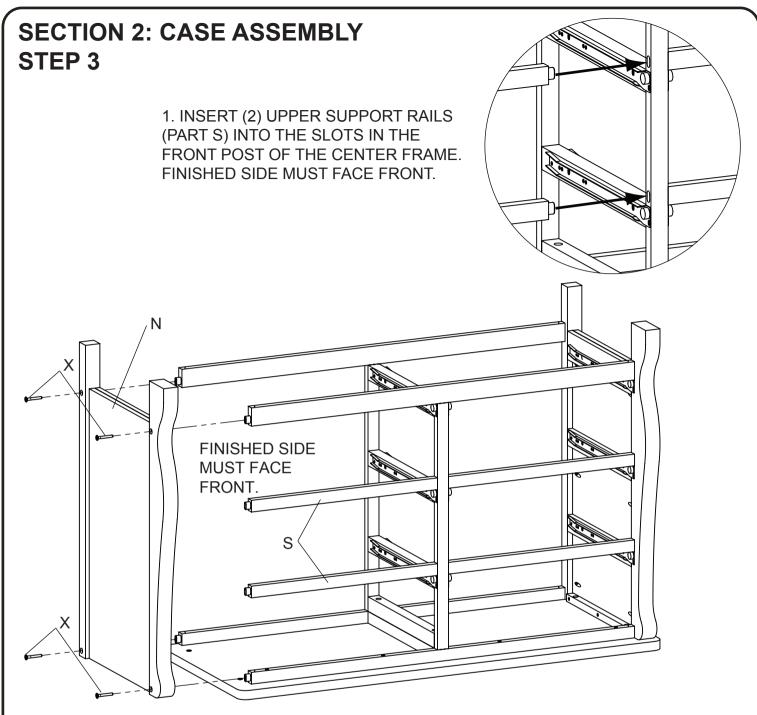


2a. INSTALL THE RIGHT SIDE PANEL (PART N) BY ALIGNING THE TABS ON ALL OF THE INSTALLED PIECES WITH THE SLOTS IN THE SIDE PANEL. IT IS TYPICALLY EASIEST TO START WHERE THE SIDE PANEL MEETS THE TOP AND WORK TO THE BOTTOM SUPPORT RAILS.

2b. INSTALL (4) LONG BOLTS (PART X) THROUGH THE SIDE PANEL, TIGHTEN WITH THE M4 ALLEN WRENCH.

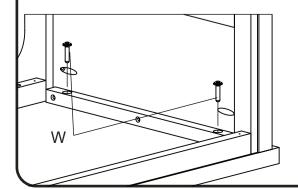

3. FINISH THE ATTACHMENT OF THE RIGHT SIDE PANEL BY INSTALLING (2) SHORT BOLTS (PART W) AS SHOWN, TIGHTEN WITH THE M4 ALLEN WRENCH.

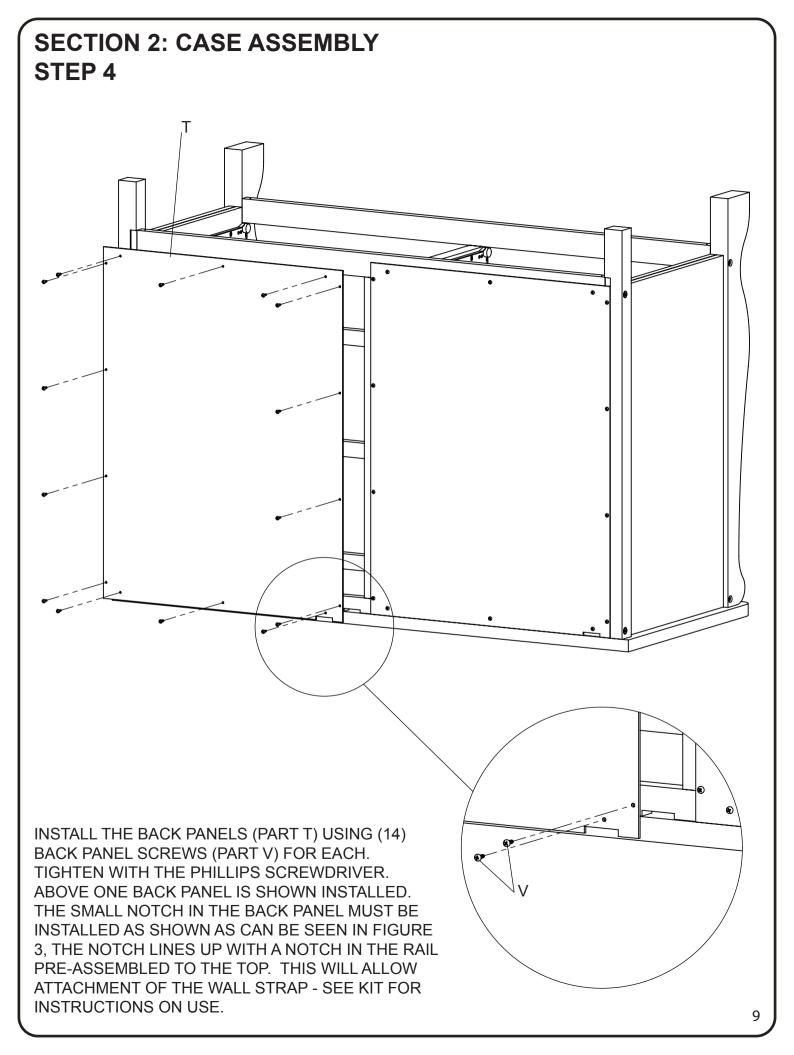


# SECTION 2: CASE ASSEMBLY STEP 5

SET THE CASE UPRIGHT (FEET ON THE GROUND) THE CASE IS HEAVY, THIS MAY REQUIRE (2) PEOPLE.

INSTALL THE DRAWERS BY PLACING THE WHEELS ON THE DRAWER BEHIND THE WHEELS ON THE CABINET. PUSH THE DRAWER IN.

BE SURE THAT THE ASSEMBLED LEFT DRAWERS GO ON THE LEFT SIDE AND THE ASSEMBLED RIGHT DRAWERS GO ON THE RIGHT SIDE. SEE FIGURE 4.

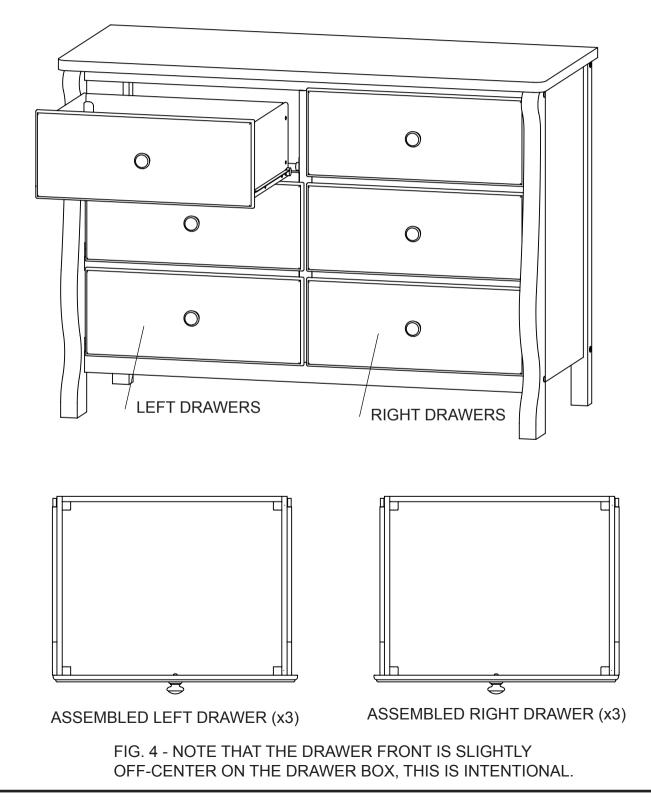



TO SECURE THE DRESSER TO THE WALL, PLEASE REFER TO THE INSTRUCTIONS IN THE PROVIDED WALL STRAP KIT.

**Delta** Children's Products Customer Service: Web Site: www.deltachildrensproducts.com Delta Children's Products 114 West 26th Street New York, NY 10001 Tele.212-645-9033

**Warranty:** This Delta product is warranted to be free from defects for a period of 90 days from the date of purchase under normal use. This warranty extends only to the original retail purchaser and is valid only when supplied with proof of purchase, or if received as a gift, when the registration is on file with Delta.

To register your product for important safety alerts and updates to your product please visit **http://deltaenterprise.com/register.asp** 

Please do not return this item to the store before contacting us about missing parts or with any questions.

In the event that you need to contact our customer service department please have the Style Number and Lot Number available. To report a problem, please log on to

**www.deltachildrensproducts.com** and click the Customer Service Tab, or log on to **www.deltaenterprise.com/customer\_service.asp**, or contact us by phone at (212) 645-9033.

Use the space below to make note of those numbers. They can be found on the label on the back of the product.

Style No.:	
Lot No. :	
Pack Date:	
Date of Purchase:	(you should also keep your receipt)