


READ ALL INSTRUCTIONS **BEFORE**ASSEMBLY AND USE.

KEEP INSTRUCTIONS FOR FUTURE USE.△ADULT ASSEMBLY REQUIRED

DUE TO THE PRESENCE OF SMALL PARTS DURING ASSEMBLY, KEEP OUT OF REACH OF CHILDREN UNTIL ASSEMBLY IS COMPLETE.

BENTLEY 6 DRAWER DRESSER

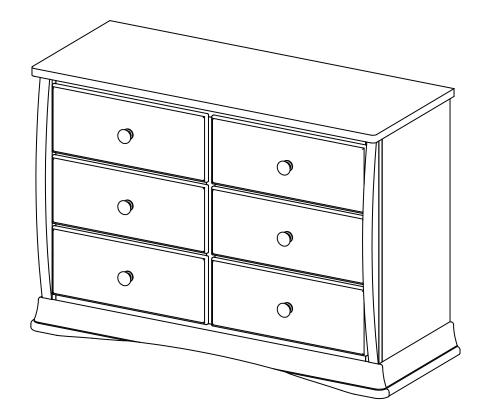

THIS PRODUCT IS NOT INTENDED FOR INSTITUTIONAL OR COMMERCIAL USE.

STYLE No: 75106-

COLOR

A



When contacting Delta Consumer Care you will need to reference the above number.

Consumer Care:

www.deltachildrensproducts.com

Delta Children's Products 114 West 26th Street New York, NY 10001 Tele.212-645-9033

To register your product for important safety alerts and updates to your product please visit **www.deltachildrensproducts.com** and click on Product Registration.

21738-R2, May 26,2011

∆WARNING:

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- •Place heaviest items in the lowest drawers.
- •Unless specifically designed to accommodate, **do not** set TV's or other heavy objects on the top of this product.
- •Never allow children to climb or hang on drawers, doors,or shelves.
- •Never open more than one drawer at a time.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.


- ·Always monitor your child's activity when in the nursery.
- -Do not allow standing in drawers.
- **Do not** allow standing on top of this product.
- -Accessory Items must be securely fastened to this product according to the instructions provided with those items.
- •To avoid head injury, do not allow children to play underneath open drawers.
- •Do not leave drawers open when not in use.


NOTES ON ASSEMBLY:

- -During the assembly process whenever using screws or bolts, check each by placing the screw/bolt on the diagram of the item which is drawn actual size and design. Be sure to use the proper size and shape specified in the instructions.
- -To assemble this unit you may be required to place the unit on it's side and face. It is strongly recommended that assembly is done on a soft, non-abrasive surface to avoid damaging the finish.


NOTES ON CARE AND MAINTENANCE:


- **Do not** scratch or chip the finish.
- Inspect the product periodically, contact delta children's products for replacement parts or questions.
- **Do not** store the product or any parts in extreme temperatures and conditions such as a hot attic or a damp, cold basement. These extremes can cause a loss of structural integrity.
- -To preserve the luster of the high quality finish on your product, it is recommended to place a doily or felt pad under any items you place on the finish.
- -Clean with a damp cloth, then a dry cloth to preserve the original luster and beauty of this fine finish.
- -Do not use abrasive chemicals.
- -Do not spray cleaners directly onto furniture.
- -Lift slightly when moving on carpeting to prevent leg breakage.
- -Use of a vaporizer near furniture will cause wood to swell and finish to peel.

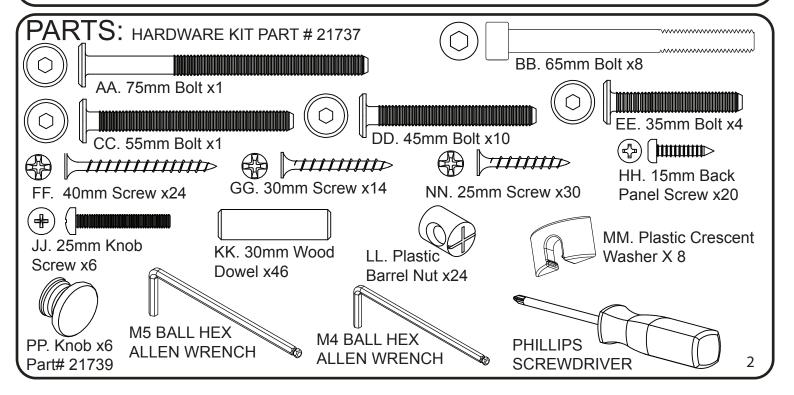

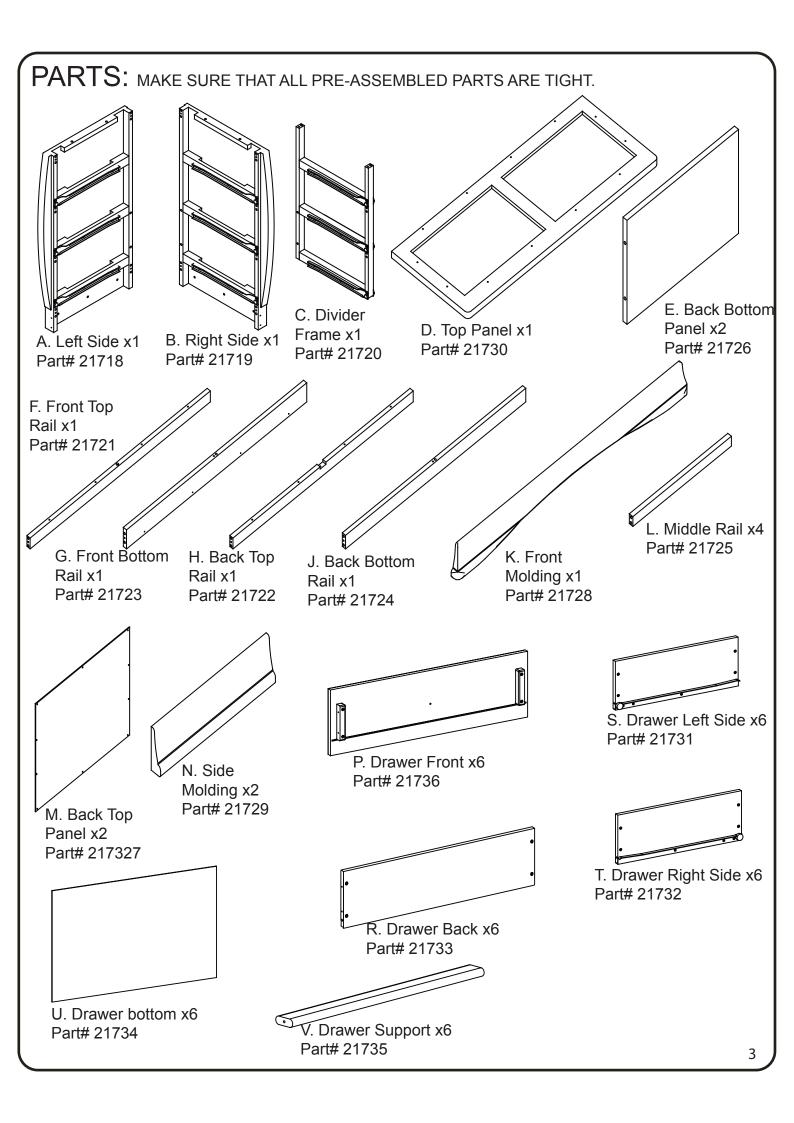


HARDWARE SYSTEM - REVIEW BEFORE ASSEMBLY

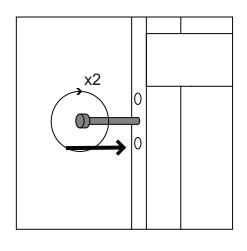


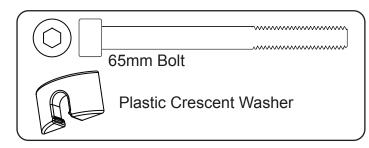

1. Install (1) 65mm Bolt into each threaded insert by turning it ONLY (2) FULL TURNS. Install all bolts in one side before continuing.


2. Align the bolt with the hole in the end of the rail, align the dowels in the end of the rail with the with the holes in the post. Slide together until tight.

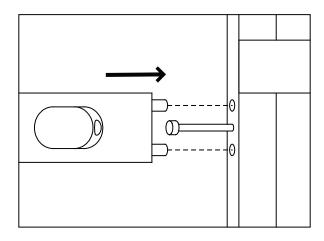


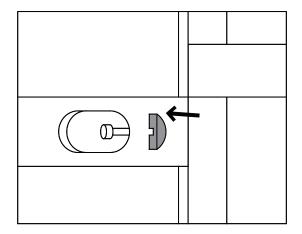


3. Slide the Plastic Crescent Washer over the exposed bolt, behind the head of the bolt. Tighten the bolt with the M5 Allen Wrench provided.

Ensure all bolts are tightened.

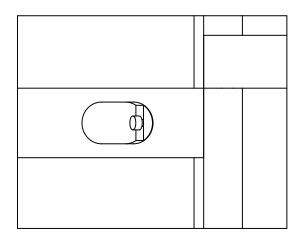

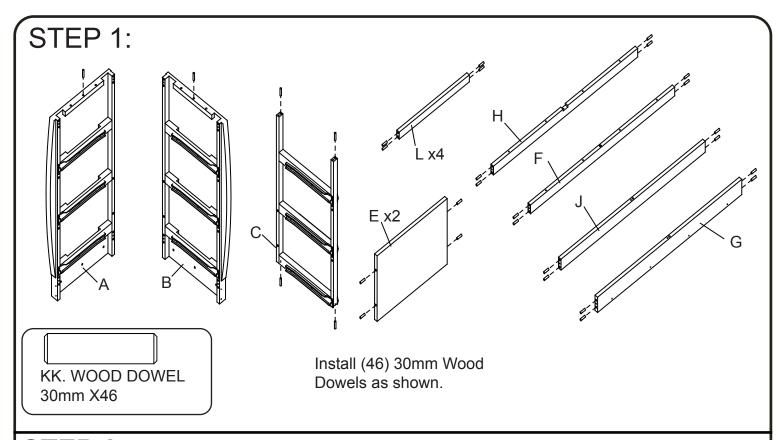

STEP 2:

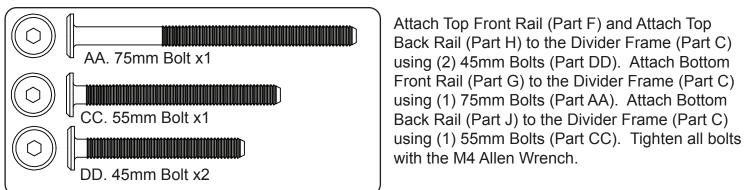

NOTE:Slots face inside


H DD DD F


C C F


CC AAA

CC AAA

S 5

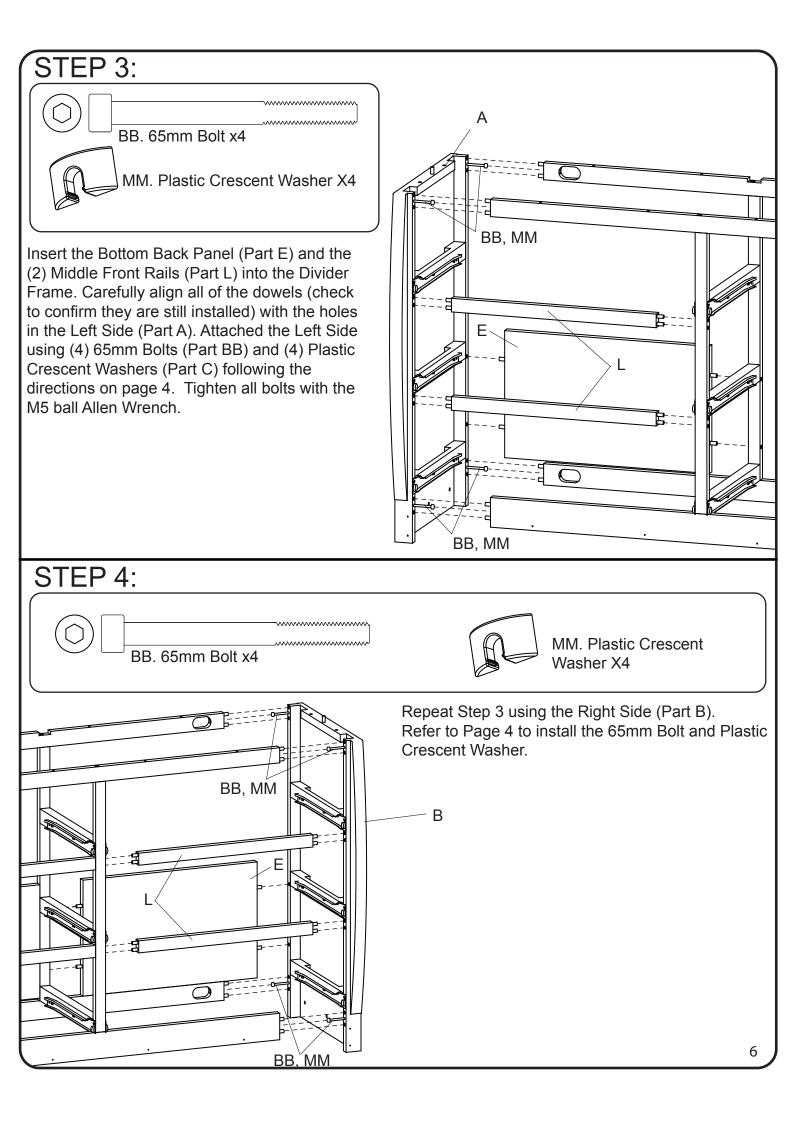

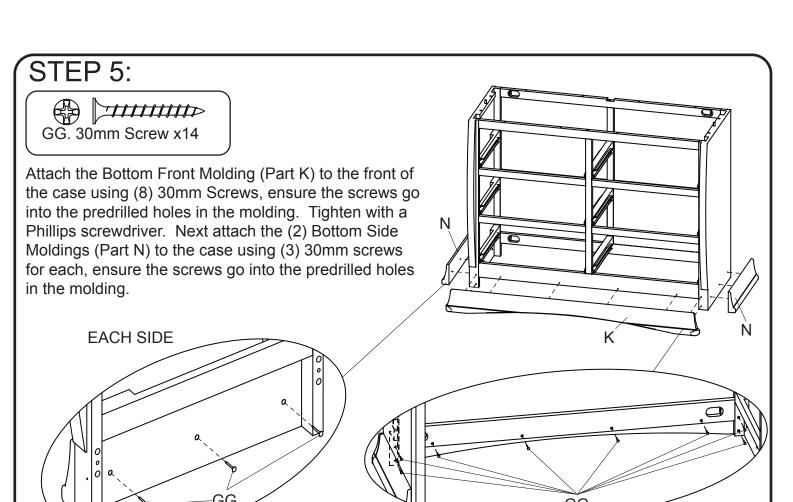


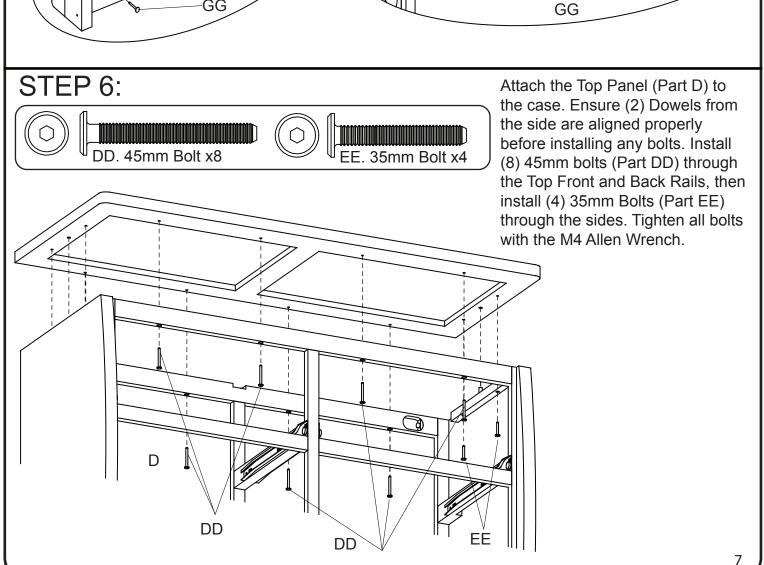

STEP 7:

HH. 15 mm Back Panel Screw x20

Attach (2) Back Panels (Part M) using (20) Back Panel Screws (Part HH). Tighten with a Phillips Screwdriver.

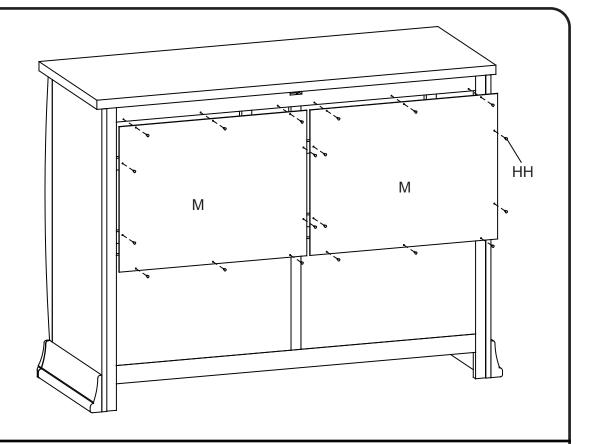


STEP 8:



FF. 40mm Screw x24




LL. Plastic Barrel Nut x24





NN. 25mm Screw x30

1. Attach the Right and Left Drawer Sides (Parts S and T) to the Drawer Back (Part RR) with (4) 40mm Screws (Part FF) and (4) Plastic Barrel Nuts (Part LL). Note: grooves in bottom must align. Tighten with Phillips Screwdriver.

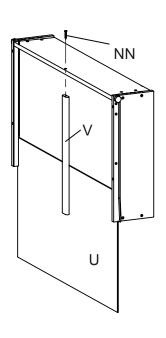


2. Slide drawer bottom (part u) into the grooves. Install the Drawer Support (Part V) using (1) 25mm Screw (Part NN). Tighten with the Phillips Screwdriver.

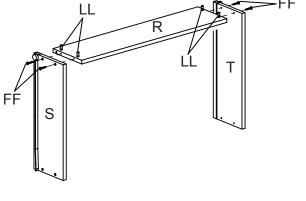

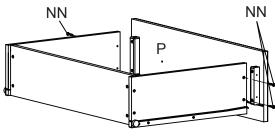

3. Attach the Drawer Front (Part P). Using (4) 25mm Screws (Part NN). Be sure the bottom panel is in the groove. Tighten with the Phillips Screwdriver.

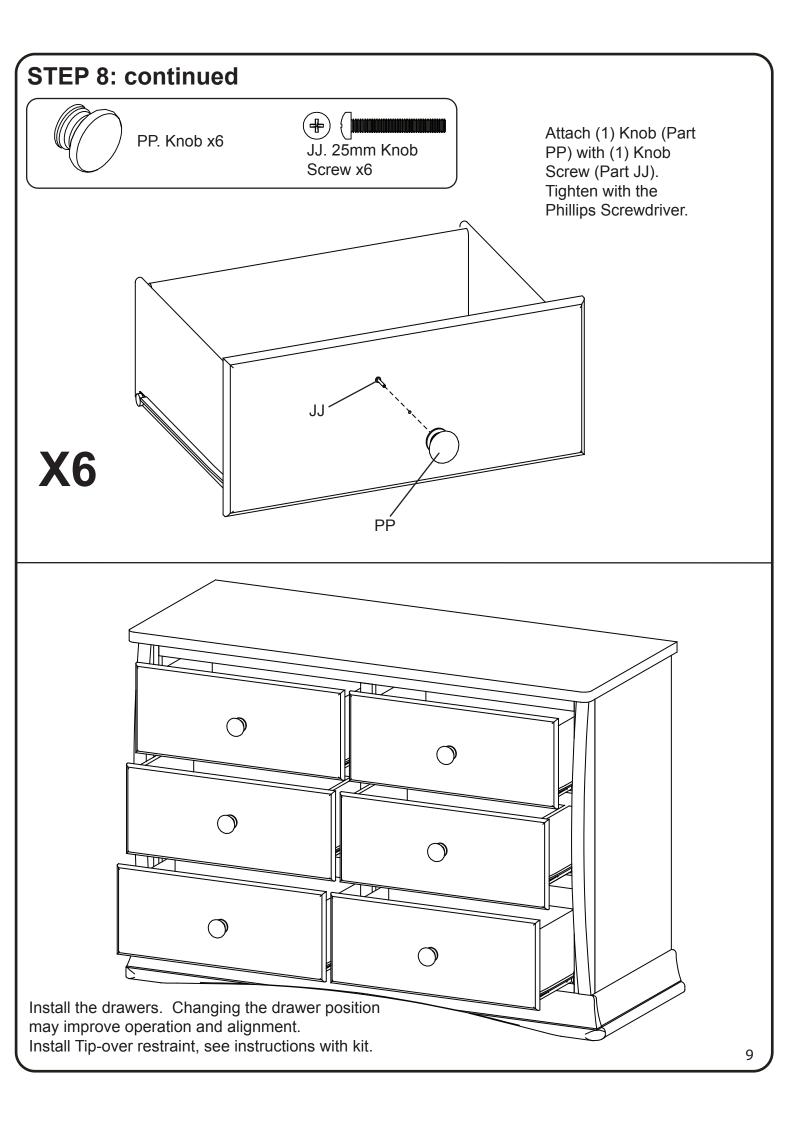



Children's Products

Consumer Care:

www.deltachildrensproducts.com
Delta Children's Products
114 West 26th Street
New York, NY 10001
Tele.212-645-9033

Warranty: This Delta Case is warranted to be free from defects for a period of 90 days from the date of purchase under normal use. This warranty extends only to the original retail purchaser and is valid only when supplied with proof of purchase, or if received as a gift, when the registration is on file with Delta.

Please visit **www.deltachildrensproducts.com** and click on Product Registration to register your product for important safety alerts and updates.

For questions or comments, please log on to **www.deltachildrensproducts.com** and click Consumer Care, or contact us by phone at (212) 645-9033.

In the event that you need to contact our Consumer Care department please have the Style Number and Lot Number available. If they are not printed below they can be found on the label on the Back panel.

Use the space below to make note of those numbers.

STYLE No: 75106-	COLOR	REV FACTORY
Lot No. :		
Pack Date:		
Date of Purchase:	(you shou	ld also keep your receipt)