



# Active Collar Pro

Rechargeable & Waterproof  
Dog Training System

**User Manual**

**606i/606i-2**

[www.ropricorp.com](http://www.ropricorp.com)

# RopriPet 606i/606i-2 Active Collar Pro

## Rechargeable & Waterproof Dog Training System

- Rechargeable Transmitter & Receiver Unit
- 3000 Identity Codes to prevent conflicts with other training collars
- Audible tone for location or Sound Training
- 16 Levels of Vibration and Static Stimulation Correction
- Large backlit LCD Screen
- Waterproof Receiver Unit
- Train up to 2 Dogs with single transmitter (606i-2)
- Durable and Adjustable TPU strap
- Fits Small, Medium and Large Dogs
- Range up to 450 Yards
- Battery saving auto power off

### Important - Please Read

Thank you for choosing the **RopriPet 606i/606i-2 Active Collar Pro** Rechargeable and Waterproof Training Collar. This collar will give you years of trouble free service. However, in the unlikely event that you experience a technical problem with your **Active Collar Pro**, you are covered by our 12-month warranty.

At **RopriPet** we support training through positive reinforcement. Do not use this collar in a manner that will instill fear or inflict pain on your dog. The **RopriPet 606i/606i-2 Active Collar Pro** is best used to gain your dog's attention during training.

If you have any questions, please contact us at [CustomerService@ropricorp.com](mailto:CustomerService@ropricorp.com)

# Contents

Before you Start	2
Identify the Components	3
Operating Elements	4
How the System Works	6
Setup and Operation	7
Testing the Receiver Collar	9
Fit the Receiver Collar to Your Dog	10
Pairing Remote Transmitter and Receiver Collar	11
Finding the Best Stimulation / Vibration Level for Your Pet	12
Troubleshooting	13
Regular Maintenance Tips	13
Frequently Asked Questions	14

## Before You Start

### **READ the owner's manual!**

- Charge both the transmitter and receiver for at least four hours before use.
- Please read the entire manual before you start in order to take advantage of all the features of your Active Collar Pro Training System, to avoid damage to the unit, or worse, harm to your pet.

### **Warning**

Do not use if your dog displays aggressive behavior toward other animals or humans. If you are unsure whether this training system is appropriate for your dog, consult your vet or a certified trainer before use.

## General Notes and Tips

- You will notice a slight rattling noise from the receiver collar. THIS IS NORMAL! It is part of the motion sensor that activates the collar from power save mode.
- The best stimulants are the vibration or audible tone modes. Though it is not harmful, Static Stimulation mode is best used only in the most extreme circumstances.
- The Active Collar Pro is not a replacement for your dog's regular collar. Do not attach a leash to the collar as the metal prongs may place excessive pressure on your dog causing discomfort.
- When using a separate collar, do not cover or put pressure on the Active Collar Pro.
- Use the Active Collar Pro to eliminate or train one behavior at a time. Dogs can easily become confused. Be consistent. Once you find the stimulant that works best with your dog, keep using it!
- Keep training sessions short and consistent. Daily for 15 to 20 minutes at a time. Reward and praise your dog's good behavior!
- If your pet reacts by hiding or acting in a fearful manner, change the training session - do something simple such as a 'sit' command, followed by praise and a reward.
- If you notice a rash or soreness, discontinue use of the Active Collar Pro for 48 hours. If the irritation continues, consult with your vet for advice and/or treatment.
- The Test Bulb Kit is handy for tightening the contact points onto the receiver. Note: Do not over tighten. Stop when the contact points feel snug.
- The rechargeable remote training collar has a range of up to 450 yards. Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range.
  
- **REMEMBER, BE CALM AND ASSERTIVE AND USE POSITIVE REINFORCEMENT TECHNIQUES!**

# Identify the Components

## 606i



Remote Transmitter



Collar Receiver



Charging Adapter



Test Light Tool



TPU Collar



Contact Points



Charging Cable

## 606i-2 Additional Features



Additional Collar Receiver



Additional TPU Collar



Additional Contact Points

# Operating Elements



## Buttons and Body


1. Antenna
2. Red LED Indicator Light
3. Tone Button (Yellow)
4. Vibration Button (Blue)
5. Static Stimulation Button (Red)
6. Channel Selection
7. Intensity Level Button
8. Charging Port

## Icons and Symbols

- 00 Intensity Level
- ⚡ Static Charge
- |||| Vibration
- 🔊 Audible Tone
- ||||| Battery Indicator
- 1 Channel 1
- 2 Channel 2
- Ⓟ Pairing Mode

# Operating Elements

## Receiver

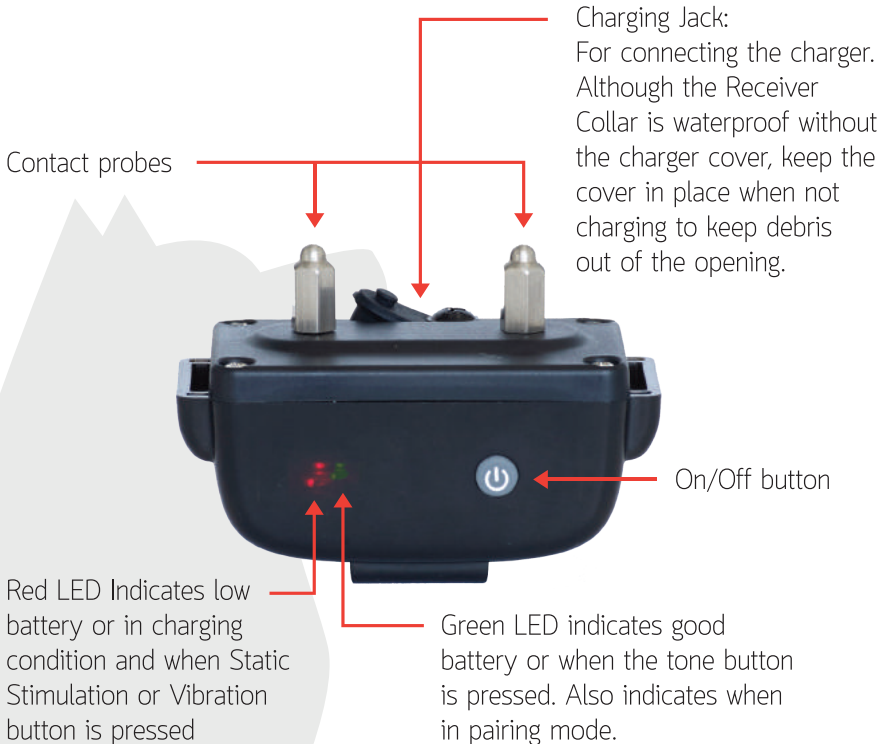

## How the System Works

Now you will experience the difference the RopriPet Active Collar Pro training system can make. Spend less time training and more time enjoying life with your dog. The Active Collar Pro is easy to use with its advanced digital display that tells you exactly what level of stimulation/vibration you are using.

The Active Collar Pro assists you in controlling your pet without a leash, to a range of up to 450 yards. With the push of a button, a signal sent from your remote activates your dog's Receiver Collar. He receives a safe but annoying stimulation drawing his attention back to you. He'll quickly learn the association between his behavior and your commands; in no time, you'll have a better-behaved pet. The Active Collar Pro has been proven safe, comfortable, and effective for both small and large dog breeds.

- **IMPORTANT:** The Active Collar Pro has a range of up to 450 yards. Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range.



# Setup and Operation

## Setup: Charge the Remote Transmitter



- Your Active Collar Pro system arrives from the factory with minimal charge which was used for testing purposes.
- Initially, charge the Remote Transmitter for 4 hours before first use.
- Insert the Cable Jack connector into the Remote Transmitter.
- Connect the Charging Adapter to the Charging Cable and plug the charger into a standard outlet.
- The **Red LED** Indicator should be lit which indicates charging.
- The Battery Indicator will scroll and the LED Indicator light is solid Red while charging.
- The Battery Indicator will become solid and the LED Indicator Light flashes when fully charged.
- The Battery Indicator on the Remote Transmitter will show one bar when it needs charging.

## Operation: Remote Transmitter

- To power up the Remote Transmitter press any button.
- The display stays on for approximately 30 seconds after a button is pressed. After 30 seconds of no activity, the blue backlight shuts off, and if there is no activity for a further five minutes, the display shuts off and the Remote Transmitter switches into battery conservation mode.

## The symbols on the display are explained below:

Static Stimulation:



Vibration:



Audible tone:



Remote LED:



Indicates the Active Receiver Collar:



Indicates Battery level:



Indicates Pairing Mode:



- To select different levels of Vibration or Static Stimulation, press the **(+/-) button** on the Remote Transmitter.
- Press the **1/2 button** to select between Receiver Collars. (Applicable to **606i-2**).
- In **STANDBY MODE**, press any button to wake the transmitter.

## Setup: Charge the Receiver Collar



- Your Active Collar Pro system arrives from the factory with minimal charge which was used for testing purposes.
- Initially, charge the Receiver Collar for 4 hours before first use.
- Lift the rubber cover and insert the Cable Jack connector into the charging hole.
- Connect the Charging Adapter to the Charging Cable and plug the charger into a standard outlet.
- The **Red LED** will be show solid red which indicates charging is in progress.
- Once it is fully charged, the LED Indicator will turn solid Green.

## Operation: Turn the Receiver Collar ON

- Press and hold the **On/Off Button** until the **Green LED** light comes on. (This takes approximately one second.)
- Release the **On/Off Button**.
- In normal mode, the **Green LED** will flash once every 5 seconds, indicating the **Receiver Collar** is on and ready to receive a signal from the Remote Transmitter.

## Operation: Turn the Receiver Collar OFF

- Press and hold the **On/Off Button** until the **Red LED** light shuts off. (This takes approximately three seconds.)
- Release the **On/Off Button**.
- Note: To extend the life of the batteries, turn the **Receiver Collar** off when it is not in use. The table below explains the **Green** and **Red LED** modes when in operation:

Receiver Collar Function	Green LED Response
Power on	Flashes once
Normal operation - Good battery	1flash every 5 seconds
Training tone	On length of button press
In pairing position	Flashes once every second within 16 seconds
Pairing Complete	Flashes rapidly five times

Receiver Collar Function	Red LED Response
Power off	On for 3 seconds
Low battery	Flashes rapidly
Static stimulation/vibration	While button pressed

## About Rechargeable Batteries

- The rechargeable Lithium Ion batteries are not memory sensitive and do not require depletion before charging.
- The batteries come partially charged from the factory, and will require a full charge (approximately 4 hours) before the first use.
- Always keep batteries away from flame.
- When storing the unit for long periods, regularly give batteries a full charge. This should be done once every 4 to 6 weeks.
- The Remote Transmitter and Receiver Collars are equipped with a safety feature to prevent over charging.
- If your equipment has not been charged for an extended period, you may experience a decrease in battery life. This may occur for the first few uses. Afterwards, the battery life will return to previous capacity levels. You should expect hundreds of recharge cycles from your batteries. However, all rechargeable batteries lose capacity over time relative to the number of recharge cycles they experience. This is normal. If your operating time drops to half of the original life, contact the Ropri Customer Service Team.

## Testing the Receiver Collar

### Vibration Test

- Press the Vibration Button (Blue), the Receiver Collar will vibrate indicating the Vibration feature works.

### Audible tone Test

- Press the Tone Button (Yellow), the Receiver Collar will emit an audible tone indicating the Audible tone feature works.

### Static Stimulation Test

- Take the included Test Light Tool and gently press it onto the Receiver Collar's Contact Points. Ensure the Contact Points make contact with the Test Light Tool's wires.
- Press the Static Stimulation Button (Red) and the test bulb will light up indicating the Static Stimulation feature works.



## Fit the receiver collar to your dog

**Important:** The proper fit and placement of your Receiver Collar is important for effective training. The Contact Points must have direct contact with your pet's skin on the underside of his neck.

To ensure a proper fit, please follow these steps:

- Make sure that the Receiver Collar is turned off.
- Have your pet standing or sitting comfortably.
- Place the Receiver Collar on your dog's neck close to the ears. Center the Contact Points underneath your dog's neck, touching the skin. Note: It is sometimes necessary to trim the hair around the Contact Points to make sure that contact is consistent.
- **CAUTION: Do not shave your pet's neck as this may increase the risk of skin irritation.**
- The Receiver Collar should fit snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck.
- Allow your pet to wear the collar for several minutes then recheck the fit. Check the fit again as your pet becomes more comfortable with the Receiver Collar.
- Trim the TPU Collar as follows:
  - a. Mark the desired length of the TPU Collar with a pen. Allow for growth if your pet is young or grows a thick winter coat.
  - b. Remove the Receiver Collar from your pet and cut off the excess.
  - c. Before placing the Receiver Collar back onto your pet, seal the edge of the cut by applying a flame along the frayed edge.



# Pairing the Remote Transmitter and Receiver Collar

Familiarize yourself with the following steps before commencing with the pairing procedure

If your Receiver Collar does not beep when the Tone Button (yellow) of the Remote Transmitter is pressed, or if you feel the Receiver Collar is not responding to the Remote Transmitter, follow these steps to pair:



- Place the Remote Transmitter into Pairing Mode by pressing the **1/2 Button** for 3-5 seconds until the Digital Display shows **P**.
- With the Receiver Collar off your pet, press and hold the **Power Button** to turn the Receiver Collar **Off**. The **Red LED** will stop glowing.
- Now press and hold the **Power Button** on the Receiver Collar until the **Green LED** begins to flash. Release the Power Button and the **Green LED** will flash every second on the Receiver Collar. This continues for 16 seconds, during which time pairing procedure should be completed.
- While the **Green LED** on the Receiver Collar is still flashing, simultaneously press and hold the **Up and Down (+/-) Buttons** on the Remote Transmitter until the **Green LED** flashes rapidly for 5 times on the Receiver Collar, indicating it has learned the Transmitter ID.
- Press and hold the **1/2 Button** again to complete and exit Pairing.
- Press any of the Static Stimulation/Vibration/Tone Buttons on the Remote Transmitter. The Receiver Collar should respond accordingly, verifying that it is paired with the Remote Transmitter.

## Two Dog System (606i-2)

Note: If you purchased the Active Collar Pro 606i and wish to add a second Receiver Collar, extra Receiver Collars are available from RopriPet (Visit [ropricorp.com](http://ropricorp.com)).

## To Add the Second Receiver

On the Remote Transmitter:

- Press 1/2 Button and change to the other Channel for Dog 2.
- Pair the second receiver following the pairing procedure detailed above.
- Turn on the Receiver Collar for Dog 2, press any Static Stimulation/Vibration/Tone Buttons to verify function.

# Finding the Best Stimulation / Vibration Level for Your Pet

**Important: Always start at the lowest level and work your way up.**

The RopriPet Active Collar Pro Training System has 16 Static Stimulation/Vibration Levels. This allows you to choose the Stimulation/Vibration that is best for your pet.

Once you have placed the Receiver Collar on your pet, it is time to find the Static Stimulation/Vibration Level that is best for him. This is called the Recognition Level.

A slight change in your pet's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is best for him.

## **Follow the steps below to find your pet's Recognition Level:**

- Starting at Level 1 on the Digital Display, press the Static Stimulation Button (red) or Vibration Button (blue) continuously for 1 to 2 seconds.  
Note: When the Static Stimulation /Vibration Button is held down for 10 consecutive seconds, the Transmitter will "time-out", and you must release and press the button again before additional stimulation/vibration can be delivered.
- If your pet shows no reaction, repeat the Static Stimulation/Vibration Level several times before moving up to the next level.  
Move up through the Static Stimulation/Vibration Levels until your pet reliably responds to the Static Stimulation/Vibration.
- **Your pet should not vocalize or panic when receiving Static Stimulation/Vibration. If this happens, the Static Stimulation/Vibration level is too high and you must go back to the previous level and repeat the process.**
- If your pet continues to show no response at Level 16, check the fit of the Receiver Collar. If this still does not yield any results, your pet's hair may need to be trimmed (not shaved) around the Contact Points.

# Troubleshooting

## My RopriPet Active Collar Pro Training System does not appear to be working?

- Charge the Remote Transmitter and Receiver Collar for approximately 4 hours.
- Make sure the Remote Transmitter is turned ON by pressing any button.
- Make sure the Contact Points on the Receiver Collar are placed snugly against your pet's skin.
- If all of above does not work, you can re-pair the Remote Transmitter and Receiver Collar. (Refer "Pairing Remote Transmitter and Receiver Collar" of this Owner's Manual)

## My RopriPet Active Collar Pro Remote Transmitter does not work

- Check if the Battery Indicator of the Remote Transmitter is low, the Battery Indicator will show up on the right side of LCD screen.
- The Remote Transmitter will automatically go into STANDBY MODE if no instruction is detected within 10 seconds. Press any button to re-activate the Remote Transmitter.

## The Red LED Indicator on my RopriPet Active Collar Pro Receiver Collar starts flashing rapidly when I turn it on

- The Receiver Collar LED will flash rapidly on low battery status. Charge it for approximately 4 hours until it shows a solid green light.

If you continue to experience problems, please contact us at

[CustomerService@ropricorp.com](mailto:CustomerService@ropricorp.com)

## Regular Maintenance Tips

- Check Contact Points for tightness weekly
- Clean Contact Points with alcohol weekly
- Check your dog's neck for irritation every time you place the collar on his neck (do not leave the collar on for extended time periods (ie: more than 2 hours))
- Charge both the Remote Transmitter and Receiver Collar at least once a month, especially when it's not in use to prevent damage to the rechargeable batteries.

## FAQ

**There's a rattling noise coming from the receiver, is it broken?**

Not at all, this is the mechanism that wakes the collar from 'sleep mode' and is perfectly normal.

**Once my pet is trained, does he have to continue wearing the Receiver Collar?**

No, however you might want to reinforce training with the Receive Collar from time to time to keep your dog familiar with the regime.

**Can I upgrade the RopriPet 606i Active Collar Pro System to the 606i-2 for two dogs?**

Yes, you can simply contact us directly or through our store on Amazon.

**How long can I continuously deliver Vibration or Static Stimulation to my dog?**

The maximum amount of time you can deliver Vibration or Static Stimulation to your dog continuously is about 10 to 15 seconds. After this time, the Remote Transmitter will time-out and the Vibration or Static Stimulation must be released and pressed again. **We do not advise overuse of the Static Stimulation mode.**

**Is the RopriPet Active Collar Pro waterproof?**

Yes, the RopriPet Active Collar Pro is waterproof to international standard IP67.

**What do I do if my dog's neck becomes red and irritated?**

Discontinue use of the product immediately for 48 hours. If the condition persists beyond 48 hours, please consult your vet. You may resume the use of the product and training once the skin is healed.

**Can I attach a leash to the Receiver Collar?**

No, this can result in pulling the Contact Points too tightly against your dog's neck. Use a separate collar placed above the Receiver Collar.

**When should I recharge the Remote Transmitter and Receiver Unit?**

Remote Transmitter: The Battery symbol will flash.

Receiver Unit: The Red LED Indicator will flash rapidly.

**How long can I leave the Receiver Collar on my dog?**

The Collar is not designed to be worn continuously. We recommend the Collar not be worn for more than a few hours (1-2 hours) during a 24-hour period.

**How long should the training session for my dog be?**

Training sessions should be kept short and positive. Each session should last no more than 10-15 minutes.

**Will I get exactly 450-yard range from my RopriPet Active Collar Pro?**

Not always. The range you get will vary according to terrain, weather, vegetation, as well as transmission from other radio devices.





## For More Information and Training Tips:

- Check our website at [www.ropricorp.com/ProductSupport](http://www.ropricorp.com/ProductSupport)
- Contact us anytime at [CustomerService@ropricorp.com](mailto:CustomerService@ropricorp.com)
- Love social media? Follow us on:



606i Owner's Manual V1.2 Feb 2017