

TIMERS

Utility Return Transfer Timer

Pins 3,4&5 Open - 129 Seconds Pins 3&4 Shorted - 30 Seconds Pins 4&5 Shorted - 600 Seconds

Utility Loss Timer

Pins 6&7 Open - 5 Seconds Pins 6&7 Shorted - 30 Seconds

Generator Cool Down Timer

Pins 8,9 & 10 Open - 10 Seconds Pins 8&9 Shorted - 300 Seconds Pins 9&10 Shorted - 600 Seconds

Use shorting pins provided if changes are required


Preset Timers

The KGC-1 is factory preset as follows: 5 second utility loss delay before starting the generator, 15 second delay before transferring after generator voltage is detected and a 2 minute delay before switching back to utility after power is restored. The generator ON contacts will open 10 seconds after the power transfers back to utility.

Optional weekly exercise timer available - Consult factory




Generac® RTS to 2-Wire Start Installation

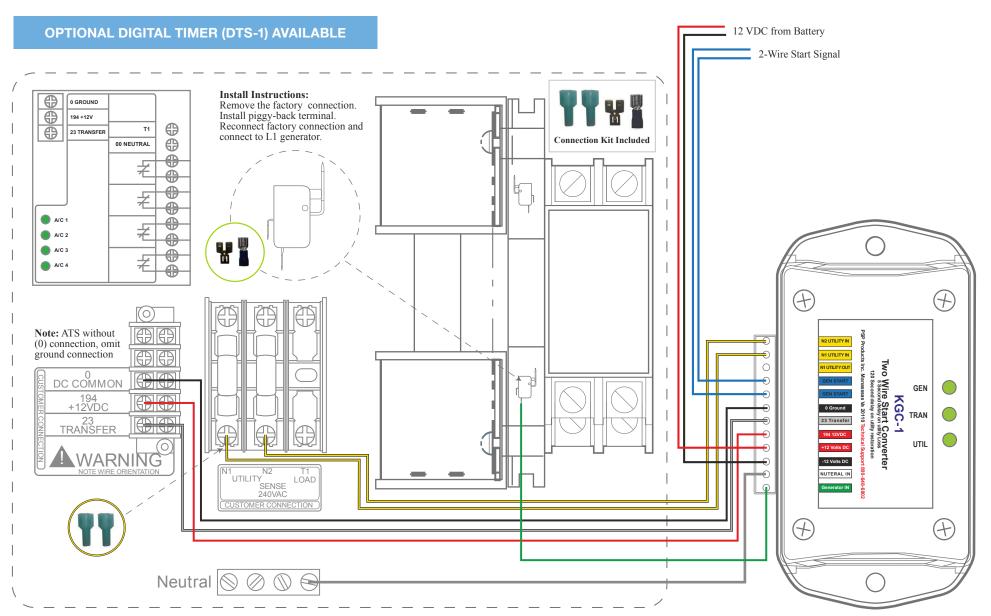





OPTIONAL DIGITAL TIMER (DTS-1) AVAILABLE

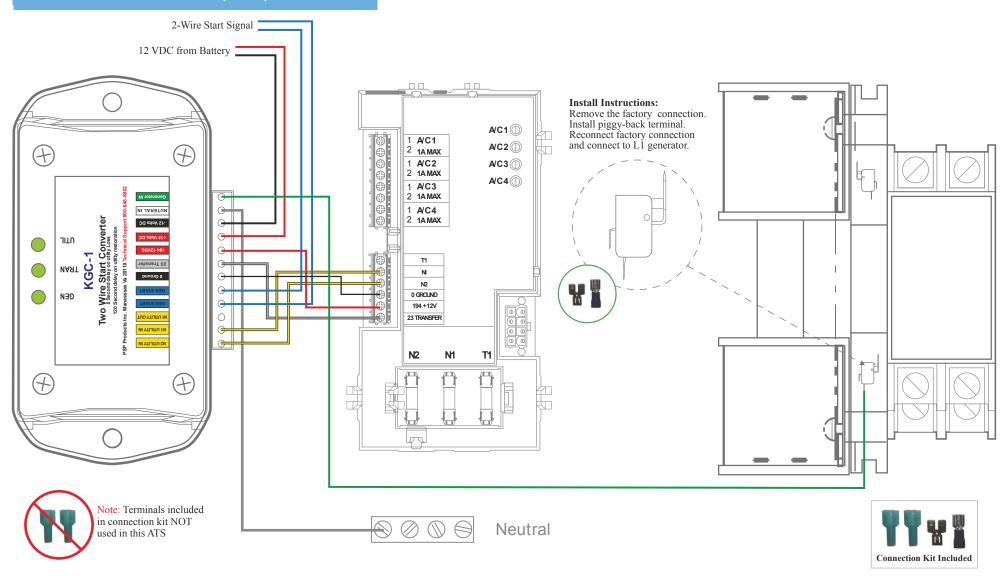



Generac® GenReady Panel to 2-Wire Start Installation

