



PARTS LIST FOR COLEMAN LANTERNS
228C, 228D, 228E
INSTANT LIGHT GASOLINE TWO MANTLE
(Model 228E Shown)

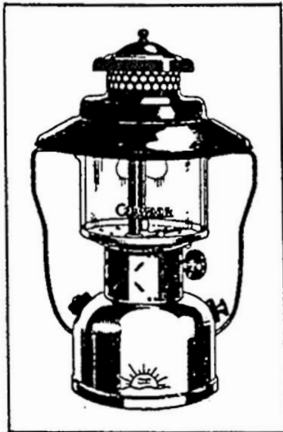

**Model 228C,
228D, 228E**

MODEL	FINISH	
	Fount	Ventilator (Porcelain)
228C	Green	Green (8 3/4")
228D	Nickel	Green (8 3/4")
228E	Green	Green (8 3/4")

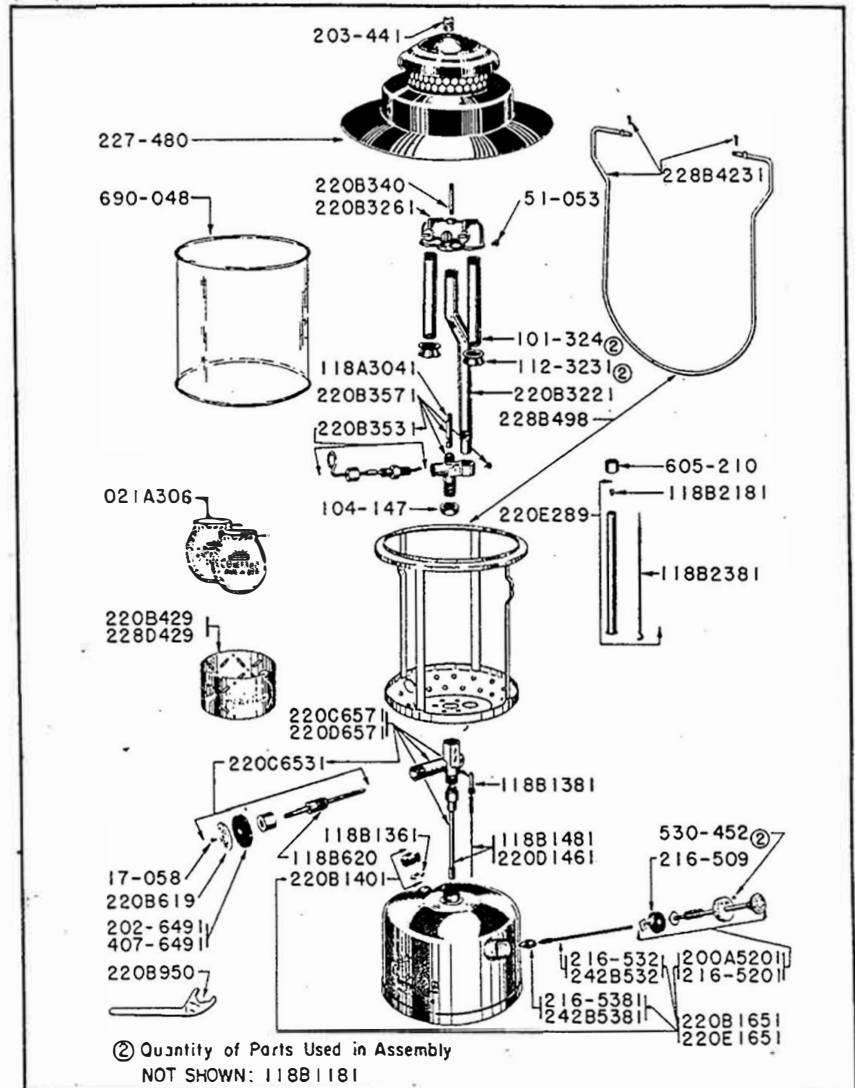

PART NUMBER	DESCRIPTION	USED ON MODELS
17-058	Machine Screw (#4—36x 1/4 Rd. Hd. Brass)	
021A306	(21A) Mantle (Pk'd 2)	
51-053	Machine Screw (#6—32x 1/8)	
101-324	Tube (Burner)	
104-147	*Nut (27/64—27 Hex)	
112-3231	Cap (Burner)	
118A3041	Eccentric Block	
118B1181	Fuel Tip (Mk'd AB)	228C only
118B1361	Gasket (Filler Plug)	
118B1381	Needle (Fuel & Air)	
118B1481	Tube Assembly (Fuel & Air)	228C only
118B2181	Gas Tip (Mk'd V)	
118B2381	Needle Assembly	
118B620	Packing (Valve Stem)	
200A5201	Plunger Assy. (Pump with Screws)	228D, 228E only
202-6491	Wheel (Valve)	228E only
203-441	Nut (Ball)	
216-509	Leather (Pump)	
216-5201	Plunger Assy. (Pump)	228C only
216-532	Stem (Air)	228C only
216-5381	Check Valve	228C only
220B1401	Filler Plug	
220B1651	Fount (Complete)	228C only
220B3221	Tube (Air Intake — Brass)	
	*Use 220B950 Wrench	

PART NUMBER	DESCRIPTION	USED ON MODELS
220B3261	Mixing Chamber	
220B340	Rod (Ventilator)	
220B3531	Stem (Tip Cleaner)	
220B3571	Cleaner Assy. (Gas Tip)	
220B3991	Burner	
220B429	Base Rest	228C only
220B619	Disc (Direction)	
220B950	Wrench (Small)	
220C6531	Stem Assembly	
220C6571	Valve (Less Gen. & Cleaner Assy.)	228C only
220D1461	Tube Assy. (Fuel & Air)	228D, 228E only
220D6571	Valve (Less Gen. & Cleaner Assy.)	228D, 228E only
220E1651	Fount (Complete) (T44DL) Generator	228D, 228E only
227-480	Ventilator	
228B4231	Bail	
228B498	Frame & Bail	
228D429	Base Rest	228D, 228E only
242B532	Stem (Air)	228D, 228E only
242B5381	Check Valve	228D, 228E only
407-6491	Wheel (Valve)	228C, 228D only
530-452	Screw (Sheet Metal— #2x 3/8 type Z Bd. Hd.)	228D, 228E only
605-210	Jamb Nut	
690-048	(330) Globe	