

# THE HYBRID KANGAROO

The Hybrid Kangaroo is designed to hold (1) LCD Monitor on the VESA 75 x 75 or 100 x 100mm compatible bracket, a laptop on the shelf and your keyboard and mouse on the main work surface. Your Hybrid Kangaroo is shipped in the down position with the Main Brake tightened. The Hybrid Kangaroo has (2) springs that assist in raising your unit to the standing position and works best when your monitors and keyboard are in place. This reduces the amount of pressure needed to lower the unit. **Always push down with both hands on the horizontal rear rail when lowering the main work surface.**

**A**

**B**

**1.**

**2.**

**3.**

**C**

M4x12 (x4)    M4x30 (x4)

**D**

M6x12 (x4)    M6x30 (x4)

**E**

18X8X20 (x4)

**F**

**NOT REQUIRED**

M6x51 (x2)    Ø8x40 (x2)

**G**

Ø=3mm (x1)

## HOW TO USE THE HYBRID KANGAROO

To move the shelf horizontally closer or farther apart, simply remove the black caps with a flat head screw driver and loosen the bolts attached to the horizontal monitor rail (B) **by a 1/2 a turn** with a 7/16 wrench. Once you have reached the desired position re-tighten the bolts.



To move the mount horizontally closer or farther apart, simply loosen the bolt attached to the horizontal monitor rail (B) **by a single turn with a 5/32 allen wrench**. Once you have reached the desired position tighten the bolt.

**A. Monitor Brake**

**B. Horizontal monitor Rail**

**C. Main Brake**

**D. Lift Here**

**E. Push down here**

optimal location for support leg


To raise the Hybrid, loosen the main brake(C) and lift the main work surface on the sides(D & D). Once you have the work surface at the required height tighten the main brake.

To lower the Hybrid, loosen the main brake(C) and lean into the unit using your upper body weight pushing down with both hands on the horizontal bar at the rear of the main work surface (E & E).

Raise and lower the monitor rail by loosening the monitor brake(A) and either lift up or push down on the horizontal monitor rail(B). Once the monitors reach your desired level, tighten the monitor brake.

- A. Monitor Brake
- B. Horizontal Monitor Rail
- C. Main Brake
- D. Main Work Surface
- E. Work Surface Horizontal Bar


# ADJUST THE STOPPING BOLT

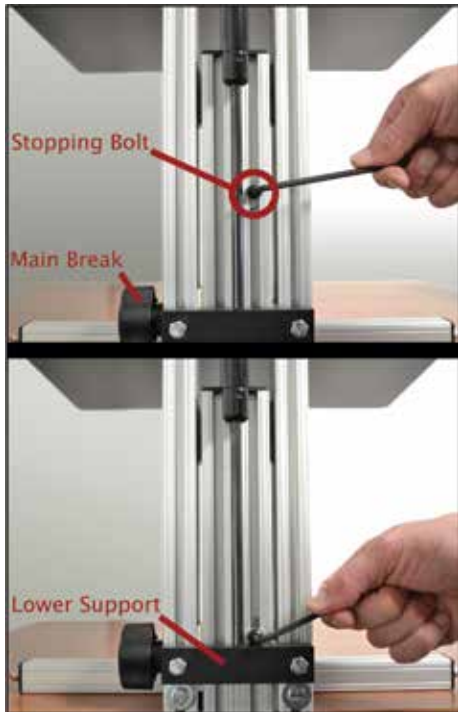

On the back side of your unit you will notice a small bolt located on the lifting tower. This bolt is used as our work surface stopper. It is currently set at 15", the highest our unit should go. This setting is for a 6'2" user on a 30" high desk. If you are shorter than this, raise the unit to your desired height and tighten the Main Brake. Adjust the stopping bolt by loosening the bolt **with one turn** and drop the bolt down to reach the lower support, and re-tighten the stopping bolt.

If you are a taller individual and need to raise the stopping bolt, please note that the work surface can get up to 16 1/2 inches but you will be raising the unit into the oil dampening zone of the spring. This makes it a little more difficult to lower the unit into the seated position when raised to this maximum point.

Our work surface should only be raised to your belt or navel line. This creates a 90-110 degree angle in your elbows which is suggested in the standing position. This will also allow you to lower the unit with ease by simply transferring your upper body weight into the back of the unit.

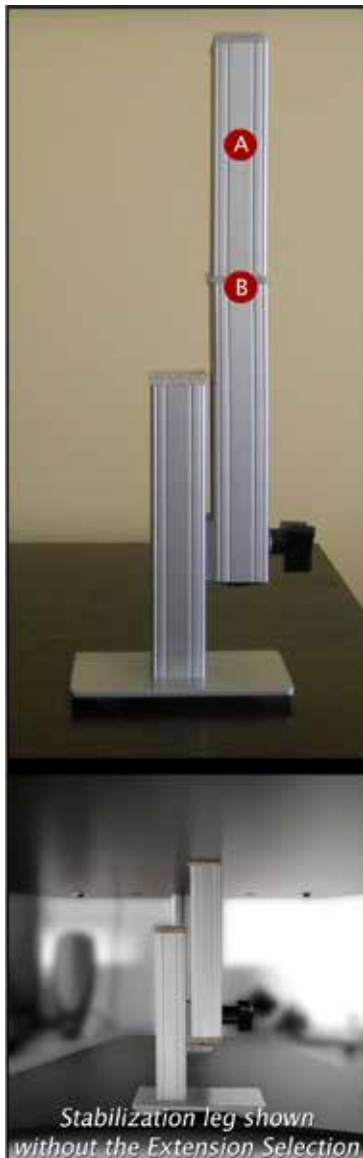

## THE STABILIZATION LEG

Your adjustable height desk top unit comes with an adjustable leg that can be used to give you maximum stability when you are using "The Kangaroo" in the standing position.

Raise the Kangaroo work surface to your desired standing height and tighten the work surface brake.

Place the adjustable leg under the work surface and loosen the adjustable leg brake. Only loosen the brake by a turn or two, too much and the brake will disengage from the slot.

Extend the adjustable leg until it engages the bottom of the work surface and then tighten the adjustable leg brake.

The leg is shipped with the extension section installed to give you additional height adjustment. If this is too tall for your application, simply unscrew the extension selection.

**A** Extension selection

**B** Screws into here

**ALWAYS REMEMBER TO REMOVE THE STABILIZATION LEG BEFORE LOWERING YOUR WORK SURFACE**