


Power Box connections

- 1 Spade 12V DC from Engine battery (15A)
- 2 12V 12V DC+ (from House Fuse Panel 20A)
- 3 GND Ground - (from House Fuse Panel 20A)
- 4 Aux output (2nd zone)
- 5 Aux Control return
- 6 Aux Control send
- 7 Comfort Hot relay + Power
- 8 Comfort Hot relay - ground
- 9 Furnace Power (12V)
- 10 Furnace Ground
- 11 Water Pump +
- 12 Water Pump Ground
- 13 Fan(s) +
- 14 Fan(s) Ground
- 15 RJ45, 8pin Phone cord (Connection to Remote)
- 16 Furnace harness plug



WIFI Diagnostic & Altimeter (pre-installed)

Power Box

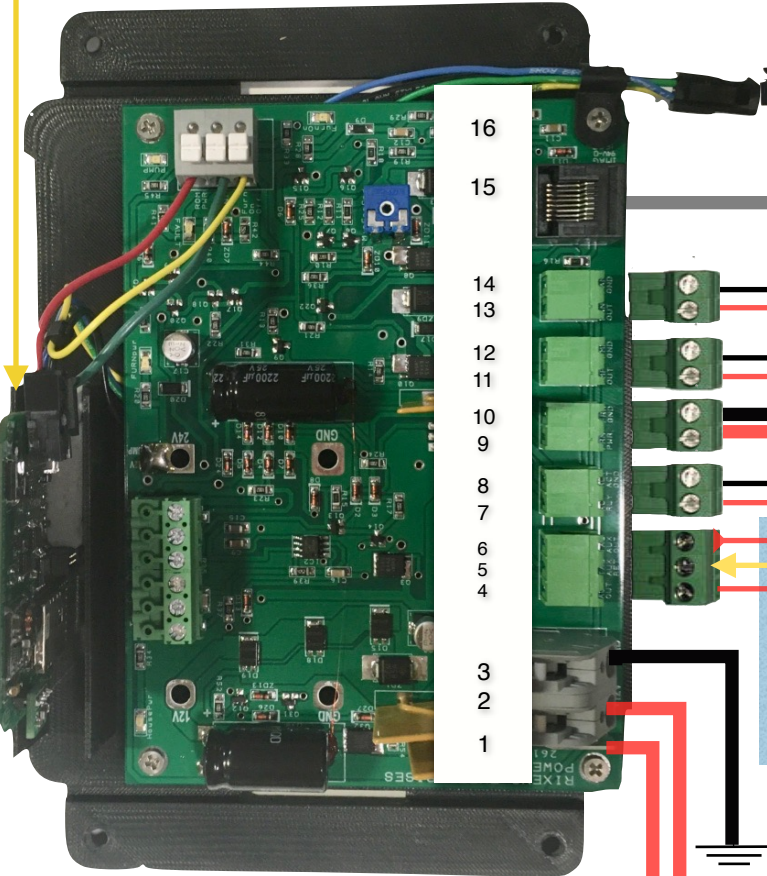

RJ45 Phone Cord

FAN(S)

Water Pump

3A Inline Fuse

Diagnostic Connector

Fuel Pump

S3 Furnace

Diesel or Gasoline
 Note: 3rd plug on furnace unused, covered by rubber plug

Comfort Hot

optional 2nd Zone, f.i. for Heated Floor and/or Freeze protect or Fan

2nd zone Thermostat

Pump or Fan or E-Valve

12VDC + 15A from Engine battery 12VDC + 20A from House Fuse Panel

