

D585 IR Calibration Procedure / Procedimiento de Calibración IR

Sensor Calibration

If the detector is rejecting an unusual amount of bills, the equipment may need to have the sensors calibrated. Use a conventional 75g office paper to print the IR calibration template and cut it as it's indicated. *

1. Turn on the detector and press the "Clear/Direction" and "Report/Currency" buttons simultaneously to enter calibration mode H01.



2. Press the "Report/Currency" button until the screen shows H08.




3. Insert the calibration paper in the same manner as you would scan a bill.



4. Press the "Report/Currency" button until the display shows H13. Rescan the calibration paper.

5. Press the "Report/Currency" button until the screen displays H15. Insert the calibration paper once more to finish the calibration.

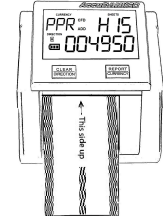

6. Turn the detector off and on and verify the calibration results. If this did not solve the problem, please contact our customer support team for assistance.

Calibración de los Sensores

Si el detector esta rechazando muchos billetes de manera inusual, este pudiera estar necesitando de una calibracion de los sensores. Utilice un papel convencional de oficina de 75g para imprimir la plantilla del papel de calibración.*

1. Encienda el detector y presione simultaneamente los dos botones "Clear/Direction" y "Report/Currency" para entrar en el modo de calibración H01.



2. Presione el botón "Report/Currency" hasta que la pantalla muestre H08.




3. Introduzca el papel blanco del tamaño de un billete USD de la misma forma que utiliza para escanear los billetes.



4. Presione el botón "Report/Currency" hasta que la pantalla muestre H13. Luego introduzca el papel nuevamente.

5. Presione el botón "Report/Currency" hasta que la pantalla muestre H15. Luego introduzca el papel por última vez para terminar con la calibración.

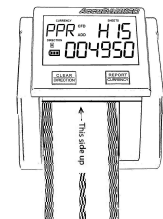

6. Apague y luego encienda el equipo una vez más para verificar el resultado de la calibración. Si esta no solucionó el problema, usted puede comunicarse con nuestro soporte al cliente para más información.

* Print the IR calibration template in a separated sheet / Imprimir la plantilla de calibración IR en una hoja separada