Digital Manometer AR1890

Instruction Manual







CONTENTS

| 1. Overview |
|---------------------------|
| 2. Performance Index |
| 3. Buttons Description |
| 4. Display Description |
| 5. Degree of Accuracy And |
| 6. Operation |
| 7. Error Codes |
| 8. Battery Replacement |
| 9. Safety Precaution And |



1. OVERVIEW

The AR1890 digital manometer can measure different pressure levels with high accuracy (details below). In addition, there are 11 units that can be selected:

 1. inH2O
 2. psi
 3. bar
 4. mbar

 5. kPa
 6. inHg
 7. mmHg
 8. ozin2

9. ftH2O **10.** cmH2O **11.** kgcm

Paired with a hose connection, the AR1890 can be used for:

- 1. Testing ventilation
- 2. Air conditioning system
- 3. Spot checking
- 4. Air conditions in a room
- **5.** Any gas pressure system troubleshooting.

Easy operation and clear reading are the major features of AR1890. Therefore, it is doubtlessly an indispensable testing tool for HVAC technician, maintenance engineers and science researchers.



2. PERFORMANCE INDEX


| Display | Dual LCD | |
|------------------------|---|--|
| Accuracy | ±0.3%FSO(25°C) | |
| Reliability | ±0.2%FSO(Max+/-0.5%FSO) | |
| Linearity/Hysteresis | ±0.29%FSO | |
| Maximum Pressure | 10 psi | |
| Response Time | 0.5 seconds typical | |
| Low Battery Indicator | Yes | |
| Over Range Indicator | Err.1 | |
| Under Range Indicator | Err.2 | |
| Operating Temperatures | 32°F to 122°F (0 to 50°C) | |
| Storage Temperatures | 14°F to 140°F (-1 to 60°C) | |
| Power Supply | 1 X 9V Battery (included) or External 9VDC | |
| Standard Accessories | Pouch & Tubing | |



3. BUTTONS DESCRIPTION


The meter has six buttons:

- 1 UNITS
- (2) DIF
- (3) HOLD
- 4 ON/OFF
- a REC
- **(b)** BACKLIGHT

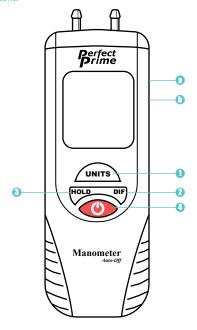



4. DISPLAY DESCRIPTION

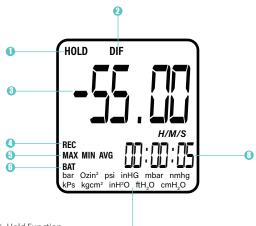

- (1) Hold Function
- (2) Differential mode
- 3 Primary Data Screen
- 4 Record Mode
- (5) MAX/MIN/AVG
- 6 Low Battery Indicator
- Pressure Unit Indicator
- Relative Time Clock



5. DEGREE OF ACCURACY AND RANGE OF UNITS

| Function | Range | Accuracy |
|----------|--------|----------|
| inH2O | ±55.40 | 0.01 |
| Psi | ±2.000 | 0.001 |
| Mbar | ±137.8 | 0.1 |
| kPa | ±13.79 | 0.01 |
| inHg | ±4.072 | 0.001 |
| mmHg | ±103.4 | 0.1 |
| Ozin2 | ±32.00 | 0.01 |
| ftH2O | ±4.612 | 0.001 |
| cmH2O | ±140.6 | 0.1 |
| Kgcm2 | ±0.140 | 0.001 |
| Bar | ±0.137 | 0.001 |
| | | |



6. OPERATION

1. ON/OFF button:

- Press the ON / OFF button to turn on/off manometer.
- When turned on, the screen will be displayed for about two seconds and the normal measurement mode will appear afterwards.

2. Clearance:

- If there is no input deferential pressure, the manometer will not be clear the data automatically.
- When manually clearance is needed, press the HOLD button for about five Seconds,
 - → the screen will show ---- then it will be cleared.

3. UNITS button:

- Press the UNITS button, units at the bottom of the screen will change.
- These units include:
 - 1. inH2O 2. psi 3. bar 4. mbar
 - **5.** kPa **6.** inHg **7.** mmHg **8.** ozin2
 - ftH2O 10. cmH2O 11. kgcm

4. DIF button:

 Press the DIF button, the pressure value will subtract the pressure value from the original value.

P

6. OPERATION

5. HOLD button:

- Press the HOLD button, the current measurement result will be kept.
- Press once more to exit HOLD function.

6. REC button:

- Press this button intermittently, the maximum, minimum, average result from process of recording the measuring will be displayed.
- Press and hold the button for about 5 seconds and it will stop recording.
- Other function buttons are locked and can not be used during recording.

7. Backlit button:

- Press this button, the backlight will turn on.
- Press the button again to turn off the backlight.

8. Automatic power-off function:

- The manometer will automatically power off if no buttons has been pressed for 25 minutes.
- If you want to turn off function of automatic power-off:
 - 1. Press HOLD button.
 - 2. Press the ON / OFF button to start.
 - 3. LCD will show "ON"
 - → the function of automatic power-off turned off.



ERROR CODES

An error message will appear on screen if the meter fails an internal diagnostic test.

- 1. Err. 1: Pressure value is over the read range.
- 2. Err. 2: Pressure value is below the read range.

BATTERY REPLACEMENT

When the battery power is low, "BAT" will display on the screen to remind you to replace the 9V battery.



SAFETY PRECAUTION AND CONSIDERATION



• If product operates abnormally, stop using immediately.



 Please test the manometer before usage to ensure proper operation.



 Always ensure that the connecting hoses are free from kinks, blockage or splits.



- While using the manometer, if you suspect gas is leaking or smell gas:
 - 1. Turn off gas supply and ventilate the affected areas.
 - Identify and iron out the source of leaking before using the product again.



Do not disassemble or modify the manometer in any way.
 Otherwise, accident and injury may occur.

CUSTOMER SERVICE INQUIRIES

Your emails are important to us so we strive to reply all inquiries and emails within **24 hours**. In exceptional cases, we may require more time to respond.

Thank you for your understanding.

For more information about our products and services, please send us an email:

cs@perfectprime.com

For B2B or project-based application, please send an email: sales@perfectprime.com

FOR MORE INFORMATION ABOUT PERFECTPRIME PLEASE VISIT
OUR ABOUT US PAGE AND FEEL FREE TO BROWSE



Scan QR Code for the Youtube channel for video manual



Scan QR Code for the Product Manual page (Multi-Language available for certain products)



Scan QR Code to register the product for 1 year warranty

CE Rons

HORMES LIMITED

cs@perfectprime.con 5/F UNIT 3, 61 GLENTHORNE ROAD

+44 203 7695377

Retailer Email Address Telephone