



VAULT

EXTRACT BATTERY
+ STORAGE CHAMBER

HOW TO USE INSTRUCTION GUIDE



@OOZELIFE #OOZELIFE
WWW.OOZELIFE.COM

CLEANING INSTRUCTIONS

Clean parts after each use to keep your **VAULT** in working condition. Keep away from water and extremely hot or cold temperatures. Always turn the battery off after each session and before cleaning.

To clean the battery connection, use a q-tip slightly dipped in rubbing alcohol. Avoid soaking with excess alcohol, and swab the area where the atomizer connects to the battery. Allow to dry completely before use.

To clean the coils, unscrew the atomizer from the battery. Soak a q-tip with rubbing alcohol and scrub the inside of the coil to remove oil and resin build-up. If stubborn residue remains, replace the coil with a fresh one. Use an alcohol wipe to clean the battery and mouthpiece to sanitize between uses.

WARRANTY

To ensure the best experience, please read and understand the instructions fully before your first use of the **VAULT**.

One Year Warranty is included with **VAULT** purchase. Warranty DOES NOT apply to **VAULT** battery at fault from use of NON **VAULT** CHARGER, or if there is any physical damage. If for any reason your device stops working, please contact us to open a claim.

CHARGING INSTRUCTIONS

VAULT needs to be charged when LED light flashes 10 times. Plug the **VAULT** micro USB charger into the charging port located on the side of the unit.

● LED light will flash while charging, light will turn ● when battery is 10% charged and ● when the **VAULT** is fully charged.

IMPORTANT: Please use wall outlet to charge device for best charging experience.



STORAGE CHAMBER

The **VAULT** includes a storage chamber for 510 thread cartridge. To access, unscrew bottom cap, screw cartridge on to the cap to keep it secured and screw the cap back onto the **VAULT**.




VAULT

EXTRACT BATTERY
+ STORAGE CHAMBER

HOW TO USE INSTRUCTION GUIDE

PRODUCT FEATURES

- 450 MAH BATTERY •
ADJUSTABLE VOLTAGE 2.6V - 3.8V
15 SECOND PREHEAT MODE
- STORAGE CHAMBER •
- DUAL QUARTZ WAX TANK •
- MICRO USB CHARGER •

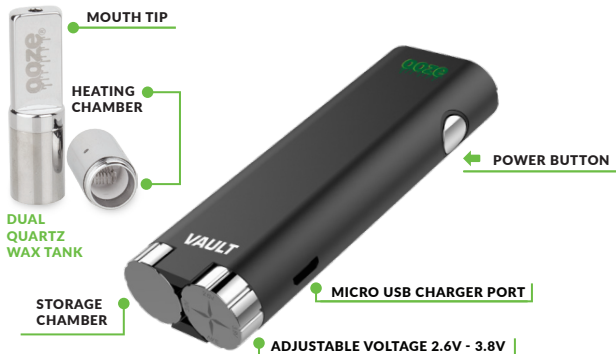

HOW TO TURN ON/OFF

TURN ON: Press **POWER BUTTON** 3 times quickly.
Voltage LED light will be on for 1.5 seconds indicating the device is **ON**.

TURN OFF: Press **POWER BUTTON** 3 times quickly.
Voltage LED light will flash once indicating the device is **OFF**.

HOW TO ADJUST BATTERY VOLTAGE



Adjust voltage by rotating the dial on the bottom of the battery. Select voltage by positioning the line parallel to the power button. Voltage range is 2.6V - 3.8V.

● 2.6 - 3.0V ● 3.0 - 3.4V ● 3.4V - 3.8V

VAULT includes 10 second Hold Time. During use battery will flash 5 times on auto shut off.

When the **VAULT** is in standby, the LED light will not turn on. Click the power button once to wake up the battery.

PREHEAT MODE

Press **POWER BUTTON** 2 times quickly to begin 15 Second Preheat mode. LED Light will flash multiple colors during preheat mode. Press **POWER BUTTON** 1 time to deactivate.

HOW TO LOAD EXTRACTS INTO THE WAX TANK

1. Unscrew the mouthpiece from the dual quartz wax tank heating chamber
2. Place extracts inside the heating chamber on the coil.
3. Screw the mouthpiece back onto the heating chamber.
4. Screw the wax tank onto the **VAULT**.