

# HEARTLAND USA<sup>®</sup>




## BILLET TEAR WIRING HD<sup>®</sup> ROCKER<sup>®</sup> & ROCKER<sup>®</sup> C MODELS




### 3- Function Wiring Diagram (Run, Turn and Brake)

In order to obtain all three functions from your Heartland USA Billet Tear lights you will need one of the following:  
HL-LER 2008-2010 MODELS ONLY

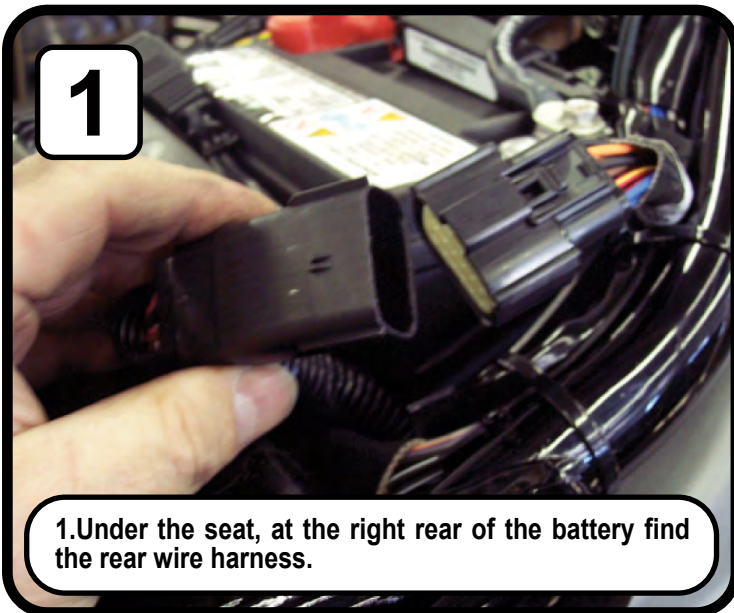

1

1. Under the seat, at the right rear of the battery find the rear wire harness.

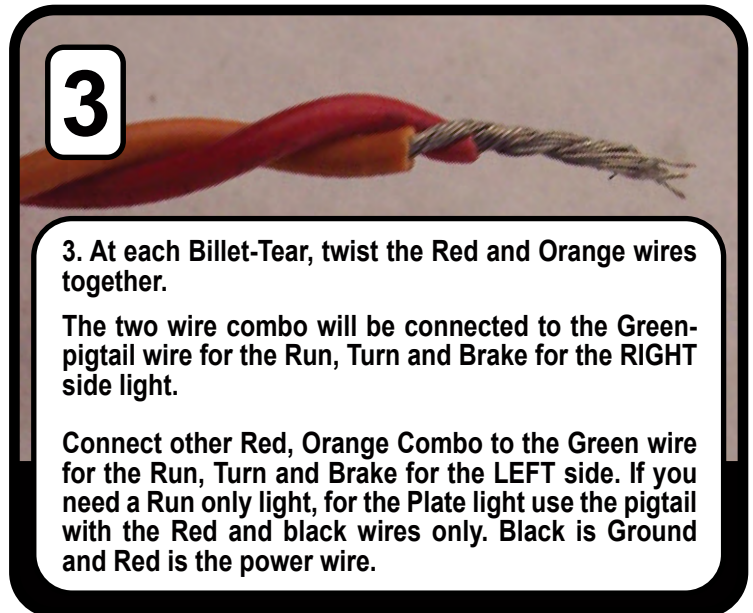


3

3. At each Billet-Tear, twist the Red and Orange wires together.

The two wire combo will be connected to the Green-pigtail wire for the Run, Turn and Brake for the RIGHT side light.

Connect other Red, Orange Combo to the Green wire for the Run, Turn and Brake for the LEFT side. If you need a Run only light, for the Plate light use the pigtail with the Red and black wires only. Black is Ground and Red is the power wire.

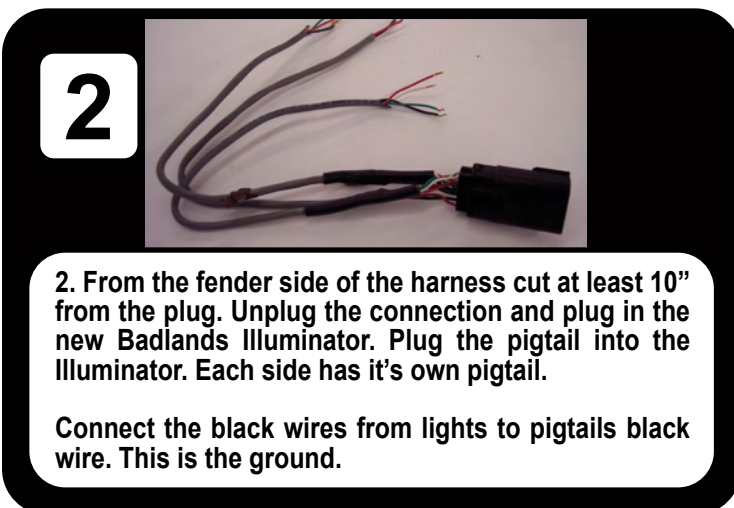

2

2. From the fender side of the harness cut at least 10" from the plug. Unplug the connection and plug in the new Badlands Illuminator. Plug the pigtail into the Illuminator. Each side has it's own pigtail.

Connect the black wires from lights to pigtails black wire. This is the ground.

Harley-Davidson Pig Tail  
Rocker Wire Color Code:

Black - Ground  
Green - Use for stop, run, turn  
Both Sides

*Others are not used for this  
application*

Heartland USA Wire Color Code:  
With Red LED's

Red - Turn  
Orange - Run  
Black - Ground

Contact Heartland USA Technical Department  
with any Question 310-822-2697

[www.heartlandbiker.com](http://www.heartlandbiker.com)

2466 E. Fender Ave. Suite B Fullerton CA. 92831 Ph: 310-822-2697 Fax: 310-634-1271

[www.heartlandbiker.com](http://www.heartlandbiker.com)