



9903II

CALIBRATION INSTRUCTIONS



A Division of T.E. Bouton Company Inc.


- 1) Open the scale
- 2) Adjust the silver switch located on the lower portion of the main board

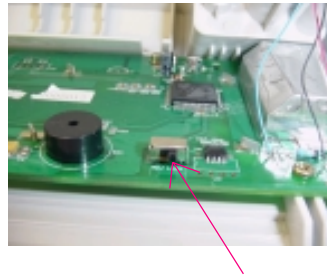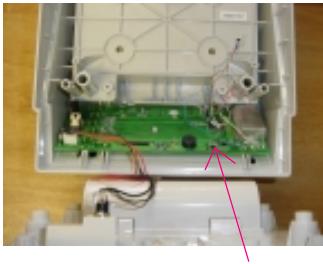


- 3) Turn scale ON




- 4) Press **ON/ZERO** key

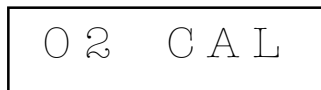


- 5) Press **TARE** key

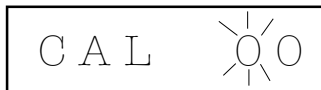

- 6) Press **TARE** key to make the SECOND digit flash

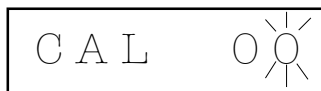

- 7) Press **ON/ZERO** key to change the flashing digit to "1"

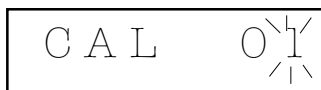

- 8) Press **TARE** key



Display will show full scale capacity



- 9) Press **TARE** key



[E n t r]

Zero point is being set. When the scale is stable a weight value will flash. This is the weight you will need to calibrate the scale.



30.00

- 10) Add the correct weight to the platform and press the **TARE** key.
- 11) Wait until the scale is stable. You will hear 3 beeps. Full capacity weight value will flash in display window.



30.00 

- 12) Remove the weight from the platform and press any key.



C A L 0 

- 13) Press **UNITS** key.



C A L 0 0

- 14) Press **TARE** key



0 2 C A L

- 15) Turn scale OFF
- 16) Re-adjust silver switch located on lower portion of the main board to the original position.
- 17) Turn the scale OFF and close it up.

