

# Auto/Manual Conversion Cap (MA7219) Instructions

3870 Mustang Way  
Bellingham, WA  
USA 98226

TOLL FREE  
EMAIL  
WEB

1.800.526.0532  
mustangusa@mustangsurvival.com  
www.mustangsurvival.com



These instructions apply only when the MA7219 is used with a life preserver (LP) with an armed Hammar M1 inflator - green status indicator. This conversion cap, when applied, voids USCG approval for the device.

## Conversion Instructions


This will convert the LP from an automatic inflation device to a manual inflation device. The device may be changed back to an automatic inflation device by removing the conversion cap.

**CAUTION: A manual inflation device will not inflate on water contact unless the wearer activates the inflator.**

**Step 1** - Completely unzip the LP's zipper (as shown below).



**Step 2 Where Applicable** - Fasten, by tying, the conversion cap lanyard to the loop found between the inflatable cell and the cover.

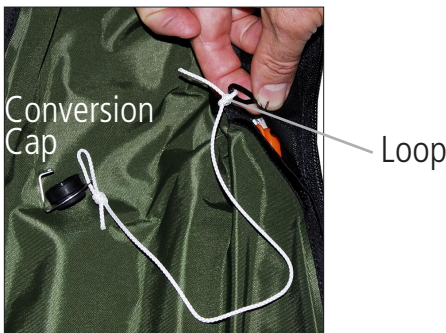

**Step 3** - Access the inflator cap by turning the inflatable cell to reveal it.



**Step 4** - Position the conversion cap over the inflator's hydrostatic valve opening. The conversion cap's metal clip should be placed along the top of the inflator's hydrostatic valve.




**Step 5** - Secure the conversion cap to the inflator's hydrostatic valve by applying pressure to the cap, at the metal clip.



## Conversion Cap Removal

Once the conversion cap is removed, the LP becomes an automatic inflation device. Firmly pull the conversion cap lanyard to remove the conversion cap. Place the conversion cap in the anti-chafing cover when not in use.

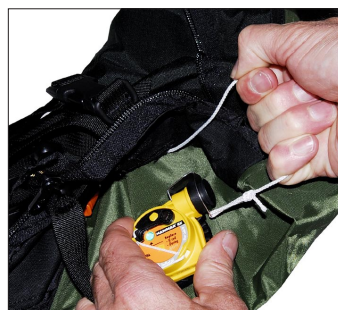

To remove the conversion cap when packed, pull the conversion cap lanyard out from the opening at the back of the LP's right lobe. Visually confirm the conversion cap has been removed from the valve opening.

