


In-Use Screen

After a Massage program is selected, In-use screen displays all settings to that program.

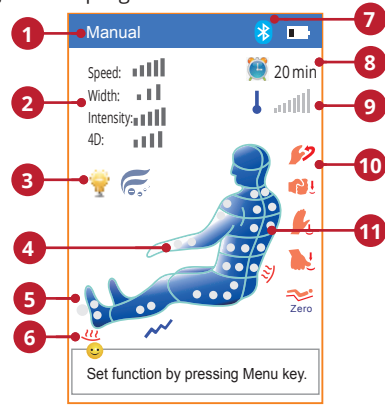

- | | |
|---------------------|-------------------------------------|
| 1 Program | 7 Bluetooth connected |
| 2 Indicators | 8 Time left |
| 3 LED/Ionizer icons | 9 Heating temperature |
| 4 Active airbags | 10 Status Icons |
| 5 Active rollers | 11 Back-roller position & direction |
| 6 Heat icon | |

Quick Access Control Panel

The control panel is located on the top of the right arm panel.

- On/Off:**
Short press; press to turn chair ON/OFF
- Emergency Shutoff:**
Short press; immediately stops all chair functions.
- Auto Program:**
Short press; toggles through auto programs shown. Program icon will light up when active.

Adjust footrest:
Press and hold; to raise or lower footrest.

Adjust backrest:
Press and hold; to incline or recline backrest.



Zero Gravity:
Short press; press once to enter ZG position 1. Press again for ZG position 2. Press a 3rd time for ZG position 3. Press a 4th time to return chair to upright position.

Intelligent Voice Commands

To activate the intelligent voice control function, simply say **'Turn on speech recognition mode'**.

If your voice command is recognized, the speaker will respond after 1 second. You may now give your chair any of the commands below **within 3 minutes**. Make sure to speak clearly and slowly. After 3 minutes the Intelligent Voice Command function will turn off automatically and must be awakened again by saying the activation phrase, **'Turn on speech recognition mode'**.

At any time, Simply say **'Voice off'** to turn voice recognition off.

Commands

- Turn on speech recognition mode
- Voice Off
- Massage chair shutdown
- Health massage
- Pain relief
- Body stretch
- Zero gravity start
- Experience
- Relaxation

Pairing Wireless Remote

Before pairing, make sure the chair is powered on. To power on the chair without your wireless remote, press the **ON/OFF** button on the quick access control panel.

To pair your wireless remote control, simultaneously hold down the **MENU** and **OK** buttons for **4 seconds**. The screen will indicate that Bluetooth pairing has begun. If connection is successful, the Bluetooth icon will light up in the top right corner of your remote control screen.

After pairing successfully, turn the remote control off and then on again to complete pairing procedure. Your wireless remote control is now ready to use to operate your massage chair.


KYOTA | The World's Most Advanced Massage Chairs®

72 Stard Road, Seabrook, NH 03874 | (800) 242-0761
www.kyotamassagechairs.com

Version 1.4

KYOTA®

Quick Start Guide

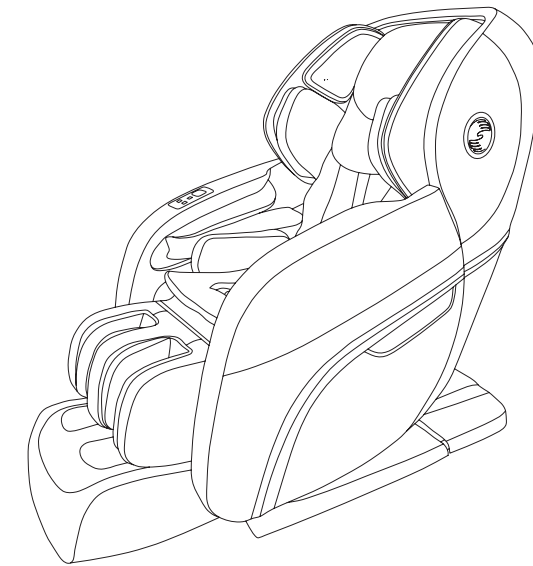

Kokoro M888 4D Massage Chair

KYOTA®

Power – Powers up the remote or returns the chair to the exit position and powers down remote. Press and hold for at least 2 seconds.

Quick Relaxation – Press to enter Quick Relaxation mode. The message status will display on the remote screen. Default working time for this program is 8 minutes.

Menu – Press once to switch to the home page of all menu screens. Press again to return to in-use screen.

OK – After navigating to the command desired on the display, press OK to select. While the in-use screen is displayed on your remote control, press OK to toggle ON/OFF the Air Ionizer.

Footrest – Press and hold up arrow to bring footrest up, press and hold down arrow to bring footrest down.

Zero Gravity – Press once to enter ZG position 1. Press again for ZG position 2. Press a 3rd time for ZG position 3. Press a 4th time to return chair to upright position.

USB Port – To charge your wireless remote. Plug respective end of USB cord into remote control and then the other end into a USB port.



Multi-Functional Screen – Use the directional buttons below to navigate the menu screens. Then press OK to select.

Emergency Shutoff – Press during operation to stop all massage chair functions immediately. All buttons will become invalid upon pressing the emergency stop button. Press ON/OFF to reactivate the remote and restart your massage.

Auto – Press once to switch to the Auto Programs list page. Each additional press will begin cycling you through the 6 main Auto Programs: Health, Pain Relief, Stretch, Music Sync, Experience and Relaxation.

Directional Button – Press up, down, left or right to navigate the display menu screens.

During initial body scan fine tuning or in manual point zone mode: press and hold the up or down buttons to adjust the position of the back mechanism rollers.

Backrest Adjustment – Press and hold down arrow to recline the seat back, press and hold up arrow to upright the seat back.

Remote Reset – If the remote disconnects or experiences pairing issues, use a pin or similar sharp object to press the reset button.