USER GUIDE FOR PAIRING & CONNECTION VERTIX VELO

7 CONTROL OVERVIEW

POWER CONTROLS

POWER ON

On' and battery status announcement

POWER OFF

+ Press both Power and Vol +

MUSIC CONTROLS

- Press once to play or pause music
- + Press twice to skip track forward
- Press twice to skip track backward

VOLUME CONTROLS


- + Press once to INCREASE volume
- Press once to REDUCE volume

INTERCOM CONTROLS

A B Activates connection to another Velo

USB PORT

For connecting headset For charging For firmware upgrade

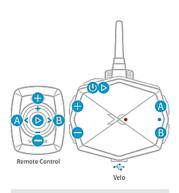

INDICATION LIGHTS

CHARGING

Flashing Red WHEN CHARGED

• • • Solid Red WHEN PAIRING

× ∘ × ∘ × ∘ Flashing Red & Blue

Note: Indicator lights will go off after 10 mins of operation to conserve power

8 PAIRING WITH SMARTPHONE

Up to 2 smartphones can be paired.

- > To proceed with Normal pairing:
- > Power ON by holding Power button until red and blue lights flash alternately and 'Pairing' is heard.
- > Enter default code '0000' if prompted.
- > To set a smartphone as Priority:
- > Power ON by holding Power button until red and blue lights flash alternately and 'Pairing' is heard.
- Press Power button once
- > LED lights should flash 'Red Red Blue Blue' continuously.

. . xx . . xx .


Activate Bluetooth® on your smartphone and select "VERTIX Velo" > Enter default code '0000' if prompted.

9 PAIRING WITH REMOTE CONTROL

Install battery before using. Remote control is pre-paired with Velo. If you need to pair again:

- > Power ON, Press both VOL + and VOL on the Velo and release. The blue LED lights up.
- On the Remote Control, press VOL + button once and then press and HOLD VOL + until the red light on the Velo flashes. This indicates successful pairing.
- > Pairing only needs to be done once.

Note: Should you encounter the unlikely event of interference from another Velo remote control, pair again A new security code will be applied whenever you pair.

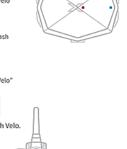

Pairing is only required once if you ride with the same person or group. Should you ride adhoc with other Velo users, repeat the simple pairing procedure detailed below.

> PAIRING OF SET 1 & 2



CLEARING PAIRING



When pairing the sets, keep them away from other sets nearby which are also pairing. This may result in unsuccessful or difficult or wrong pairing.

Always pair 2 sets at a time, keep away from other sets which are also pairing to avoid unsuccessful or difficult pairing situations.

- (a) Power ON your Velos.
 (b) ALWAYS clear previous pairing data by holding down A and B buttons together until the Red light flashes, & 'Pairing' is heard.
- (c) Pairing between Velo devices is always from "A" on one device to "B" on the other, for up to 4 devices.
- (d) Press and hold button A (Set 1), until Red and Blue lights flash alternately, 'Pairing' is heard (e) Press and hold button B (Set 2), until Red and Blue lights flash alternately. 'Pairing' is heard (f) Press button A of Set 1 once. Only Blue light of
- Set 1 flashes & 'Searching' is heard, When the Blue light of Set 2 also flashes, 'Intercom Pairing Successful' is heard & the pairing is successful. Both Velos revert to flashing Red light.

Repeat steps (b) to (f) if pairing is unsuccessful.

TO ACTIVATE INTERCOM
Press either button A of Set 1 OR button B of Set 2 once, & 'Intercom Connected' is heard.



- (a) Press and hold button A (Set 2), until Red and Blue lights flash alternately. 'Pairing' is heard (b) Press and hold button B (Set 3), until Red and Blue lights flash alternately. 'Pairing' is heard
- (c) Press button A of Set 2 once. Only Blue light of Set 2 flashes & 'Searching' is heard. When the Blue light of Set 3 also flashes, 'Intercom Pairing Successful' is heard & the pairing is successful. Both Velos revert to flashing Red

Repeat steps (a) to (c) if pairing is unsuccessful.

TO ACTIVATE INTERCOM: Press either button A of Set 2 OR button B of Set 3 once, & 'Intercom Connected' is heard.



- (a) Press and hold button A (Set 3), until Red and Blue lights flash alternately. 'Pairing' is heard
- (b) Press and hold button B (Set 4), until Red and Blue lights flash alternately. "Pairing" is heard (c) Press button A of Set 3 once. Only Blue light of Set 3 flashes & "Searching" is heard. When the Blue light of Set 4 also flashes, "Intercom Pairing Successful" is heard & the pairing is successful. Both Yelos revert to flashing Red

Repeat steps (a) to (c) if pairing is unsuccessful

TO ACTIVATE INTERCOM: Press either button A of Set 3 OR button B of Set 4 once, & 'Intercom Connected' is heard.

11 USING THE INTERCOM

INTERCOM INDICATORS

- Single Blue light flash: Connected with 1 other device
 Double Blue light flash: Connected with two other devices

COMMUNICATING VIA INTERCOM

GROUP INTERCOM

When intercom links have been established between the devices, riders can talk to each other anytime without the need to press any button, as long as they are both within range of up to 500m, and total range of up to 1.5km for 4 riders, between Velo 1 and Velo 4.



conference bridge between Velo 1 and Velo 4 in the group intercom.

PRIVATE INTERCOM

Private Intercom can be carried out within the teams (Team A or Team B), and between the 2 forming the Conference Bridge

Velo 2 : Press button A to activate connection to Velo 3. Press button B to connect to Velo 1.



Terminating Intercom

For example: Terminating intercom between Velo 2 and Velo 3 : Press button A on Velo 2 twice You will hear a beep sound, and intercom with Velo 3 is terminated.