

# ORACLE®

## 1994-2001 DODGE RAM HALO INSTALLATION GUIDE



1A

Step #1: There are two ways to opening the headlight. You may either use a multi-tool to slowly cut through the lens or you may heat the light up. If you are using a multi-tool be careful and take your time. Make sure your cuts are even and precise.



1B



Step #1: In order to open open the light you will need to heat the housing. If using a heat gun begin by heating the seal evenly while constantly moving the heat gun. If using an oven: Preheat to 215°F and place the light in the oven for 10 Minutes.

\*Before opening your headlight be sure to TEST the lights with a 12V power Source. Be sure the solder spots do not make contact w/ metal/chrome\*


2



If you used the heating method, use a flat head screwdriver to softly separate the lens and the housing. Work your way around the headlight until it is separated. If it is too difficult to separate, place the light back in the oven for another 5 mins. Then try again.

3

There is a vent airway in the top corner of the light. This is where the halo wires will route out of the headlight.

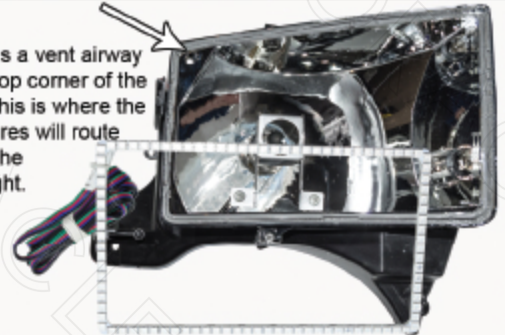

4



Locate the vent cap and drill a hole through the cap. Then begin to gently route the halo wires through the vent airway and the cap.


5



We recommend exterior grade silicone.

Be sure to seal up the hole after you route the wires out of the headlight to prevent any moisture getting inside the light.

6

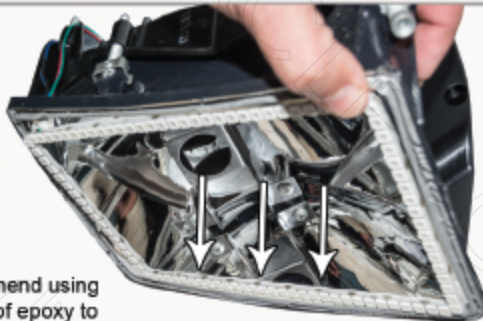

We recommend using a small bit of epoxy to secure the halo into place. The locations are marked by the arrows.

7



Remove any old sealant still in the lens groove. Reseal the headlight with RTV silicone adhesive. We suggest using ORACLE Headlight Sealant.

