

LOCKN LUBE

Pressure Return Valve FOR USE WITH CORDLESS GREASE GUNS

INSTALLS IN MINUTES

The LockNLube Pressure Return Valve allows grease to flow from the hose back to the barrel with just the twist of a knob. No more pressure locks and messy, unsafe disconnections. Eliminates waste and extends coupler life.

How to Install

1. Fully pull out the plunger rod for your battery gun and lock it in place so that there's no pressure exerted on the grease in the barrel.



2. Remove your grease gun hose


- 2D. FOR DEWALT® ONLY: Remove the plastic cover 1 from the pressure relief valve using a flat head screwdriver, then unscrew the pressure relief valve 2.



3. Remove the grub screw plug / bulk filler (whichever has been screwed into the port).




4. Screw the grease return port into the bulk filler port all the way to the shoulder above the threads. Oil the o-ring before assembly to be sure it slides into place easily.

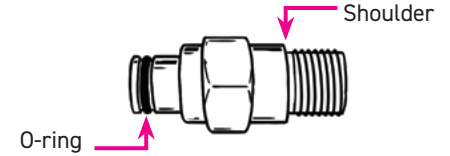

5. Push the pressure return valve body onto the grease return port.




6. Fit the Banjo bolt through the valve body and into the grease hose port ensuring that the dowty washers are in place above and below the valve body. Do not over tighten the bolt.

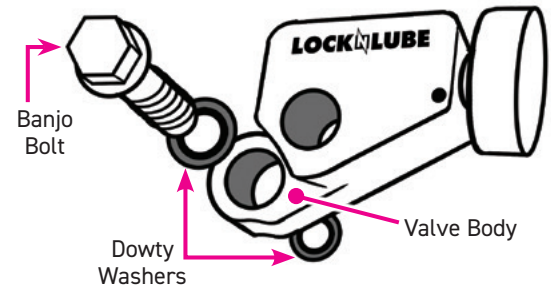

7. Attach the grease gun hose to the grease hose port on the valve body.


LNL81300-M

Use the supplied o-ring to allow for an effective seal without over tightening the grease gun hose.

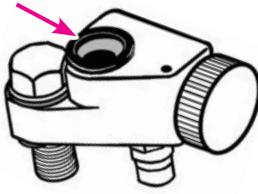



LNL81300-L

Make sure the supplied dowty washer is in place to allow for an effective seal without over tightening the grease gun hose.

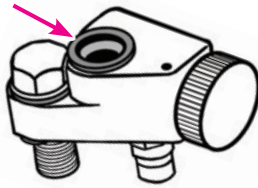


LNL81300-D

Make sure the supplied dowty washer is in place to allow for an effective seal without over tightening the grease gun hose. Then re-assemble the pressure relief valve into the grease gun head and, once fastened into position, re-fit the plastic protective cover hex-end towards the gun.

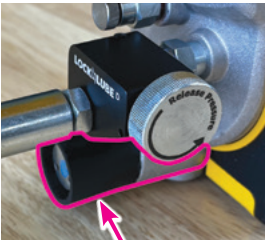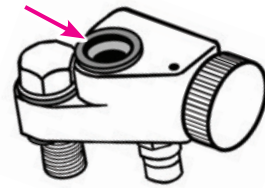

8. Ensure that the thumb screw is hand tight (turn clockwise to tighten)

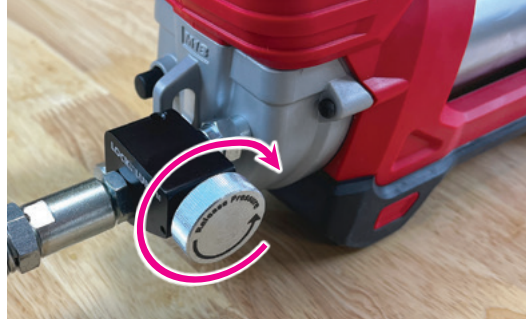


9. Release the plunger rod.

10. Now you are ready to grease!

Operation



When the pressure in the grease hose needs to be released, unscrew the thumb screw a single turn. This will allow grease to flow back into the barrel.

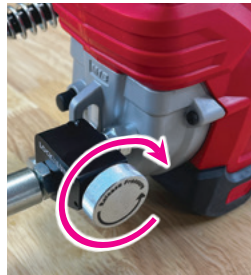

Once the grease coupler is safely removed, tighten the thumb screw and you're ready for the next round of greasing.



If our products don't work better and last longer than anything out there, we'll make it right. If you aren't satisfied with anything you buy from LockNLube, send it back within a year for a full refund - no strings attached. We'll still consider returns after a year, you'll just need to call us and tell us what happened. But if your kid runs over it with a tractor, you'll probably need to buy a new one.

LOCKNLUBE

24 Interchange Drive
West Lebanon NH 03784
603-795-2298 • www.locknlube.com

WARNING: Cancer and Reproductive Harm
 AVERTISSEMENT: Cancer et effet nocif sur la reproduction
 ADVERTENCIA: Cáncer y Daño Reproductivo
www.P65Warnings.ca.gov

MADE IN SOUTH AFRICA
FABRIQUÉ EN AFRIQUE DU SUD
FABRICADO EN SUDAFRICA