

PEAK

RADIX

WIRELESS FOOTSWITCH

MANUAL



IT'S TIME FOR BETTER TATTOOING...
FROM THE GROUND UP.



2 PEAK RADIX DIAGRAM




3 TECHNICAL SPECIFICATIONS

3 KEY FEATURES

4 HOW TO USE YOUR PEAK RADIX

5 WARRANTY INFORMATION



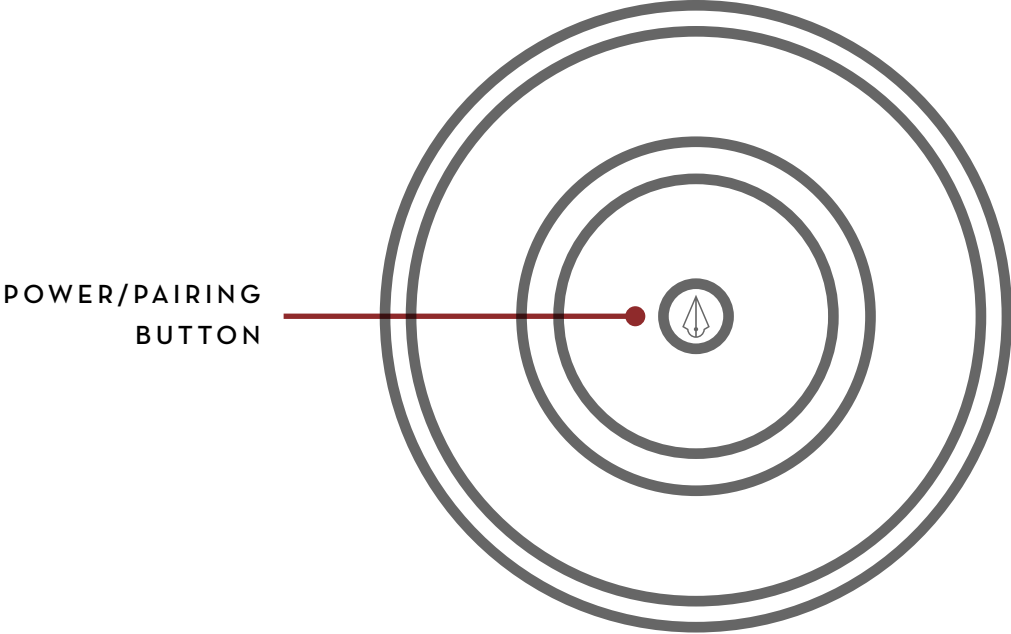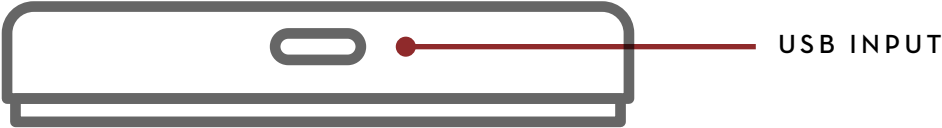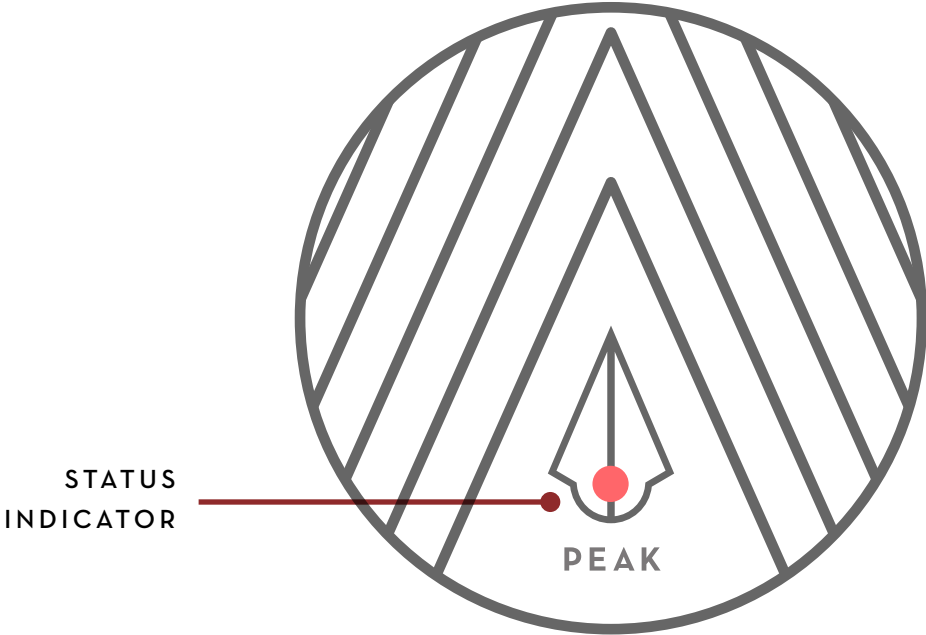

TECHNICAL SPECIFICATIONS

Net Weight: 160g

Dimensions: 4" diameter

Pairs to Surge Power Supply with RF signal

KEY FEATURES

Durable zinc alloy puck

Wirelessly compatible with the Peak Surge Power Supply

Rechargeable with USB-C cable

Charges fully in 1 hour

Operates for up to 2 months on 1 full charge

Lightweight and compact

CONNECTING YOUR RADIX TO THE PEAK SURGE POWER SUPPLY

- 1 Press down on the top of your Radix footswitch, then quickly double-press the button on the bottom of the footswitch to turn it on. A **slow blinking red light** on the top of your Radix will indicate your footswitch is ready for pairing.
- 2 Press and hold the **+/- buttons** on your Surge power supply. Wait until the display screen on the power supply shows “**RF.**”
- 3 Press down on the top of your Radix, then single-press the button on the bottom of the footswitch. A **rapid blinking red light** will appear on the top of your Radix footswitch. The display screen of your Surge power supply will say “**LN.**”
- 4 Wait for the rapid blinking light on the top of your Radix footswitch to turn off. When pairing is complete, your Surge power supply will return to the home screen.
- 5 Press down and hold the button on the bottom of your Radix footswitch to turn it back on.

UNPAIRING THE RADIX FROM THE SURGE

- 1 Make sure your Radix footswitch is on, then press and hold the **+/- buttons** on your Surge power supply. Wait until the display screen shows “**RF**”
- 2 Press the power button on your Surge. The screen will say “**CL.**”
- 3 Once unpaired, the screen of your Surge power supply will return to the home screen.

WARRANTY INFORMATION

If you experience any technical issues or your Peak Radix footswitch requires repairs, please contact our customer service team at 410-712-0145. After our customer service team provides you with a return authorization, you can download and fill out our **Peak Repair Order Form**:



Mail your completed repair order form, footswitch, and invoice as proof of purchase to 7410 Coca Cola Dr STE 108, Hanover, MD 21076. You can also direct any questions or concerns regarding issues with your Peak Radix footswitch to **info@peakneedles.com**.

If you purchased your Radix less than a year ago, we will replace it with a brand new model. If your item is older than a year, it is unfortunately no longer protected under our one-year warranty.