



PowerBolt II[™]

USB-C Battery


USER MANUAL



INDEX

Safety Notice	3
Intro	4
Overview	5
Features	6
Detaching the PowerBolt II	7
Additional Information & Troubleshooting	8

SAFETY NOTICE

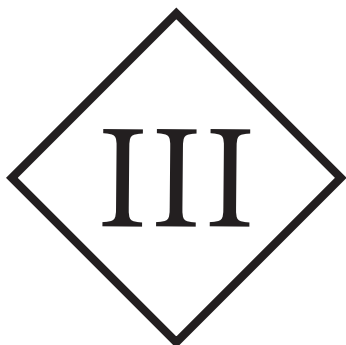**CLASS III SYMBOL**

A Class III appliance is designed to be supplied from a separate/safety extra-low voltage (SELV) power source. The voltage from a SELV supply is low enough that, under normal conditions, a person can safely come into contact, without the risk of electrical shock. The extra safety features built into Class I and Class II appliances are, therefore, not required. For medical devices, compliance with Class III is not considered sufficient protection, and further, more-stringent regulations apply to such equipment.

TECHNICAL DATA

Operating Voltage:	4-12V DC
Current:	UP TO 1.0A
Ambient Temperature:	+10 to +35 °C
Relative Humidity:	30 to 75%
Dimensions (Ø X L):	H72 x W30 X L27mm
Weight:	Approx. 85g (3oz)
Charging Port:	USB-C

**BARRIER PROTECTING YOUR MACHINE**

We strongly suggest the use of barrier products to protect your machine. For a visual demonstration of barrier protection methods, please visit our FK Irons YouTube channel.

This device is only for use by trained tattoo artists and not for use by children or persons of reduced physical, sensory or mental capabilities.

POWERBOLT II INTRO



THE POWERBOLT II

Now with easy-to-read, digital display and Bluetooth connectivity.

OVERVIEW

Dynamic Power Path Management
USB-C Li-ion Battery

Display Screen

Bluetooth Enabled:
Pair with Darklab app




USB-C Port

Control Buttons

Compact Battery Housing


SPECIFICATIONS

- Output Voltage: 4-12V
- Increment/decrement voltage interval: 0.5 or 0.1V*
- Maximum output current: 1A
- Charger Input: USB-C
- Size: H72mm x W30mm x L27mm
- Weight: 30g (1oz)
- Battery Life: ~ 6-10 Hours
(based on operating parameters)

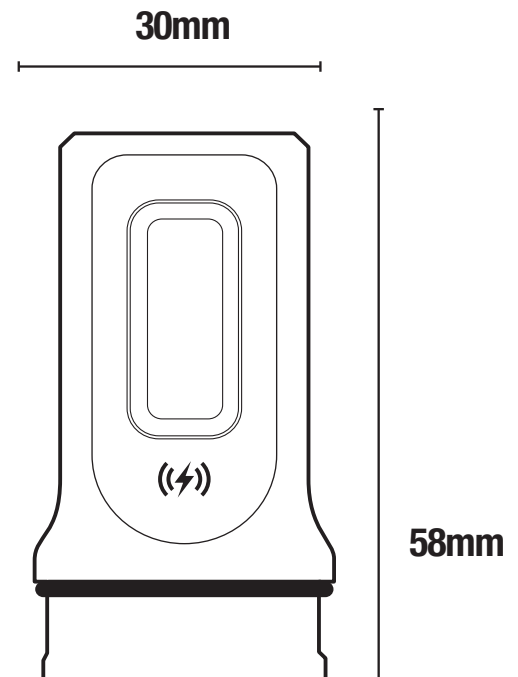

FEATURES

THE POWERBOLT II

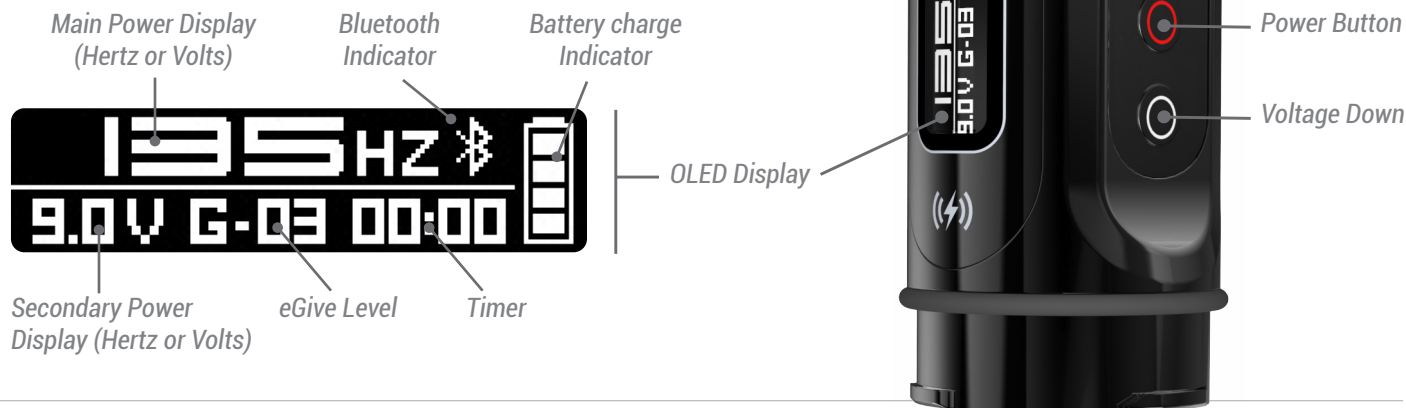

Battery Charge: 4 bars = 100%, 3 bars = 75%, 2 bars = 50% and 1 bar = 25%.

Single bar will blink to indicate when there is approximately 5 minutes left of operation.

Note: Screen will switch to sleep mode after **15 seconds** when machine not in use.

Press the power button to wake.

Charging: When USB-C is plugged in, screen mode will show battery charging.

For best results, use provided charging cable.



Modes Menu: Hold the power button (center button) for **3 seconds** to display built-in menu.

Keep holding power button to cycle through menus. Release to stay on a chosen screen.



eGive: Use the up and down buttons to select level. **Level 0** = disabled, **Level 1** = Hard, **Level 2** = Medium and **Level 3** = Soft. When changing eGive please allow machine to finish sensing needle before using.



Footswitch: On/Off select with Up/Down buttons. The Killswitch will remain connected until user disconnects it in the PowerBolt II menu.



Timer: Start/Stop select with Up/Down buttons. The timer is 0-24 Hrs in one minute intervals, once timer is stopped it resets back to zero.



Display: Use Up/Down buttons to select Voltage or Hertz as main power display.



Voltage: Use Up/Down buttons to select increments of 0.1 or 0.5 Volts.



Screen Orientation: Use Up/Down buttons to select left or right hand operation.



Battery Disconnect: Use Up/Down buttons to select Cancel/Off.

To reactivate PowerBolt II, plug into any USB-C

Device Reset: Hold the Up and Down buttons at the same time.



DETACHING THE POWERBOLT II

Compatible with the Flux, Flux S, Flux MAX and EXO.




Get a firm grip and turn the body as shown with the Grip.



Twist the PowerBolt II as shown and remove.



Flux MAX shown in demonstration image.

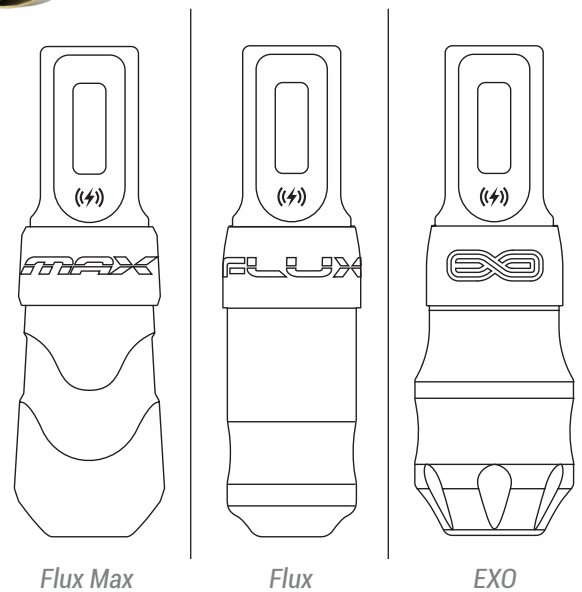

DETACHING THE POWERBOLT II

The PowerBolt II is compatible with the Flux Max, Flux, FluxS and the EXO. To detach your PowerBolt II, ensure you have a firm grip on the body of the Flux or EXO and Grip. Turn the

PowerBolt II counter-clockwise and pull out. To attach the PowerBolt II, push in while twisting clockwise. Ensure lock mechanism moves freely. PowerBolt II must sit correctly

to ensure power electric leads align correctly. Avoid contact with the PowerBolt II leads while recharging or servicing. Turn power off before removing battery from machine.

CONNECTING YOUR BATTERY



1

Plug the USB-C cord into the PowerBolt connector.



Best connection



Improper connection

HOW TO
CHARGE
YOUR
MACHINE

Insert the provided USB-C cable into the back of the PowerBolt and connect to a Hover or power socket. Make sure the cable is properly seated and is fully inserted into PowerBolt. The PowerBolt is not designed to operate while plugged in.

The USB-C connection is intended only for charging your PowerBolt. PowerBolt can be recharged while not attached to the Flux. If connecting to a Hover, the charge speed will be up to 1.0 A.

ADDITIONAL INFORMATION

VOLTAGE PARAMETERS

While voltage is a parameter that will vary from artist to artist, the PowerBolt II has been tested to operate at a minimum voltage of 4 Volts to a maximum voltage of 12 Volts.

Depending on the type of needle configuration, or brand you use, feel free to adjust the voltage to obtain the desired performance.

WARRANTY

Darklab warrants that the device will perform efficiently when used as intended. Should this product prove to be defective due to manufacturing issues, Darklab will repair/replace the device free of charge. This warranty will be void if the device shows signs of having been tampered, disassembled, handled roughly, dropped, overexposed to moisture or damage resulting in compromised functionality.

HANDY TIPS

The following tips will help you get the most out of your PowerBolt II and avoid potential issues:

- Do not exceed the suggested voltage
- Use only FDA-approved cold sterilization solutions for disinfection
- **NOT AUTOCLAVABLE**

NEED HELP?

Contact customer support +1 (855) 354-7667 or service@fkirons.com

For more tips and tricks, visit [Youtube.com/FKiron](https://www.youtube.com/FKiron)s