

TROUBLESHOOTING

If the safety light flickers, works intermittently, changes modes automatically, appears dim or faded, or does not turn on, check and verify that:

- The back plate is securely attached and the screws are on tightly.
- The batteries are inserted correctly according to the instructions.

Firmly press the power button on and off several times:

- If the safety light still does not turn on, replace the batteries.
- If the problem persists, contact GearLight for a replacement.

MAINTENANCE

Inspect the safety light monthly and carefully remove any damaged battery and clean any corrosion. If the safety light is used less than once a month, remove the batteries between uses.

WARRANTY AND LIMITATION OF LIABILITY

Limited One-Year Warranty

GearLight warrants this product for one year from the date of purchase against any defects in material or workmanship. This warranty does not cover normal wear and tear, nor damage resulting from misuse or neglect. We will, at our discretion, repair, replace, or refund the purchase price of this product should we determine it to be defective.

Limitation Of Liability

Liability limited to the purchase price of this product. GearLight shall not be liable for any incidental or consequential damages or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

v2

GEARLIGHT

S1 LED SAFETY LIGHTS

User Manual

FOR YOUR SAFETY, READ BEFORE OPERATING



Package Contents:

- 2x Red GearLight S1 LED Safety Lights
- 2x Green GearLight S1 LED Safety Lights
- 4x Straps
- 4x Extra CR2032 Batteries
- 1x Mini Philips Screwdriver
- 1x User Manual
- 1x Warranty Card

WARNING: CHOKING HAZARD - This package contains small parts.
Not for children under 3 yrs. Use with adult supervision.



OPERATION

NOTE: Each LED Safety Light comes preinstalled with 2x CR2032 batteries.

On/Off

- To turn the safety light on, press down on the gray power button located on the front of the light.
- To turn the safety light off, press down on the gray power button to cycle through all the lighting modes until the light is off.

Switching Modes

- There are 3 different lighting modes. (Steady, Flash, Strobe)
- To switch through the different lighting modes, press down on the gray power button to alternate through the 3 modes.

WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN. Swallowing may lead to serious injury or death in as little as 2 hours due to chemical burns and potential perforation of the esophagus. Immediately see doctor if swallowed. Dispose of used batteries immediately. Risk of injury due to fire, explosion or leakage. Do not disassemble, charge, crush or expose to fire or high temperatures.

STRAPS

- Gently lift the clip on the back of the safety light.
- Slip the strap in between the clip and the safety light. Make sure that the strap is slipped all the way up to ensure it does not slide off.
- Cut the straps to desired length, then securely attach the two ends together.

TIP: Use the straps to attach the safety light to your dog's collar. This will ensure that the safety light is securely fastened.

WARNING: Always wear reflective outer garments at night or during periods of reduced visibility. This product is not intended to replace necessary reflective gear and should be used to improve your visibility to motorists and the general public.




BATTERY REPLACEMENT

Changing the Batteries

1. Use the provided mini Philips screwdriver to carefully remove the 4 screws located on the back of the safety light.



2. Gently lift the back plate up and away from the body.

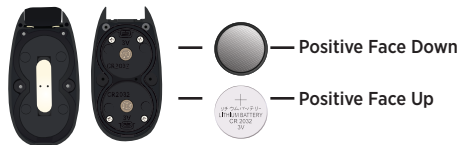

3. Replace with a new set of CR2032 batteries. The top battery has its positive pole facing down. The bottom battery has its positive pole facing up.

4. Put the cover and screws back the same way they were taken off.