



## Atlantic Water Gardens is pleased to introduce ColorFalls- the first lighted weir specifically designed for water features.



- Internal baffles break the water turbulence to help produce Colorfalls sheer decent. These baffles hold water when
  the pump is turned off or disconnected. In Northern climates, Colorfalls must be <u>removed and fully drained</u> in the
  winter to prevent damage from freezing.
- Colorfalls is intended for use in pond-free or treated water applications. Traditional water gardens contain large amounts of organic debris. This debris can build up over time and affect the water flow through the baffles.
- Colorfalls will not pass solids larger that 3/16" in diameter. Additional filtration may be required.
- The rear inlet on the Colorfalls is sensitive to over tightening and can crack if over tightend please take caution when installing.

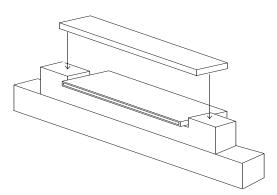

• <u>The Colorfalls weir can support up to 40 lbs. per linear foot. If the weight on the weir</u> exceeds that amount, you will need to provide extra support. Top weight must be <u>supported and free-span the unit.</u>

## **SPECIFICATIONS**

MODEL: CC36 VOLTAGE: 12v WATTS: 20W INLET: 1 ½" FIPT FLOW RATE: 3600GPH MODEL: CC24 VOLTAGE: 12v WATTS: 20W INLET: 1 ½" fipt FLOW R4TE: 2400GPH MODEL: CC12 VOLTAGE: 12v WATTS: 10W INLET: 1 <sup>1</sup>⁄<sub>2</sub>" fipt FLOW RATE: 1200gph MODEL: CC06 VOLTAGE: 12v WATTS: 10W INLET: 1 ½" FIPT FLOW RATE: 600GPH



Figure 2



Figure 3



Figure 4



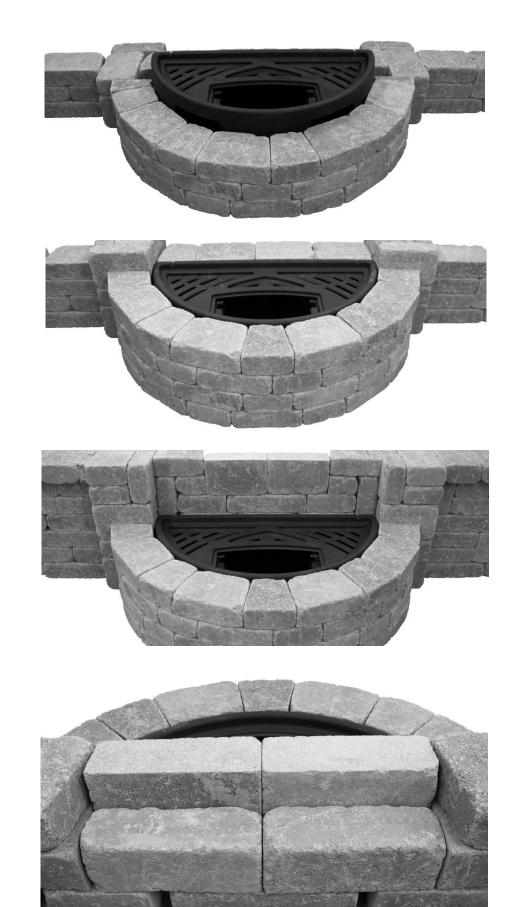


Figure 7

Figure 6


Figure 8

Ensure that you leave an access point to the Colorfalls for periodic maintenance. The access needs to be large enough for the removal of the Colorfalls weir.

Figure 10

Ensure that both the lip extension and the base of the Colorfalls are supported from below.

Ensure the opening where the lip rests is level. The size of the openi is shown in figure 10. This ensures no movement or warping of the lip

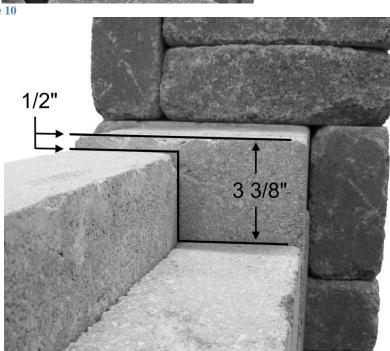




The Colorfalls weir can support up to 40 lbs. per linear foot. If the weight on the weir exceeds that amount, you will need to provide extra support, e.g. a lentel.

Figure 12






Colorfalls	Recommended falls height above the basin
6"	12" - 18"
12"	18" - 24"
24"	24" - 30"
36"	30" - 36"

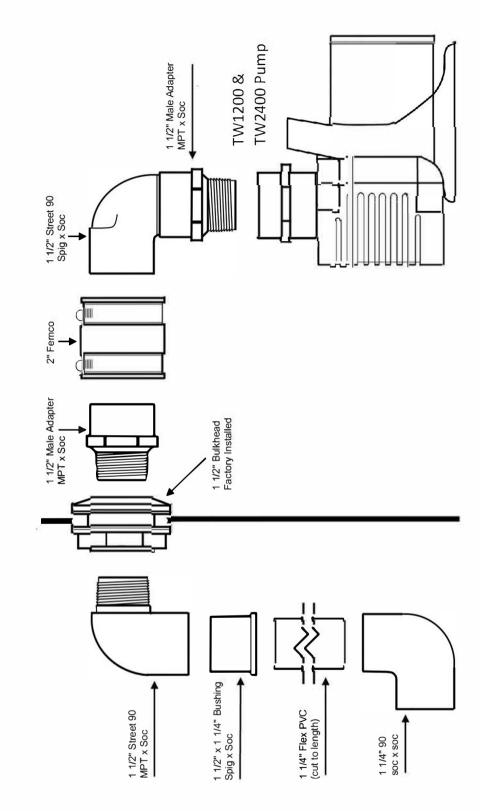

## Plumbing Detail for CCKIT12 & CCKIT24

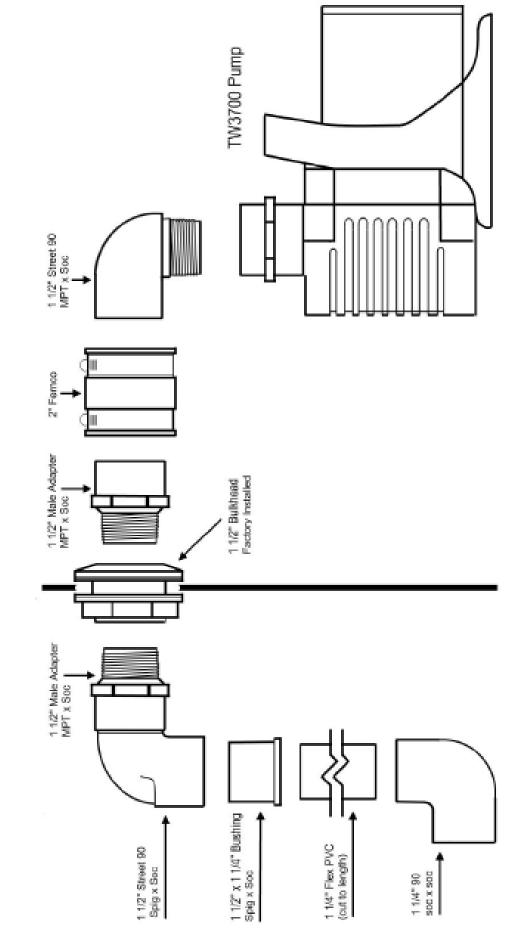

## PLUMBING DETAIL FOR CC36