



Glide Gear

DNA-5050

Set-up and Operations Handbook



www.glidegear.net

Table of Contents

Introduction	1
GLIDE GEAR DNA-5050 Parts and Components	3
Assembling your GLIDE GEAR DNA-5050	5
Attaching your camera to your GLIDE GEAR DNA-5050	8
Balancing your GLIDE GEAR DNA-5050	10
Handling your GLIDE GEAR DNA-5050	14
Operating your GLIDE GEAR DNA-5050	15
Shooting Tips & Tricks	16
Improper Handling Techniques	17
Other Camera Attachment Methods	17
Professional Usage	17
Maintaining your GLIDE GEAR DNA-5050	18
Warnings	18
Warranty	19

Introduction

Congratulations! You have in your hands the wonderfully advanced GLIDE GEAR DNA-5050, our most advanced hand-held camera stabilizer.

With the cutting edge design and engineering of the GLIDE GEAR DNA-5050 Camera Stabilizer, hard to watch, shaky camera footage will be a thing of the past; now, you can have beautifully smooth, professional quality footage.

The GLIDE GEAR DNA-5050 sports advanced features unique in its category of hand-held camera stabilizers. As with all GLIDE GEAR Camera Stabilizers, recording devices mounted on them will shoot smoothly, free from bumps, shakes, and other common disruptive movements. Due to the balance and isolation it provides, the GLIDE GEAR DNA-5050 will give your devices a seemingly floating movement, free from any instability or shaking.

Now, you can perform all sorts of movements with your camera—pan, tilt, boom, and move without any worries about maintaining balance and stability. The GLIDE GEAR DNA-5050 works so amazingly that you can produce professional quality shots even in extreme conditions such as going over rugged terrain or running up and down steps. When it can perform that well under such conditions, you can just imagine how magical your output will be when shooting normally, in natural walking speed or slow movement around a subject.

The GLIDE GEAR DNA-5050 features an offset, foam-wrapped, cushioned Handle Grip that is connected to a free-floating, three-axis Gimbal. This is what allows the camera operator to move it from side-to-side or up and down yet keep the camera stable; the camera is isolated from all the movement. The Hand Grip and Gimbal together attenuate the bouncy, jumpy movement that often results from the use of similar systems out in the market. This is because our Handle Grip has been engineered to allow for vertical movement. This design element, combined with the overall higher inertia of the GLIDE GEAR DNA-5050 results in greater stabilization especially in comparison to the competition.

Meanwhile, the patented precision three-axis Gimbal features multiple adjustable axis convergence controls, which allows for the compound axes to intersect for correct alignment during operation.

The GLIDE GEAR DNA-5050 is designed with a Camera Plate on its Camera-Mounting Platform; this no-tools-required camera mount allows for a fast attachment and removal of the camera. It has ergonomic Control Knobs for easy and accurate adjustment of the platform mount's forward

and backward, and sideways movement. These Control Knobs are how the operator adjusts the camera's horizontal balance.

An assortment of Counterweights is included with every GLIDE GEAR DNA-5050. By modifying the amount of weight on the Base Platform or by adjusting the height of the telescoping Central Post, the camera's vertical balance can easily be fine-tuned. A properly balanced camera on a GLIDE GEAR DNA-5050 practically floats and is ready to get into the thick of the action whenever you are.

The GLIDE GEAR DNA-5050 showcases features much sought-after by camera operators, which are: exceptional control and maneuverability and ease of use—with its solid but exceedingly adjustable control, weight, and balance distribution areas. Setting it up, controlling it, and making adjustments on the system balance can now be done quickly and with precision.

What allows for the easy adjustment of the system's dynamic balance and its rotational pan inertia is the exclusive dynamic Base Platform that can expand and contract depending on the requirements. Whatever the shot and whatever the move, this camera stabilizer can bring on that beautifully polished, professional output. With the GLIDE GEAR DNA-5050, tripods and dollies become non-essentials; all you will need is to let your imagination and creativity run free.

GLIDE GEAR continues to develop camera stabilization products for the modern enthusiast and professional; continuing to push the envelope in design and manufacturing to ensure that more and more can have access to them. This is also why it is fast becoming the choice of this new generation. GLIDE GEAR now has a wide array of camera stabilizers, every one of which is created to work best with specific camera equipment and shooting requirements.

To achieve professional quality results with GLIDE GEAR products, some practice and a good understanding of the equipment is needed. Please read this manual through carefully before setting up and using your GLIDE GEAR DNA-5050. Reading the instructions, performing the Setup and Operation steps in the correct order will not only lower the risk of possible accidents that may cause damage to your equipment, it'll also help you avoid frustration.

For further technical assistance, you may reach us at glidegearhdsr@gmail.com or call our Technical Support Lines (843) 492-5283 (US) and (020) 8816-7576 (UK).

GLIDE GEAR DNA-5050 Parts and Components

Welcome to your GLIDE GEAR experience! With your purchase of the GLIDE GEAR DNA-5050 comes a whole new perspective on shooting and creativity!

As you unpack your GLIDE GEAR DNA-5050, you will find the following components.

From the box:

- GLIDE GEAR DNA-5050 Manual
- Central Post with Gimbal assembly
- Camera Plate
- Camera Mounting Platform
- Telescoping Post
- Base Platform
- Counterweight Plates
- Hardware bag

Tools for assembly:


Standard and Phillips head screwdrivers (not included).






1

1. The GLIDE GEAR DNA-5050 has a Central Post with the Gimbal assembly attached.

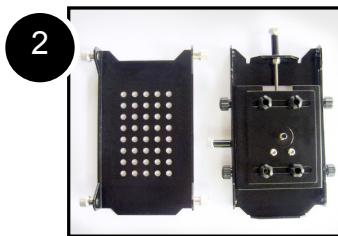

2

IMPORTANT: Do not make any adjustments or attempt to tighten the original factory settings on the Gimbal, handle, and yoke. These parts need to be able to move freely and stay loose, exactly as they have been shipped to you.

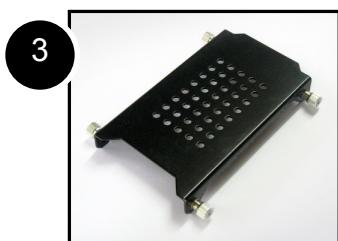


3

2. These make up the head assembly of the GLIDE GEAR DNA-5050.

It includes:

- Camera Plate
- Camera Mounting Platform

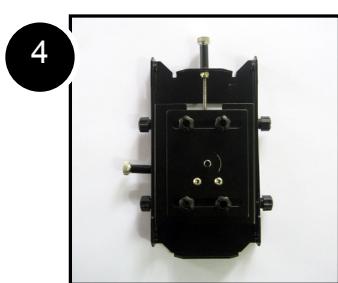

4

3. The GLIDE GEAR DNA-5050's Camera Plate is where the camera is mounted. To take it out and release the plate quickly from the head assembly, turn the knobs counterclockwise and pull on them to release.



5

4. The Camera Mounting Platform features forward and backward, and sideways movement adjustment knobs.



6

5. The Telescoping Post.
6. The Base Platform. This can expand to accommodate the Counterweights.



7

7. The GLIDE GEAR DNA-5050 comes with hardware that consists of:

- 12 Counterweight Plates
- 4 Thumb Nuts

8. Hardware set for the GLIDE GEAR DNA-5050

- 2 Weight Bolts with Washers
- 2 Camera Mounting Screws
- 4 Metal Washers

Assembling Your GLIDE GEAR DNA-5050

10



11



12



13



14



15



16



17



18



10. Start with the Base Platform and the Telescoping Post.

11. Check the bottom one end of the Telescoping Post, it has the threaded insert.

12. A threaded stud attached to the center of the Base Platform is the connection point for the Telescoping Post. Screw in the Telescoping Post securely to connect it to the Base Platform.

13. The Telescoping Post attached to the Base Platform should look like image # 13.

14. Locate one pair of bolts and attach their corresponding washers from the hardware pack.

15. Insert the bolts with their washers into the slots on the Base Platform. Do this for both sides.

16. PROGRESS CHECK: your GLIDE GEAR DNA-5050 should look like image #16.

17. Get the Counterweight Plates and slide them through the bolts on the Base Platform. The holes in the Counterweight Plates line up with the position of the bolts.

NOTE: Heavier cameras will need more counterweight than lighter ones.

18. Lock the Counterweight Plates in place with thumb nuts. Do the same for the other stack on the other side of the Base Platform.

19



19. PROGRESS CHECK: Your GLIDE GEAR DNA-5050 now has the Base Platform assembled complete with Counterweights.

NOTE: Extending the length of the Base Platform and moving the Counterweight Plates further apart will create pan inertia; this will slow down the rotation of the sled and may also decrease side-to-side movement while taking moving shots.

20



20. Next comes the insertion of the Telescoping Post along with the attached Base Platform into the Central Post.

21



21. Refer to image # 21 to see how the Telescoping Clamp's adjustment knob should be aligned. To get to this aligned position, just rotate the entire Central Post into the correct position then tighten the adjustment knob. Leave about an inch of the Telescoping Post outside the Central Post under the Telescoping Clamp. Aligning the Telescoping Clamp's adjustment knob as instructed does not necessarily affect the function or balance of your GLIDE GEAR DNA-5050, but it does make it easier to reach when you need to use it.

22



22. Tighten the adjustment knob on the Telescoping Clamp. Tightening of the adjustment knob should only be done by hand.

WARNING: Do not over tighten this knob.

23



23. PROGRESS CHECK: Your GLIDE GEAR DNA-5050 should look like the one in image #23. It will have the Base Platform and Telescoping Post assembly properly aligned and connected to the Central Post.

The number of Counterweight Plates you will need will vary and will be dictated by the weight of the camera you use. We will tackle the setting of the correct number of Counterweights required for your specific camera later.

24




24. Check the threaded insert at the top of the Central Post.

25



25. Screw-in the stud located at the bottom of the Camera Mounting Platform to the threaded insert on top of the Central Post.

26

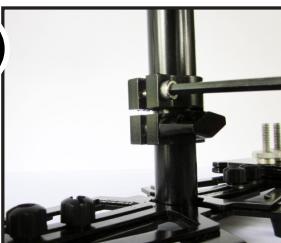

26. We have two ways adjust this alignment. The first and simplest method is to loosen the adjustment knob on the Telescoping Clamp and rotate the parts until they are aligned as seen in image #27; then, just tightening the adjustment knob back. Keep the 1" of Telescoping Post visible below the Telescoping Clamp as before.

27



27. Another way of correctly aligning said parts is to use an Allen wrench to loosen the screw on the top part of the Telescoping Clamp as shown in image #26. Do this until you can rotate and correctly align the parts as shown in image #27; remember to retighten the screw.

NOTE: This method is recommended because it leaves the Telescoping Clamp's adjustment knob properly aligned as in image #21. Again, while technically it does not affect the function or balance of your GLIDE GEAR DNA-5050, it does make it easier to reach when you need to use it.

IMPORTANT: When using cameras that weigh less than one pound on the GLIDE GEAR DNA-5050, you will need to increase the camera weight through the addition counterbalance weight plates under the camera.

Attaching Your Camera To Your GLIDE GEAR DNA-5050

28



28. It's now time to attach your camera to the GLIDE GEAR DNA-5050's Camera Plate. First, remove the Camera Plate from the head assembly by turning the knobs counterclockwise and pulling on them to release.


29



29. Check the bottom of your camera and locate the threaded insert.


30. Next, lay your camera on a stable surface and place it bottom side up. Put the Camera Plate over the camera bottom and center it as shown in image #31.

30

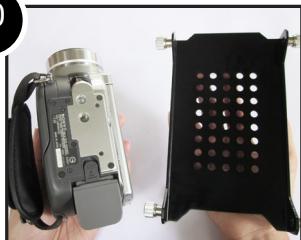

31. Align the Camera Plate to the bottom of your camera and make sure that it is flush against the surface. Line up the threaded insert on the bottom of your camera with one of the mounting holes in the Camera Plate.

31

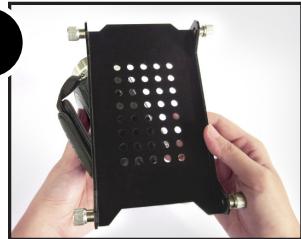

NOTE: If you're using a camcorder or film camera that is larger than the one shown in this manual, you might want to first find the true front to back center of gravity. You can do this by rolling the base of your camera on a pencil until it is balanced on it; mark that point on the camera's side with a small piece of tape, then refer to this marking to center the Camera Plate over your camera's center of gravity.


32



32. Use a camera mounting screw and a $\frac{1}{4}$ " washer to attach the Camera Plate to your camera.

NOTE: Check how the shorter camera mounting screw fits. If it does not fasten your camera securely to the Camera Plate then try a slightly longer mounting screw. You can also try using more than one $\frac{1}{4}$ " washer or eliminate the use of washers altogether to get the right fit.

33

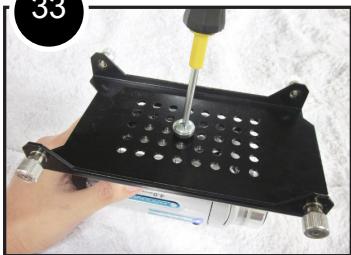

33. Place your camera on your lap or better yet, on a stable but cushioned surface—a folded towel on a table is a good example. Now that the Camera Plate is in position, use a screwdriver to affix the Camera Plate to your camera with the camera mounting screw and the $\frac{1}{4}$ " washer pair.

34



NOTE: Do not over tighten this screw. Doing so will likely damage the threaded insert in your camera base.

34. PROGRESS CHECK: Your camera and Camera Plate should now be securely attached to each other as shown in image #34.

35



NOTE: If the Camera Plate can be easily rotated on the base of your camera even when you have adequately tightened the camera mounting screw, and you don't feel comfortable tightening the camera mounting screw some more, then you should consider using some kind of flexible "gasket" between your camera base and the Camera Plate. Some materials you can use are rubber tape or a flat piece of rubber you can easily find at home—you can, for example, cut up a piece of old rubber household glove.

35. You can now securely place and center your camera with the attached Camera Plate onto the Camera Mounting Platform. Check that all knobs are pulled all the way out before installing. Once the plate is installed, push in the four knobs and turn them clockwise to tighten.

Balancing Your GLIDE GEAR DNA-5050

36



36. A checklist before you start the balancing process:

- a. The camera is securely attached to the Camera Plate and all four knobs are pushed in and tightened.
- b. The lens cap has been removed and is secure.
- c. The camera battery and video tape/disc are installed.
- d. The flip out LCD is in its operating position (if applicable, as seen in image #36)
- e. The Telescoping Clamp is secure.
- f. Weights have been added to the Base Platform.

37



37. Balancing the Horizontal Axis. At this point, your GLIDE GEAR DNA-5050 is properly assembled. You can now move on to setting up and testing the horizontal balance of the system. You need horizontal balance for your GLIDE GEAR DNA-5050 so it can allow your camera to stay level during operation, given that you are not applying a pan, tilt, or roll type of hand pressure to the GLIDE GEAR DNA-5050.

In short, if your GLIDE GEAR DNA-5050 is horizontally balanced, your camera will remain level and the Central Post will stay vertical unless intentionally positioned otherwise. Additionally, if the GLIDE GEAR DNA-5050 is horizontally balanced, it will always return to a level and vertical position after you release any pan, tilt, or roll pressure on the Central Post as seen in image #37.

38



38. Testing for Proper Horizontal Balance. When doing the test for proper horizontal balance you have to make sure to pick up your GLIDE GEAR DNA-5050 from a flat and level surface such as a table; you also need to let the GLIDE GEAR DNA-5050 hang freely as you hold it from the by the Handle Grip as seen in image #37. A GLIDE GEAR DNA-5050 that is properly balanced on its horizontal axis will be level and upright, with the Central Post in virtually a perfect vertical position as seen in images #37 and #39.

Chances are, your GLIDE GEAR DNA-5050 will not look as it does in images #37 and #39. This just means that you have some adjustments to make.

WARNING: Not having enough Counterweight on the Base Platform at this time will cause the entire GLIDE GEAR DNA-5050 to flip completely upside down. Should this happen, add more Counterweight Plates to the Base Platform until your GLIDE GEAR remains right side up during this test.

The best method of adjusting the horizontal balance is to move your camera's center of gravity. You can do this in one of two ways: a) you can re-bolt the camera to a different area of the Camera Plate or b) you can adjust the position of the Camera Plate and the Camera Mounting Platform either front-to-back or side-to-side with the camera on it. Option "b" is the preferred method.

Should your GLIDE GEAR DNA-5050 tilt as it does in image #38, you then need to loosen the thumb screws on the sides of the Camera Mounting Platform and turn the adjustment knob counterclockwise. If the GLIDE GEAR DNA-5050 still tilts to the front, move the Camera Plate a little more to the back by turning the adjustment knob. If the GLIDE GEAR DNA-5050 is tilting to the back instead, then move the Camera Plate to the front by turning the adjustment knob clockwise. Always secure the thumb screws after any adjustments. If you still cannot get the front to back axis balanced with method, then we suggest re-mounting your camera to a different hole on the Camera Plate. When you attain balance for the front to back axis, secure the four thumb screws on the Camera Mounting Platform.

39



39. Should your GLIDE GEAR DNA-5050 lean sideways, for example to the right, you will need to loosen the thumb screws at the bottom of the Camera Mounting Platform and turn the side-to-side adjustment knob counterclockwise. Should you notice a leftward lean—from the operator's vantage point—as seen in image #40, then adjust it to the right by turning the side-to-side adjustment knob clockwise. Remember to always tighten the thumb screws after performing any adjustment. A properly adjusted side-to-side horizontal axis is shown in image #39.

40



40. Once you're done adjusting the side-to-side balance, you might have to go back and tweak the front-to-back balance in order to get a true, fine balance of the entire system. You can either just do a visual check to judge for the correct horizontal balance of your GLIDE GEAR DNA-5050 or employ a lightweight bubble level (not included) to make sure.

NOTE: The GLIDE GEAR DNA-5050's horizontal balance tends to be less sensitive as it becomes more bottom heavy; conversely, the horizontal balance becomes very sensitive as the GLIDE GEAR DNA-5050 moves toward correct vertical balance (more in the next section).

41. Balancing the Vertical Axis. Now that your GLIDE GEAR DNA-5050 is horizontally balanced, you can turn your attention to setting up and testing the system's vertical axis balance. The point of having a proper vertical balance for your camera and GLIDE GEAR DNA-5050 is so that they can stay level during operation, given that you are not applying a pan, tilt, or roll type of hand pressure to the GLIDE GEAR DNA-5050. Most important of all, that the DNA-5050's Central Post remains vertical even when you are walking, running, or turning during operation.



In short, if your GLIDE GEAR DNA-5050 is vertically balanced, your camera will remain level and the Central Post will stay vertical unless intentionally positioned otherwise. A vertically unbalanced GLIDE GEAR DNA-5050 will swing about and pendulum when you walk, run, or turn.



42. Once more, if the vertical balance is properly set, you will be able to move about quickly as well as start or stop moving suddenly and still keep the Central Post vertical. To adjust the GLIDE GEAR DNA-5050's vertical balance you can either attach or take out Counterweights from the Base Platform, or telescope the Base Platform in or out. When you have more or less the right amount of weight on the Base Platform, you can fine-tune the vertical balance further by using the Telescoping Post.

NOTE: The GLIDE GEAR DNA-5050 swinging between horizontal and vertical during the "Sled Arc Test" as seen in image #42.

43



43. The Sled Arc Test is performed to check the balance of the vertical axis. Doing the Sled Arc Test is as simple as holding the GLIDE GEAR DNA-5050 by its Handle Grip, pulling the Base Platform up and back until the Central Post is horizontal and motionless as in image #41, then gently letting the Base Platform go. After that, you need to take note how many seconds it will take for the GLIDE GEAR DNA-5050 to go from the horizontal position it was just in as shown in image #42, to the moment it first passes the vertical position.

A vertically balanced GLIDE GEAR DNA-5050 will take approximately two to three seconds—also known as “Drop Time”—to pass the vertical position. Make sure to count your seconds by reciting them to beat like: one one thousand, two one thousand, and so on for better accuracy. Adjust the number of Counterweight Plates on the Base Platform or lengthen or shorten the Telescoping Post until

the Base Platform or lengthen or shorten the Telescoping Post until it takes only two to three seconds for the GLIDE GEAR DNA-5050 to swing in an arc from horizontal to vertical.

NOTE: The length of Drop Time set will, in the end, be up to you to decide. Different Drop Times affect the vertical balance and as a result, will change the obtainable shooting output.

An alternative method to check for proper vertical balance is the “Movement Test.” It requires moving forward with the GLIDE GEAR DNA-5050 and suddenly stopping. If the abrupt movement causes the GLIDE GEAR DNA-5050’s Base Platform to swing or pendulum away from you or from the upright vertical position it was previously in, then you have confirmation that it is not vertically balanced. Adjust the number of Counterweight Plates on the Base Platform, or lengthen or shorten the Telescoping Post until the GLIDE GEAR DNA-5050 stays vertical during the Movement Test.

This test also applies to running or turning around abruptly while holding the GLIDE GEAR DNA-5050. Again, movements such as running or quick turns will not affect a vertically balanced DNA-5050’s basic, upright position.

During a Sled Arc Test, the GLIDE GEAR DNA-5050 will swing or pendulum past this line over a dozen times if left alone; but, it is only the initial swinging in an arc movement that you need to concern yourself with. When you have counted the time it takes for the GLIDE GEAR DNA-5050 to go from horizontal to passing the vertical once, you can stop the test. You can either put down the GLIDE GEAR DNA-5050 or make your adjustments and perform the test again.

NOTE: Adding more Counterweight Plates or lengthening the Telescoping Post will speed up the Drop Time. Taking out Counterweight or shortening the Telescoping Post will slow down the Drop Time.

Handling Your GLIDE GEAR DNA-5050

Knowing how to correctly handle your GLIDE GEAR DNA-5050 is a must prior to shooting or filming any project. In the operation of the your DNA-5050, one hand will be used to hold the Handle Grip and the other, to guide the camera in the direction you want to shoot. For clarity's sake, let's call the hand on the Handle Grip the "Grip Hand" and the hand that directs the camera's movements such as tilting, panning, etc., the "Guide Hand."

44



44. There are a couple of things you need to do to properly handle your GLIDE GEAR DNA-5050 and they are: 1) grip it firmly, and 2) take hold of it either in the middle or near the bottom of the Handle Grip. The position you pick will depend on the type of shots you need to take. For normal shooting, it is best to grip the handle in the middle as in image #44. For shots that require pointing the camera up, down, or sideways best to grip it firmly at the bottom; doing so will allow the "yoke" of the Gimbal to twist and move around without hitting your hands or knuckles.

45




45. As you handle your GLIDE GEAR DNA-5050, you will want to use your Guide Hand to lightly hold onto either the point just under the yoke and bearing assembly as seen in image #45, or a spot down by the Base Platform as seen in image #52. When using your GLIDE GEAR DNA-5050, these two areas allow for the easiest and best control. Again, the hand position you pick will depend on the type of shots you need to take.

Observe how the Guide Hand does not touch the yoke or main bearing assembly.

46. Normal shooting will require that you hold the GLIDE GEAR DNA-5050 with your Guide Hand at the spot just underneath the yoke as seen in image #45. Handling it this way will allow you to subtly aim your camera while maintaining the camera's upright position. This is the position that will let you shoot the smoothest footage when walking or running with the unit during normal shooting.

NOTE: Take note that your Guide Hand and Grip Hand do not touch the bearing assembly or yoke while shooting; doing so can lead to unsteady shooting. Irregular or unconventional shots such as those that require pointing the camera straight up or down, or sideways will need you to hold the GLIDE GEAR DNA-5050's lower portion or by the Base Platform as seen in image #52. This will give your Guide Hand a higher measure of control over the unit even while shooting erratic shots and angles.


Operating Your GLIDE GEAR DNA-5050

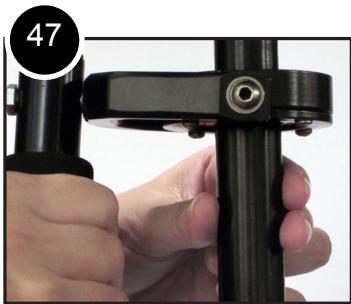


47



48

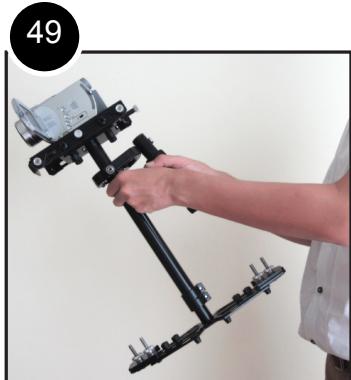

49

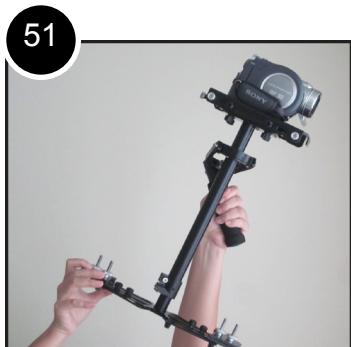

51

47. The GLIDE GEAR DNA-5050 is designed for two-handed operation as seen in images #45 and #47. Operating it with your Grip Hand alone, the camera is likely to drift away from its original position as you shoot. Your Guide Hand is essential in controlling the camera's direction.

48. In the operation of the GLIDE GEAR DNA-5050, you will not be able to use the viewfinder. Putting your eye right next to the viewfinder's eyecup will hamper the stabilization capabilities of the GLIDE GEAR DNA-5050. It is best to use the camera's built-in LCD monitor as shown in image #53. Another option is to attach a separate external monitor directly to the Base Platform. This monitor "mounting hole" can be found at both the front and back edges of the Base Platform.

49. While we think attaching an external LCD monitor to the Base Platform is a better option because it will encourage you to look down to check on it more often—and therefore, get more opportunities to look at where you're going and make getting around obstacles in your path safer—you can opt to attach the external LCD monitor to the accessory shoe on top of your camera.

50. Using your Glide Gear DNA-5050 for extended periods of time can cause fatigue in your grip hand. Should tiredness set in while you're in the middle of a shoot, you can try switching hand roles in the operation of your GLIDE GEAR DNA-5050—swap your Grip Hand with your Guide Hand and vice versa. Or, you can opt to take a break and rest for a bit by placing the unit upright on a level surface or laying it on the ground; if you're using the bracket, you can also dock the sled.

GLIDE GEAR also has separate accessories for the DNA-5050 that can address your need for help in handling the unit for longer periods of time. Check out our website: www.glidegearhdslr.com or give us a call to learn more.


51. In the handling or operation of your GLIDE GEAR DNA-5050, be aware and steer clear of sudden and forceful movements such as a violent jerking motion with your arm and similar actions.

Performing such can cause damage to the unit and possibly even get your camera loose from the Camera Plate.

52. The GLIDE GEAR DNA-5050 is not made for underwater shooting; it does not work under-water. The unit is not waterproof. You are advised to avoid direct exposure to rain and water spray. Also, the GLIDE GEAR DNA-5050's bearings are sensitive to dirt and sand, so avoid getting any into them. Refer to the bearing maintenance section for more information.

Shooting Tips & Tricks

53. When using a standard consumer camcorder you will likely notice that the widest focal length setting on such units are not sufficient to replicate looks often shot with professional cranes, dollies, and stabilizers; but, there is a workaround. Using a wide-angle lens converter over your standard camcorder lens when shooting should take care of this.

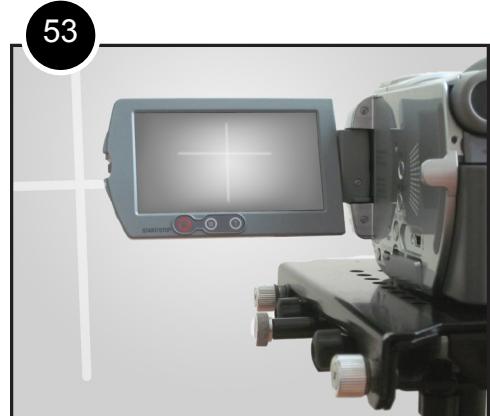

54. Walking the Line. "Walking the line" is an exercise designed to help you use your GLIDE GEAR DNA-5050 more accurately. All you will need is some masking tape, camera, or gaffer's tape. First, create a cross mark on a flat wall; this mark will be for framing purposes. Next, lay down tape in a straight line on the floor leading up to the cross mark; this line should be around 10 to 20 feet long. Then, the exercise will proceed with you walking the line you laid down on the floor and keeping the cross mark on the wall centered on your LCD monitor as in image #53. The objective of this exercise is to train you precision framing during a shoot.



Improper Handling Techniques

55. Do not clutch the Central Post when shooting with the GLIDE GEAR DNA-5050 as seen in image #55. Doing so voids the principle of the three-axis Gimbal and the isolation it provides. Refer to images #45 and #47 for proper handling of your GLIDE GEAR DNA-5050.



56. Do not let the Handle Grip to come into contact with the Camera Mounting Platform as seen in image #56. Such contact will limit your range of motion and will lead to shaky, jerky, and possibly unusable footage. Remember to position the Handle Grip as shown in image #44.



Other Camera Attachment Methods

Create a Gasket. In case your camera does not have a true flat and level bottom to allow for full contact with the Camera Plate, getting it solidly attached can become an issue. Making and adding a paper/cloth or rubber gasket to the Camera Plate can easily resolve this. Using the Camera Plate as pattern simply cut the material (such as a piece of rubber dishwashing glove) and make a hole in it to let the Camera Mounting Bolt through and into the base of your camcorder's threaded insert.

Professional Usage

Using the GLIDE GEAR DNA-5050 to achieve professional output, perhaps in taking shots or footage you'd like to incorporate into a movie or some type of commercial project, we highly recommend plenty of pre-planning and maybe even rehearsing your shots before the actual shoot. Having an assistant, especially during complicated shots, will increase your chances of getting the professional look you're aiming for.

Good luck and enjoy shooting with your GLIDE GEAR DNA-5050.

Maintenance

Cleaning. Cleaning your GLIDE GEAR DNA-5050 is simple. If or when the unit gets dirty, just use a water-dampened cloth or sponge to gently wipe it clean. Do not use solvents or harsh cleaners of any kind.

Bearing Maintenance. Your GLIDE GEAR DNA-5050's main bearing is connected to the Central Post, approximately two inches from the top. The main bearing is metal and is partly enclosed by the bearing assembly. If after some time this bearing does not quite turn as smoothly as it originally did, you can thinly coat it with light lubricating oil. Remember, you just need to use a very small amount of oil, anything more than that will just ooze out of the bearing and onto to your GLIDE GEAR DNA-5050. You can also use the light lubricating oil for your GLIDE GEAR DNA-5050's yoke and handle bearings. Take care to safeguard your camera from the oil by checking and cleaning up any spill over when you're done.

Storage. When storing your GLIDE GEAR DNA-5050 for long periods of time, remember to keep it upright and in a dry or low to normal humidity area as much as possible. If you cannot be sure of the environment's humidity conditions, we then suggest that the unit be stored in an airtight plastic container or bag. Storing the unit upright helps in alleviating the stress on the system.

Warnings

Take care when using your GLIDE GEAR DNA-5050 at night, in low light conditions, and in uneven or unfamiliar terrain. A dangerous and bad mistake you can make is focusing so much on what you're shooting and not seeing the hazards along your path. You can trip, fall over, or slip on something; or, stray into a dangerous area like a street with busy automobile traffic, a deep pothole or even a swimming pool. Extra care is also necessary when tackling stairs and other kinds of uneven ground. These warnings apply to shooting in daylight and well-lit areas.

Minors using this product should have adult supervision. If you intend to shoot while moving fast, or while traversing uneven terrain, do not hesitate to wear protective gear such as knee and elbow pads, a helmet, and eye protection.

Warranty

We will repair or replace you GLIDE GEAR DNA-5050, free of charge, in the event of a defect in materials or craftsmanship obtained during normal use or handling based on the GLIDE GEAR DNA-5050 user's manual for ninety (90) days from date of shipment (shipment date appears on your purchase receipt). Shipping, packing, and insurance costs to and from the factory will be your responsibility.

This limited warranty is available only to the original buyer and proof of purchase in the form of the original receipt is required.

The warranty does not include, by way of example, damage cause by products not supplied us or damage resulting from mishandling in transit, accident, misuse, neglect, vandalism, modification, lack of reasonable care (pertaining to units for commercial use, including rental to others) of the GLIDE GEAR DNA-5050, or service by anyone other than our company. We offer no express warranties except as listed above. This warranty awards you specific legal rights. You may also have other rights that may differ from state to state.

GLIDE GEAR is not liable for incidental or consequential damages resulting from the use of the unit or occurring due to any breach of this warranty. All express and implied warranties, including the warranties of merchantability and fitness for a particular purpose, are limited to the ninety (90) day warranty period.

To get service during or beyond the warranty period,
you may get in touch with us through glidegearhdslr@gmail.com or call us at
(843) 492-5283 (US) and (020) 8816-7576 (UK).

Do not send the unit to us without first getting a response
and acquiring a return authorization number.

**Manufactured by Koncept Innovators Inc.
Glidegear Products • 1619 Executive Ave, Myrtle Beach, SC 29577, USA
Telephone: 843.945.4031 • Fax: 843.945.4030
www.glidegear.net**



Glide Gear

DNA-5050

Manuel d'instructions et d'utilisation



www.glidegear.net

Table des matières

Introduction	1
DNA-5050 Nomenclature des Pièces	3
Assembler le DNA-5050	5
Attacher une caméra/un appareil photos au DNA-5050	8
Équilibrer le DNA-5050	10
Utiliser le DNA-5050	14
Manipuler le DNA-5050	15
Trucs et astuces	16
Techniques inappropriées	17
Usage professionnel	17
Entretien	18
Avertissements	18
Garantie	19

Introduction

Félicitation! Vous êtes l'heureux propriétaire du GLIDE GEAR DNA-5050, le plus perfectionné des stabilisateurs de la gamme Glide Gear.

Le savoir-faire et la technologie derrière le Glide Gear DNA-5050 vous feront oublier les vidéos instables et difficiles à regarder et vous permettront de faire des vidéos fluides dignes d'un professionnel.

Avec le Glide Gear DNA-5050 vous disposez d'un accessoire unique dans la catégorie des stabilisateurs portatifs. Quel que soit l'appareil que vous utilisez, votre stabilisateur Glide Gear vous permettra d'obtenir des vidéos avec des mouvements fluides en éliminant toute instabilité ou à-coup.

Le Glide Gear DNA-5050 vous permet une liberté de mouvement total, de haut en bas ou latéralement, sans que vous ayez à vous soucier de la stabilité de vos images et ceux même dans les situations les plus extrêmes comme en courant dans les escaliers ou sur un sol rocheux.

Le GLIDE GEAR DNA-5050 est constitué d'une poignée avec un revêtement en mousse qui est connectée à un cardan avec 3 axes de rotations. Le cardan permet d'isoler la caméra des mouvements de l'utilisateur. L'utilisateur peut ainsi bouger de haut en bas ou de cotés sans que la caméra ne bouge. Le cardan atténue les mouvements brusques et inattendus de l'utilisateur. Le cardan et ses 3 axes de rotation ainsi que l'inertie du GLIDE GEAR DNA-5050 permettent une stabilisation exceptionnelle et bien supérieure aux autres produits sur le marché.

Le design, breveté, de notre cardan à 3 axes de rotation autorise aussi un ajustement de sa position pour un meilleur équilibrage du stabilisateur une fois que la caméra est attachée dessus.

Le GLIDE GEAR DNA-5050 est équipé d'une platine de fixation facilement ajustable et permettant d'attacher ou de détacher l'appareil rapidement et sans aucun outil. Une fois l'appareil attaché, des vis de contrôle permettent de déplacer rapidement la platine de fixation d'avant en arrière ou de gauche à droite pour trouver aisément le point d'équilibre horizontal du stabilisateur.

Le GLIDE GEAR DNA-5050 est fourni avec un assortiment de contrepoids. Ces contrepoids servent à équilibrer le stabilisateur verticalement. Le point d'équilibre peut être trouvé en ajoutant ou en retirant des poids de la base du DNA-5050 et/ou en jouant sur la distance entre la platine de fixation et la base du DNA-5050. Une fois équilibré, le GLIDE GEAR DNA-5050 flotte littéralement dans l'air et vous êtes prêt à entrer dans le feu de l'action où que vous soyez!

Le GLIDE GEAR DNA-5050 est rempli de fonctionnalités qui satisferont tous caméraman aussi bien professionnels qu'amateurs à la recherche du maximum de contrôle, de manœuvrabilité et de facilité d'utilisation. Le DNA-1000 peut être ajusté et équilibré, très précisément, très rapidement et très facilement grâce à son système de contrepoids aisément redistribuable.

La base du stabilisateur peut être allongée ou rétractée très facilement en fonction de vos besoins ce qui permet un meilleur équilibrage pour un rendu fluide et magnifique digne d'un professionnel et ce quel que soit le plan. Avec le Glide Gear DNA-5050, plus besoin de piste et de chariots. Laissez libre cours à votre imagination et à votre créativité.

GLIDER GEAR est continuellement à l'écoute des cinéastes professionnels et amateurs pour continuer à développer de nouveaux produits innovants, accessibles au plus grand nombre et repoussant de plus en plus les limites du réalisable. GLIDE GEAR offre désormais une vaste gamme de stabilisateurs et autres équipement vidéos compatibles avec une grande majorité des appareils d'enregistrement vidéo et conçus pour faciliter n'importe quel tournage.

Pour arriver à un résultat d'une qualité dite professionnelle, il est nécessaire d'avoir une bonne compréhension des principes et du fonctionnement du DNA-5050 ce qui nécessite une période d'essai et de familiarisation à l'équipement. Veuillez lire attentivement le manuel d'utilisation et suivre rigoureusement les indications pour un fonctionnement optimal du DNA-5050 et afin d'éviter toute frustration ou tout accidents qui pourrait endommager votre équipement.

Pour toute assistance technique, veuillez consulter le site : glidegear.net

GLIDE GEAR DNA-5050 : Nomenclature des pièces

Bienvenue dans le monde de la stabilisation vidéo façon GLIDE GEAR. Avec le GLIDE GEAR DNA-5050 s'offre à vous des nouvelles perspectives de tournage et de création.

En déballant votre Glide Gear DNA-5050, vous trouverez les éléments suivants:

Dans la boîte:

- Un manuel d'instruction pour le Glide Gear DNA-5050
- Un tube principal avec un cardan déjà assemblé.
- Une plaque d'attache
- Une platine de fixation pour votre appareil
- Un tube télescopique
- Une plateforme de contrepoids
- Des contrepoids
- Un sac contenant des vis....etc.


Outils nécessaire: Tournevis plat et crucifix






1

1. Le Glide Gear DNA-5050 se compose d'un tube principal sur lequel le cardan est déjà assemblé

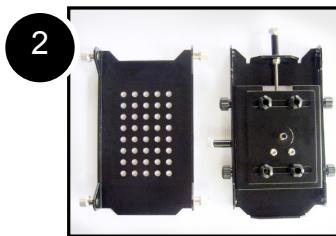

2


ATTENTION: N'essayez pas d'ajuster or de resserrer les pièces du cardan. Ces pièces ont été assemblées de façon à ce qu'elles puissent bouger librement.

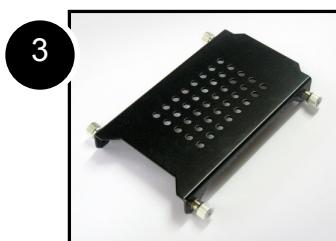

3

2. La plateforme de fixation du GLIDE GEAR DNA-5050 dans se compose de :It includes:

- Une plaque d'attache
- Une platine de fixation

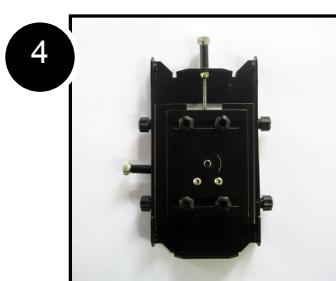

4


3. La plaque d'attache sert à attacher votre camera au Glide Gear 5050. Pour détacher la plate d'attache, tournez les 4 vis sur les côtés dans le sens inverse des aiguilles d'une montre puis tirez



5

4. Deux vis permettent d'ajuster la position de la platine de fixation latéralement et d'avant en arrière

5. Tube télescopique

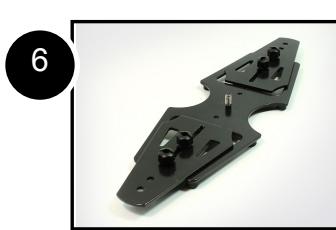

6

6. Plateforme de contrepoids ajustable et rétractable



7

7. Le Glide Gear DNA-5050 vous est fourni avec:

- 12 contrepoids
- 4 boulons de serrage

8. Le Glide Gear DNA-5050 vous est aussi fourni avec:

- 2 boulons et 4 rondelles pour les contrepoids
- 2 vis pour attacher votre camera
- 4 rondelles en métal

Assembler le Glider Gear DNA-5050

10



10. Commencez par attacher la plateforme de contrepoids au tube télescopique

11



11. Identifiez l'extrémité du tube télescopique qui a un pas de vis

12



12. Vissez le tube télescopique sur la vis au centre de la plate-forme de contrepoids.

13



13. Une fois attachée, vous devriez avoir la même configuration que dans la photo 13

14



14. Prenez maintenant les deux vis de la photo 14 ainsi que les rondelles qui leur correspondent.

15



15. Insérer les vis et leur rondelle dans les trous prévus à cet effet à chaque extrémité de la plateforme de contrepoids.

16



16. Le DNA-5050 devrait maintenant avoir la même configuration que dans la photo 16.

17. Prenez les contrepoids et glissez-les sur les vis de la plate-forme de contrepoids.

NOTE : le nombre de contrepoids augmentera ou diminuera avec le poids de l'appareil que vous utilisez

17



18. Utilisez les écrous de serrage fournis avec le stabilisateur pour vous assurer que les contrepoids ne bougent pas.

18



19



19. Vous devriez maintenant avoir assemblé la plateforme pour les contrepoids.


NOTE: En jouant avec la longueur de la plateforme de contrepoids et ainsi que la distance entre les contrepoids eux même, vous modifiez l'inertie générale du DNA-5050 et pouvez ainsi diminuer les mouvements indésirables de la caméra pendant que vous filmez.

20



20. Insérez maintenant le tube télescopique dans le tube principal où est attaché le cardan du DNA-5050.

21

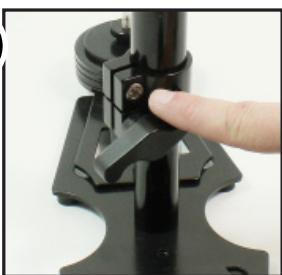

21. Tournez le tube principal afin que la poignée du serre-joint soit alignée avec la plateforme de contrepoids conformément à la photo 21. Ajustez la distance entre la plateforme de contrepoids et le tube principal pour qu'il y ait 1 pouce (2-3 cm) entre les deux. Alignez la poignée du serre-joint n'affecte en rien le fonctionnement du stabilisateur mais permet de l'équilibrer plus rapidement.

22. Serrez le serre-joint. Cette opération doit se faire qu'avec une seule main.

22



ATTENTION: Ne pas trop serrer le serre-joint.

23. Votre GLIDE GEAR DNA-5050 devrait maintenant être comme dans la photo 23. La plateforme de contrepoids, le tube télescopique et le tube principal sont assemblés ensemble.

23



Le nombre de contrepoids dont vous aurez besoin est dicté par le poids de l'appareil photo/caméscope/camera que vous utilisez. Veuillez-vous reporter au chapitre « comment équilibrer le DNA-5050 » pour en savoir plus.

24




24. Remarquez que l'extrémité libre du tube principal a un pas de vis.

25




25. Vissez la vis en dessous de la plateforme de fixation du GLIDE GEAR DNA-5050 sur le tube principal.

26

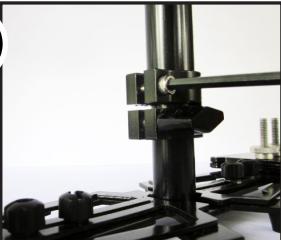

26. Il existe deux manières d'aligner les deux plateformes. La première, qui est aussi la plus simple, consiste à desserrer la poignée du serre-joint et à tourner les tubes de façon à ce qu'ils soient alignés comme sur la photo 27. Une fois dans la bonne position, resserrez la poignée tout en maintenant une distance de 1 pouce (2-3cm) entre la plateforme de contrepoids et le serre-joint.

27

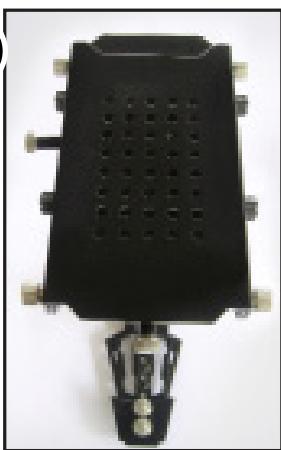

27. La deuxième méthode consiste à utiliser une clé de type Allen pour desserrer la vis la plus haute du serre-joint comme le montre la photo 26. Attention de ne pas dévisser la vis complètement mais suffisamment pour tourner les deux tubes et les aligner comme dans la photo 27. Resserrez ensuite la vis.

Note : Nous recommandons la deuxième méthode car elle permet de conserver l'alignement de l'étape 21.

IMPORTANT: Pour toute camera pesant moins d'1 livre (500g), Il vous faudra augmenter le poids sur la plaque d'attache du Glide Gear DNA-5050 en ajoutant des contrepoids sous la caméra.

Attacher votre appareil au Glide Gear DNA-5050

28



28. Il est temps maintenant de monter votre appareil sur la plate-forme de fixation du GLIDE GEAR DNA-5050. Pour cela, il vous faudra d'abord enlever la platine de fixation en dévissant les 4 vis sur les côtés de la platine.


29



29. Localisez le pas de vis en dessous de votre appareil

30. Posez ensuite votre appareil à l'envers sur une surface stable et centrez la platine autour du pas de vis décrit dans l'étape précédente et comme le montre la photo 31.


30

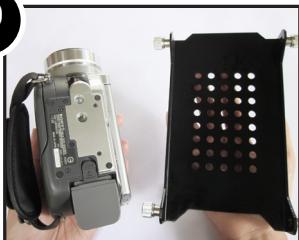

31. Vissez votre appareil sur la platine à travers le trou le plus proche. Assurez-vous que la platine soit bien en contact avec l'appareil.


Note : Si vous utilisez un appareil photo ou un caméscope plus gros que celui dans les photos, nous vous conseillons de d'abord essayer de déterminer l'endroit où se trouve le centre de gravité de l'appareil. Pour cela, faites rouler votre appareil sur un crayon rond jusqu'à ce qu'il soit à l'équilibre. Marquez l'endroit et faites coïncider le centre de gravité avec le centre de la platine de fixation.

31

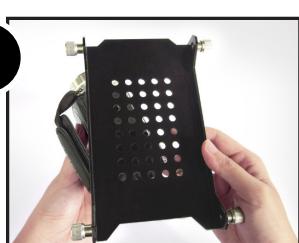

32. Utilisez une vis et une rondelle d'1/4 pouce de diamètre pour fixer votre appareil.

32

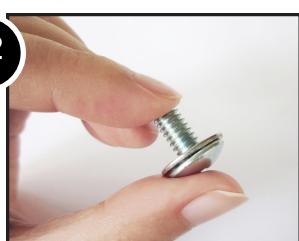

NOTE: Vérifiez bien que la vis que vous utilisez soit de la bonne longueur et ajoutez éventuellement plusieurs rondelles jusqu'à ce que votre appareil soit attaché solidement.

33



33. Placez ensuite votre appareil entre vos jambes ou sur une surface rembourrée telle qu'une serviette pliée sur une table par exemple. Utilisez un tournevis pour bien visser la vis et la rondelle d'1/4 de pouce sur la platine au-dessous de votre appareil.

34



34. Votre appareil est maintenant attaché sur la platine comme le montre la photo 34

NOTE: Après avoir bien serré la vis, si vous pouvez encore faire tourner votre appareil sur lui-même alors qu'il est accroché à la platine, répétez l'étape 33 mais en insérant une rondelle en caoutchouc entre l'appareil et la platine.

35



35. Vous pouvez maintenant ré-attacher la platine sur la plate-forme de fixation du GLIDE GEAR DNA-1000. N'oubliez pas de sécuriser la platine sur la plateforme de fixation en revisant les 4 vis que vous avez enlevé dans l'étape 28

Equilibrer le Glide Gear DNA-5050

36



36. Avant d'équilibrer votre GLIDE GEAR DNA-5050, vérifiez bien que:

- a) votre appareil soit solidement attaché à la platine de fixation et que vous ayez bien revisé les 4 vis attachant la platine à la plateforme de fixation.
- b) que vous ayez enlevé le cache sur l'objectif de l'appareil.
- c) que vous ayez bien inséré la batterie et la carte mémoire dans l'appareil.
- d) que vous ayez sorti l'écran (comme dans la photo 37, le cas échéant)
- e) que vous ayez bien resserrez le serre-joint du tube principal.
- f) que vous ayez mis les contrepoids sur leur plateforme.

37



37. Équilibrage horizontal. Maintenant que votre GLIDE GEAR DNA-5050 est assemblé, vous pouvez passer à l'équilibrage du système. Commencez par équilibrer le système horizontalement. Un parfait équilibre horizontal est nécessaire pour garantir que votre appareil reste au même niveau pendant que vous filmez.

En équilibrant votre GLIDE GEAR DNA-5050 horizontalement, le tube principal restera à la verticale et votre appareil à l'horizontale. Le stabilisateur reviendra tout seul à sa position d'équilibre si vous décidez d'actionner vous-même le tube principal pour le besoin d'un plan (voir la photo 37).

38



38. Comment savoir si le système est équilibré à l'horizontale. Pour tester l'équilibre horizontal, posez le GLIDE GEAR DNA-5050 sur une surface plate. Soulevez ensuite le DNA-1000 par sa poignée et laissez le pendre jusqu'à ce qu'il arrête de bouger. Le DNA-5050 est équilibré horizontalement si le tube principal est exactement à la verticale comme dans les photos 37 et 39.

Il est plus que probable que votre GLIDE GEAR DNA-5050 ne soit pas équilibré horizontalement à la première tentative. Il faut donc ajuster la position du centre de gravité de votre appareil.

ATTENTION: Si vous n'avez pas mis suffisamment de contrepoids sur la plateforme de contrepoids, le GLIDE GEAR DNA-5050 se retournera dès que vous le soulèverez. Dans ce cas, ajoutez des poids sur la plateforme jusqu'à ce que le DNA-5050 ne se retourne plus quand vous le soulevez.

La meilleure façon d'équilibrer le DNA-5050 à l'horizontale est de déplacer le centre de gravité de votre appareil. Pour cela, 2 méthodes sont à votre disposition : a) vous pouvez détacher l'appareil de la platine pour le ré-attacher sur un autre trou ou b) vous pouvez aussi déplacer l'appareil latéralement ou d'avant en arrière grâce aux 2 vis d'ajustement sur le côté de la platine de fixation. La méthode "b" est la plus fine et rapide.

Si, comme c'est le cas dans la photo 38, le GLIDE GEAR DNA-5050 penche vers l'avant, desserrez les 4 vis sur les côtés de la platine juste assez pour pouvoir déplacer vers l'arrière la position de l'appareil par rapport au tube principal en utilisant la vis d'ajustement à l'avant de la platine. Si à l'opposé, le GLIDE GEAR DNA-5050 penche vers l'arrière, déplacez la position de l'appareil de la même façon mais vers l'avant cette fois. Pensez à resserrer les 4 vis d'ajustement à chaque fois. Si vous ne parvenez pas à équilibrer le stabilisateur par cette méthode, vous devrez sûrement détacher votre appareil pour le ré-attacher en utilisant un autre trou sur la platine.

39



39. Si le GLIDE GEAR DNA-5050 penche d'un côté, desserrez les 4 vis sur les côtés de la platine et utilisez la vis d'ajustement sur la gauche de la platine pour déplacer l'appareil dans le sens opposé de celui vers lequel l'appareil penche. Par exemple, dans le cas de la photo 40, l'appareil penche vers la gauche. Il faut donc déplacer l'appareil vers la droite. Rappelez-vous de bien resserrer les 4 vis sur les côtés de la platine après chaque ajustement. Votre DNA-5050 est à l'équilibre horizontal si vous êtes dans le cas de la photo 39.

40



40. Pour arriver à un équilibre parfait à l'horizontale, il est très souvent nécessaire d'ajuster plusieurs fois et l'une après l'autre la position de l'appareil de droite à gauche et d'avant en arrière et ce afin d'arriver à l'équilibre parfait. Pour vérifier l'état d'équilibre de votre GLIDE GEAR DNA-5050, vous pouvez utiliser un niveau à bulle (non-fourni) ou le faire visuellement.

NOTE: Équilibrer le GLIDE GEAR DNA-5050 peut nécessiter un ajustement précis de la position de l'appareil. De manière générale, plus l'appareil est lourd et moins l'équilibrage demande de précision.

41. Équilibre par rapport à la verticale. Une fois équilibré par rapport à l'horizontale, vous devez équilibrer votre GLIDE GEAR DNA-5050 par rapport à la verticale. Il est primordial de bien équilibrer le GLIDE GEAR DNA-5050 à la verticale afin que l'appareil reste à niveau et que le tube principal reste le plus proche possible de la verticale lorsque vous marchez, courrez, ou tournez sur vous-même en filmant.

41



Si le GLIDE GEAR DNA-5050 est mal équilibré, il se balancera comme un pendule pendant que vous vous déplacez. Un DNA-5050 bien équilibré restera à la verticale quel que soit vos mouvements.

42



42. Une fois le GLIDE GEAR DNA-5050 bien équilibré, vous pourrez vous arrêter subitement et repartir tout aussi subitement sans que le tube principal du DNA-5050 ne quitte sa position verticale. Pour équilibrer verticalement le GLIDE GEAR DNA-5050, vous pouvez, tout d'abord, enlever ou ajouter des poids sur la plate-forme de contrepoids puis vous pouvez ensuite allonger ou raccourcir la distance entre la plateforme de contrepoids et l'appareil pour un réglage plus précis.

NOTE: La photo 42 est une photo du GLIDE GEAR DNA-5050 durant un test du temps de chute.

43



43. Le test du temps de chute permet de déterminer si le GLIDE GEAR DNA-5050 est à l'équilibre verticalement. Le test du temps de chute consiste à tenir la poignée du DNA-5050 dans une main. L'autre main amenant la plateforme de contrepoids à l'horizontale pour ensuite la lâcher de cette position. Le résultat du test, appelé «temps de chute», est déterminé par le nombre de secondes jusqu'à ce que la plateforme de contrepoids passe par la verticale (comme dans la photo 42) pour la première fois.

Un GLIDE GEAR DNA-5050 bien équilibré aura un temps de chute compris entre 2 et 3 secondes. Pour changer le temps de chute, il suffit d'enlever ou d'ajouter des poids sur la plateforme de contrepoids ou de raccourcir ou d'allonger la longueur du tube télescopique.

NOTE: C'est vous qui déterminez le temps de chute du DNA-5050. Différents temps de chute auront un impact direct sur les résultats vidéos.

Une méthode alternative au test du temps de chute consiste à se déplacer vers l'avant avec le GLIDE GEAR DNA-5050 en main et à s'arrêter soudainement. Si la plateforme de contrepoids se balance du fait de l'arrêt abrupt, le GLIDE GEAR DNA-5050 n'est pas à l'équilibre. A l'inverse, si la plateforme de contrepoids reste à la verticale quand vous vous arrêtez, le DNA-5050 est à l'équilibre. Jouez avec les poids et la longueur du tube télescopique pour trouver l'équilibre parfait.

Utiliser le Glide Gear DNA-5050

Avant de partir en tournage ou de commencer un nouveau projet, il vous sera nécessaire d'apprendre à utiliser le GLIDE GEAR DNA-5050. Lorsque vous opérez votre GLIDE GEAR DNA-5050, il vous faudra vous servir de vos 2 mains. La première main que nous appellerons « main de support » tient la poignée du DNA-5050 et sert à supporter le poids du DNA-5050. La seconde main, que nous appellerons « main directrice », tient délicatement le tube principal de façon à orienter l'objectif de l'appareil dans la direction que vous désirez.

44



44. Pour une utilisation plus aisée du GLIDE GEAR DNA-5050, nous recommandons : a) de tenir fermement la poignée; b) de tenir la poignée soit au milieu ou soit dans sa moitié inférieure. La position de votre main sur la poignée dépendra du type de plan que vous voulez filmer. Pour un plan traditionnel, il est préférable de positionner votre main au milieu de la poignée. Pour un plan qui nécessitera des changements de direction pour l'appareil, nous vous conseillons une position basse sur la poignée ce qui vous donnera une plus grande liberté de mouvement.

45



45. La main directrice vient, quant à elle, se placer juste en dessous du cardan. Avec 2 ou 3 doigts, tenez délicatement le tube principal comme le montre la photo 45. Utilisez votre main directrice pour orienter l'objectif de l'appareil dans la direction que vous voulez. Vous pouvez aussi déplacer la plateforme de contrepoids avec votre main d'orientation pour changer la direction de l'appareil comme le montre la photo 52.

Notez que la main directrice n'est pas en contact avec le cardan.

46. Avoir la main directrice juste en dessous du cardan est la technique la plus répandue avec le GLIDE GEAR DNA-5050 car elle permet d'avoir des mouvements de caméra à la fois précis, de grande amplitude et fluides. Nous recommandons aussi cette technique lorsque vous filmez en courant ou en marchant.

NOTE: Remarquez que ni la main directrice et ni la main de support ne touchent le cardan pour éviter toute instabilité de l'image. Pour des plans moins traditionnels qui nécessiteraient par exemple que l'appareil pointe à la verticale ou complètement de côté, nous vous recommandons de tenir la poignée du GLIDE GEAR DNA-5050 dans sa partie basse et d'utiliser la plateforme de contrepoids pour orienter l'appareil comme dans la photos 52.

Manipuler le Glide Gear DNA-5050




47



48



49

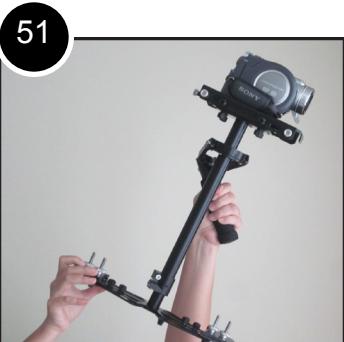

51

47. LE GLIDE GEAR DNA-5050 a été conçu pour être manipulé à 2 mains comme le montrent les photos 45 et 47. Sans la main directrice, l'appareil est libre de vaguer dans n'importe quelle direction. La main directrice est primordiale pour orienter l'objectif de l'appareil.

48. Pour des raisons pratiques, vous ne pourrez pas utiliser l'œilletton de votre appareil pendant que vous manipulez le GLIDE GEAR DNA-5050. Vous pouvez utiliser l'écran de votre appareil comme dans la photo 53. Vous avez aussi la possibilité d'utiliser un écran séparé que vous pouvez attacher à la plateforme de contrepoids grâce aux trous qui sont prévu à cet effet.

49. Vous pouvez aussi attacher un écran externe sur le haut de votre appareil photos si vous en avez la possibilité mais nous vous conseillons de l'attacher sur la plateforme de contrepoids. De cette façon, vous pourrez regarder plus facilement ou vous allez sans avoir à bouger la tête.

50. Utiliser le GLIDE GEAR DNA-5050 pendant une longue durée est fatigant. Essayez de changer de main de support ou faites une pause. Posez à la verticale la plateforme de contrepoids de votre GLIDE GEAR DNA-5050 sur une surface plate.

Glide Gear offre aussi toute une panoplie d'accessoires pour utiliser le DNA-5050 sur de longues durées. Visitez www.glidegear.net pour plus d'information.

51. Essayez d'éviter tout mouvement brusque et soudain de la main et du bras quand vous opérez le GLIDE GEAR DNA-5050 car non seulement cela aura une incidence directe sur le résultat vidéo mais aussi car cela peut donner lieu à des accidents. Votre appareil peut se détacher par exemple.

52. Le GLIDE GEAR DNA-5050 n'a pas été conçu pour être utilisé sous l'eau. Le DNA-5050 n'est pas imperméable et ne fonctionne pas sous l'eau. Évitez tout contact avec la pluie ou de l'eau. Évitez aussi tout contact avec du sable ou de la poussière qui pourrait affecter les roulements du GLIDE GEAR DNA-5050 (cf. chapitre sur l'entretien du DNA-5050).

Trucs et Astuces

53. Si vous utilisez un appareil non-professionnel, vous remarquerez que, même en position "grand angle" vous n'arrivez pas obtenir un plan au standards des professionnels qui utilisent des grues ou des pistes en plus d'un stabilisateur. Pour remédier à cela, nous conseillons d'utiliser avec votre appareil un convertisseur d'objectif grand angle.



54. Exercice de la ligne. L'exercice de la ligne est un moyen simple et efficace pour apprendre à utiliser le GLIDE GEAR DNA-5050 de manière précise. Faite une croix sur un mur plat avec du scotch par exemple. Marquez ensuite au sol une ligne droite pointant vers la croix sur le mur et d'une longueur de 10 à 20 pieds (3 à 7 mètres). Puis, utilisez l'écran de votre appareil pour cadrer la croix comme dans la photo 53. L'exercice de la ligne consiste à marcher le long de la ligne tout en essayant de maintenir le plus possible la croix au centre de l'écran.



Techniques inappropriées

55. Ne tenez pas à pleine main le tube principal comme dans la photo 55. Le cardan ne peut plus bouger librement et faire son travail isolation de l'appareil dans cette situation. Referez-vous aux points 45 et 47 pour la technique adéquate.



56. Évitez que la poignée ne touche la platine de fixation comme dans la photo 56 pour ne pas limiter votre liberté de mouvement et pour éviter les instabilités sur la vidéo. Referez-vous à l'étape 44 pour la bonne technique.



Usage professionnel

Pour obtenir un résultat aux standards professionnels pour un film ou une publicité par exemple avec le GLIDE GEAR DNA-5050, nous conseillons de bien planifier et de bien répéter vos plans et de faire plusieurs prises. Avoir un assistant peut être d'une aide précieuse et en particulier pour les plans les plus compliqués.

Bonne chances et bon tournage avec le GLIDE GEAR DNA-5050!

ENTRETIEN

Nettoyage. Nettoyer le GLIDE GEAR DNA-5050 se fait simplement avec un chiffon ou une éponge mouillée. N'utilisez pas de nettoyants alcoolisés ou agressifs.

Entretien des roulements. Le cardan du GLIDE GEAR DNA-5050 est composé, entre autres, de 4 roulements: 1 roulement autour du tube principal et 3 roulements de plus petite taille. Les roulements sont faits de métal. Si, après un certain temps, vous remarquez un changement dans la fluidité de votre cardan, huilez les roulements avec quelques gouttes de lubrifiant.

Entreposage. Nous recommandons d'entreposer le GLIDE GEAR DNA-5050 dans une position verticale pour préserver les joints du stabilisateur et dans une pièce sèche ou avec une humidité faible. Si vous n'avez pas à disposition de pièces répondant à ces critères, nous conseillons d'enfermer le DNA-5050 dans une poche plastique hermétique.

Avertissements

Soyez vigilant lorsque vous tournez. Faites attention de bien regarder où vous allez surtout quand la luminosité est réduite ou pour un tournage de nuit. Pensez toujours à l'environnement dans lequel vous tournez (circulation des voitures, escalier, terrain glissant ou nivelé, nids de poule sur la route....etc.) et ce même si vous devez aussi vous concentrer sur l'appareil. Soyez prudent même en plein jour ou dans un endroit bien éclairé.

Tout mineur se doit d'être sous la supervision d'un adulte pour pouvoir utiliser le DNA-5050. N'hésitez pas à porter des genouillères, coudières, un casque, des lunettes de protection ou tout autre matériel de protection lors d'un tournage nécessitant de se déplacer rapidement ou d'être dans un environnement potentiellement dangereux.

Garantie

GLIDE GEAR s'engage à réparer ou remplacer à sa charge tout DNA-1000 montrant un défaut de fabrication après un usage normal pendant une période de 90 jours.

Les frais d'envois, d'emballage et d'assurance entre nos locaux et le domicile du propriétaire sont la responsabilité du propriétaire du DNA-5050.

Notre garantie s'applique uniquement à l'acheteur original et ne peut se transmettre. Une preuve d'achat sera demandée pour activer la garantie.

Ne sont pas inclus dans la garantie tout dommage occasionné par un produit n'ayant pas été fourni par GLIDE GEAR. Sont aussi exclus de la garantie tout dommage occasionné du fait de négligence, de mauvais usage, de vandalisme, d'accident, de modification du produit, d'absence d'entretien (pour les DNA-5050 qui sont à usage commercial comme pour un service de location par exemple) ou tout entretien effectué par une autre société que GLIDE GEAR. Notre garantie se limite à la description précédente. Cette garantie vous donne des droits, droits qui peuvent varier d'un état à un autre.

GLIDE GEAR ne peut être tenu responsable pour tout incident ou dommage occasionné lors de l'utilisation de notre produit ou à la suite de toute rupture de garantie. Toutes les garanties explicites et implicites, y compris la garantie de conformité et d'usage normal sont valables pour une période de 90 jours.

Veuillez contacter notre service client pour toutes questions d'entretien ou de garantie :

Glidegear.net

(843) 945-4031 (USA)

Ne renvoyez votre produit qu'une fois nous avoir contacté et qu'après avoir reçu votre numéro d'autorisation de renvoi.

**Fabriqué par Koncept Innovators Inc
Glidegear Products • 1619 Executive Ave, Myrtle Beach, SC 29577, USA
Telephone: 843.945.4031 • Fax: 843.945.4030
www.glidegear.net**