

Date: April 20 2021 Customer: Thermor Ltd Job Number: TH6828 Item Number: 57111 Designer: Alex Vranjesevic Reason For Project: New Item:

sign Update: X

Artwork is not to be amended or scaled. If any changes are required please send through Thermor office with instructions, and we will amend here and resend artwork through. PLEASE RETURN WITH SIGNATURE








WARM • CONFORTABLE • BEAUTIFUL

Instruction Manual

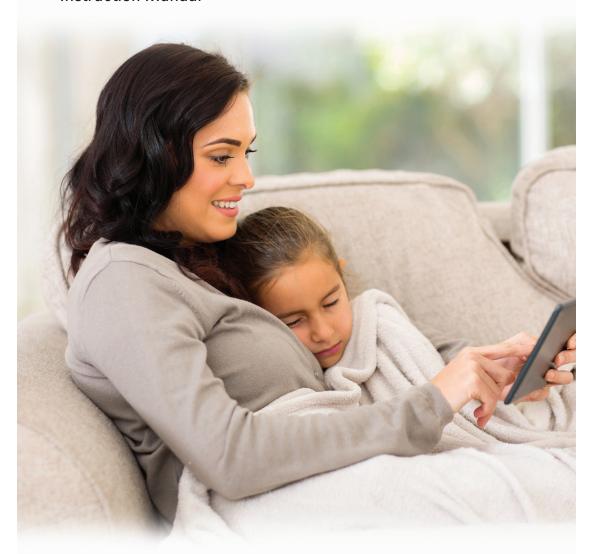

Project Type Instructions

Date: April 20 2021
Customer: Thermor Ltd
Job Number: TH6828
Item Number: 57111
Designer: Alex Vranjesevic
Reason For Project:
New Item:
New Branding:
Design Update: X
N/A:





ΥK



Artwork is not to be amended or scaled. If any changes are required please send through Thermor office with instructions, and we will amend here and resend artwork through. PLEASE RETURN WITH SIGNATURE

Contents

Safety Information1	I-2
Throw & Controller	3
- eatures	4
Getting Started - Throw	5
nstructions	6
Washing Instructions	7
FAQ	8
-CC / Warranty	9

Safety Information

IMPORTANT SAFETY INSTRUCTIONS — DO NOT DESTROY!


WARNING: Failure to follow these safety instructions may

lead to personal injury, including burns!

WARNING: TO REDUCE THE RISK OF BURNS, FIRE OR ELECTRICAL SHOCK, READ AND FOLLOW THE BELOW INSTRUCTIONS CAREFULLY BEFORE USING THIS THROW!

DO NOT USE THIS THROW:

- On an infant or child under the age of 12
- On an incapacitated or immobile person
- On a paraplegic, quadriplegic or amputee
- On a person who is sedated or medicated
- On a person with diabetes
- On a person having poor blood circulation
- On a person who is insensitive to heat
- Over cuts, skin lesions, sores or areas of damaged skin
- **DO NOT** tuck in the wired area, fold, or bunch this throw when in actual use; excessive heating may result.
- DO NOT tuck the throw / controller or supply cord in a sofa or other furniture. All portions of the product and controller should be visible at all times. Like any other electrical cord, this can cause damage to the power cord that may result in an electrical short that leads to a fire.
- DO NOT route electrical cords between the mattress and box spring.
- DO NOT allow the cords to be pinched, trapped, or crossed. Like any
 other electrical cord, this can cause damage to the power cord that
 may result in an electrical short that leads to a fire.
- **DO NOT** use pins they may damage the electrical wiring.
- Be sure that this throw is used on an alternating-current supply circuit of the proper voltage.
- TURN OFF or unplug this throw when not in use.



Safety Information

- Product not for use with inverter supplied power such as from a motor home or boat.
- This product is for in-home use only; not for hotel, motel, or other institutional use.
- If improper operation of this throw is observed, discontinue use immediately and consult the manufacturer.
- DO NOT use with pull-out or fold-up bed. DO NOT use with rocking chairs, recliners, chairs with casters or wheels, or other furniture subject to movement. This may cause the wire to be pinched and create an electrical fault.
- Keep the controller away from drafty areas that may become damp or wet such as an open window. DO NOT cover the controller.
- Wrapping of cord around the controller may damage the cord; loop loosely when storing.
- **DO NOT** dry clean this throw. Cleaning solvents may have deteriorating effects on the insulation of the heating element.
- This appliance has a polarized plug, (one blade is wider than the other). As a safety feature, this plug will fit a polarized outlet only one way. If the plug does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Never open up the controller case. Doing so could prove potentially hazardous and will **VOID YOUR WARRANTY!**
- Use this heated throw **ONLY** with the supplied controller.
- Keep all animals away from your heated throw. They could damage the wiring, leading to a potentially harmful situation.

If you have any questions or concerns regarding your product we encourage you to contact our excellent Customer Service support listed in this manual.



Throw and Controller

ALL PACKAGES INCLUDE:

- Heated Throw
- Instruction Manual
- Controller



Style: Hand-held analog controller

Warming Settings: 10 Display: Backlit Number Buttons: Rocker and Dial

Auto-Off: 10 Hours

Preheat: No

Project Type Instructions

Date: April 20 2021 Customer: Thermor Ltd Job Number: Th6628 Item Number: 57111 Designer: Alex Vranjesevic Reason For Project: New Item: New Branding: Design Update: X N/A:

Revision: A



YK




Artwork is not to be amended or scaled. If any changes are required please send through Thermor office with instructions, and we will amend here and resend artwork through. PLEASE RETURN WITH SIGNATURE

Features

Auto Off	Your heated throw has a built-in feature called "Auto-Off". This feature will automatically turn off the controller after 10 hours of continuous use.
Thin & Flexible Wires	Our heating and sensing wire is designed to be thin and flexible in order to provide a higher comfort level.
Comfort Beyond Warmth	The heated throw materials have a soft luxurious feel that will have you wanting to surround yourself with your throw even when the extra warmth is not needed.
Multiple Heat Settings	You have your choice of multiple levels of heating; allowing for the perfect comfort level at any time.
Continuous Temperature Sensing	Your heated throw uses a continuous sensing technology which monitors, and if need be, adjusts the temperature to remain at your chosen heat level.



Getting Started - Throw

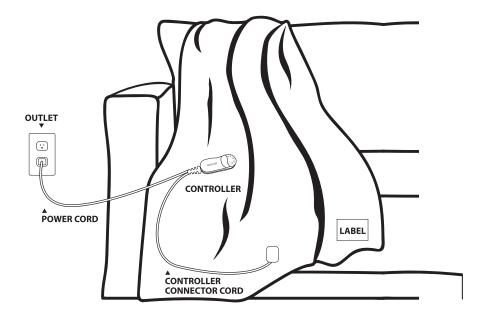

Step 1:

Remove the heated throw from the package along with the controller

Step 2:

Lay the heated throw out flat, with its connector located at the bottom. The label should be located at the bottom near your feet, and visible.

Step 3:

Securely attach the connector cord from the controller to the connector on the heated throw. Make sure that the connection is firmly secured.

Step 4:

Insert the power cord from the controller into a standard home 120V AC, 60Hz wall outlet. Make sure the controller is not covered, that any vents in the controller housing are not obstructed, and the controller is not suspended by its cords.



Instructions

1. Turning "ON"

Turn the controller **ON** manually by pressing the **ON** / **OFF** button or switch. Turn the dial and the analog style controller will backlight the heat level setting on its dial. If the backlight does not illuminate, see the FAO section.


2. Adjusting the Temperature

The analog style controller heat level settings are manipulated by rotating a dial to the desired level. There are multiple heat level settings, with "H" for HIGH; the higher the number or bar, the warmer the throw.

3. Turning "OFF"

Turn the controller **OFF** manually by pressing the **ON / OFF** button or switch. When the controller is **OFF** but plugged in, the analog controller will not illuminate the heat level setting on the dial. **Turn OFF** and / or unplug the controller when not in use.

Note: The Auto-Off feature is not intended to replace the manual turning OFF of the warming product. Please turn OFF and/or unplug the controller when not in use.



Washing Instructions

WARNING:

Failure to follow these washing instructions may damage the product and make it unsafe. Wash by hand or as follows in an automatic washer using slow agitation and normal spin speed:

- Fill washer with warm water
- Add minimum amount of all purpose detergent, agitate to dissolve
- Add bedding and soak for five minutes
- Spin
- Fill for cool rinse
- Agitate one minute
- Spin
- Dry in an automatic dryer on low heat, five minutes only, or line dry
- Remove throw from dryer and drape over parallel lines or a shower rail to finish drying

CAUTION! Do not iron your throw.

CAUTION! Do not dry-clean this product. Cleaning solvents may have a deteriorating effect on the insulation of the heating element.

CAUTION! Do not use a wringer. You may hand wash this product.

CAUTION! Do not dry in a commercial dryer such as those used in laundromats.

CAUTION! Do not power-up this product while it is still damp. For safety's sake, wait until the product is completely dry before connecting it and plugging it in.

CAUTION! Do not use pins – they may damage the electrical wiring.

Frequently Asked Questions

My heated throw does not seem to turn on. What do I do? Check to ensure that the power cord is plugged in. If the throw still doesn't turn on, unplug the power cord and contact Customer Support.

The display is illuminated but I do not feel the throw heating up. What do I do?

CAUTION! The following troubleshooting test represents a non-standard use of your product. Do not continue this test for more than seven (7) minutes. Do not repeat this procedure during actual use. Fold the product with at least four folds. Connect the controller to the throw, and then plug the controller into a working wall outlet. Set the controller to the highest heat setting and wait for five (5) minutes.



Frequently Asked Questions

Place your hand inside the folds. If you do feel heat during this test, the product is working properly. Turn the controller OFF. Lay the product out flat. It is safe to resume normal operation after 20 minutes. If no heat is felt during this test, unplug the power cord and contact Customer Support.

*Note: Heated Throws are not directly comparable to heating pads.

What if I notice an area of the throw that is warmer than all the rest?

Unplug the power cord and contact Customer Support if you become aware of one area of the throw that is obviously warmer than the rest, while the throw is laid flat without bunching or folds.

Can I fold my heated throw over, wrap it around myself, or use it with another heated product to feel increased warmth?

No, these are not recommended uses for this product. This heated throw product is intended to be used while lying flat. Also do not use more than one active heated product at a time.

Can I use my heated throw product with a memory foam mattress?


It is recommended that you check with your mattress manufacturer or retailer for its compatibility with a heated throw. Due to the variety of materials used in memory foam mattresses, compatibility may vary.

Can I use my heated throw product in my RV?

No, this heated throw product is intended for use with a standard home 120V AC, 60Hz wall outlet only.

How do I store my product?

Lightly fold or roll the heated throw when not in use and store in a sealed bag. Avoid storing product in extreme temperature environments such as an attic or garage.



FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to the product are not approved by Biddeford Blankets and could void the user's authority to operate the equipment under FCC jurisdiction.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if modified or not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experiencedradio / TV technician for help.

Five Year Warranty

If this product proves to be defective in material or workmanship within five years of purchase, please return it to the address below. It will be repaired or replaced without charge upon receipt of the unit prepaid with \$5.00 to cover handling, packaging and return postage. Please include proof of purchase, your full name, address, daytime phone number or email address.

BIOS | Medical

■ MANUFACTURED BY/FABRIQUÉ PAR :

THERMOR LTD.
16975 LESLIE STREET
NEWMARKET, ON L3Y 9A1
MADE IN CHINA/FABRIQUÉ EN CHINE
WWW.BIOSMEDICAL.COM