



Remote Dog Training Collar Operation Guide



 Tel. AU 1-300-416-703
Tel. USA 888-686-6495

www.mypetcommand.com
Email :- support@mypetcommand.com

For use with the DT 2200 Remote Dog Training Collar ONLY.

Introduction

Thank you for purchasing the My Pet Command DT 2200 Remote Dog Training Collar! Our mission is to provide the best and safest electronic training products for you and your dog.

Your pet's safety is our number one priority. This guide has been carefully developed to ensure you are provided with the information, techniques, and steps necessary to successfully train your pet in the safest manner possible.

Please refer to the Frequently Asked Questions section found at the end of this guide for any questions you may have. If you have any problems with the device, or have additional questions, please contact us and our team will resolve them immediately.

IMPORTANT: Before using the device, read this guide carefully and in its entirety including the Training Guide, Frequently Asked Questions, and Troubleshooting sections.

Safety Information

IMPORTANT: If your dog is aggressive or has an aggressive disposition, **do not use** this product. Severe injury or death may occur to you or your dog. If you are unsure if this product is appropriate for your dog, please consult your veterinarian or certified trainer.

IMPORTANT: If your dog is under 10lbs (4.5kg) or under 6 months old, **do not use** this product. Severe injury or death may occur to your dog. If you are unsure if this product is appropriate for your dog, please consult your veterinarian or certified trainer.

CAUTION: Improper or inappropriate use of any training collar system can be harmful to you or your dog. Use the device only in accordance with this manual.

CAUTION: Please carefully read and follow all instructions found within this manual. The proper fitting of the collar on your dog's neck is important. Incorrect fitting of the collar, or leaving the device on for too long, may cause skin damage, irritation, redness, pressure ulcers, bed sores, or pressure necrosis. If any symptoms appear, **discontinue use immediately** and seek the attention of your

veterinarian. Follow these steps to help keep your pet safe and comfortable:

1. **Do not** leave the collar on for more than 8 hours in any 24 hour time period.
2. Reposition the collar on your dog's neck every at least every 2 hours.
3. Check for proper fit of the collar at least every 2 hours.
4. **Never** connect a lead, leash, or other similar attachment to the electronic collar (a separate collar should be used to attach a leash or lead).
5. When using a separate collar for a lead, ensure the separate collar **does not** put pressure on the electronic collar.
6. Wash the dog's neck area and the contacts of the collar weekly with a water and mild soap. Rinse thoroughly.
7. Examine the contact area daily for signs of a rash or a sore. If a rash, redness, skin damage, irritation, or other symptom is found, **discontinue use immediately**. If symptoms persist for more than 48 hours, seek the attention of your veterinarian.

Table of Contents

Components	5
How the system works	5
Main features	6
Transmitter.....	8
Receiver collar	11
Spanner	13
Setting up for multi-dog use and pairing Collars to the remote	13
To Unpair a receiver collar from the remote	17
Charging	18
Highlight/Nightlight beacon flashing LED	20
Training guide.....	21
Battery replacement	23
General training tips.....	23
Intensity selection tips.....	25
Test light instructions.....	25
How dogs learn	26
Frequently asked questions	29
Troubleshooting guide	34

Components



How the System Works

The DT 2200 Remote Dog Training has been proven safe, comfortable, and effective for pets over 10 pounds (4.5 Kg) and at least 6 months old. Training information within this guide paired with the DT 2200 Remote Dog Training Collar form a system to allow you to control your pet without a leash and at long distances. At the push of a button, the Transmitter sends a signal and activates the Receiver Collar. Using the DT 2200 Remote Dog Training

Collar consistently and properly can correct many misbehaviors your pet exhibits. Misbehaviors may also include excessive barking, jumping etc.....

IMPORTANT: The effective distance of the DT 2200 Remote Dog Training Collar is dependent on how the Transmitter is held. Ranges will vary. Hold the Transmitter in a horizontal position, away from your body to achieve optimum range. Terrain, weather, vegetation, vehicles, buildings, transmission from other radio devices, and other factors will affect the range of your remote trainer.


Main Features



The DT 2200 Remote Dog Training Collar includes many features specifically designed to improve the behavior of your dog. They include:


1. Open field range up to 2200 meters (1.25 Miles).
2. Multi-dog use from the same transmitter (up to 3 dogs).
3. Highlight/Nightlight LED function for greater night visibility.
See your pet from up to 300 meter (328 yards) away.
4. 10 levels of static shock.
5. Momentary and Continuous shock options
6. 10 levels of vibration.


7. “Beep” sound activated with a push of a button.
8. Intensity can be set remotely using the “+” and “-“ buttons.
9. LCD digital display for shock and vibration levels and dog identification.
10. Memorize shock levels for different dogs.
11. Easy to operate rubber buttons.
12. Waterproof transmitter and receiver allowing dogs to safely swim or get wet.
13. Rechargeable 3.7V Li-ion battery for both transmitter and receiver.
14. Strong TPU collar strap.
15. LED low power indicators where a red light flashes when battery is low.
16. Full function multi-dog training system.
17. 8 seconds of safe static shock protection.
18. Warranty included.
19. Safety prong caps provided to eliminate static shock feature.

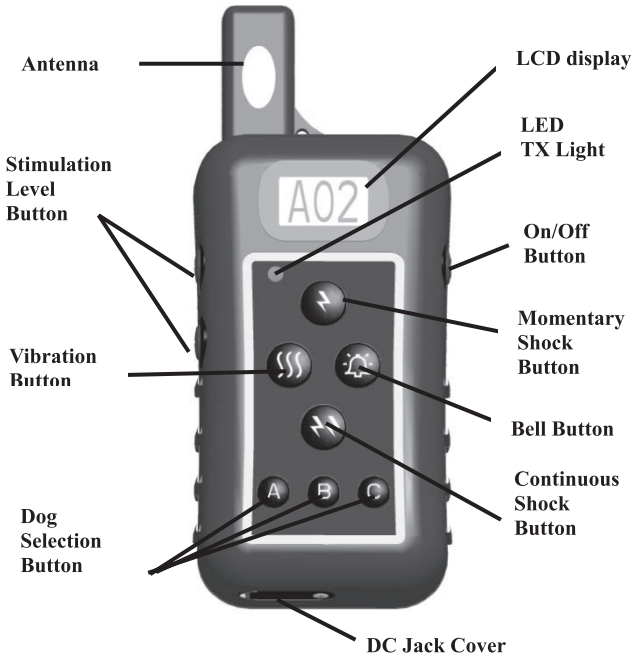
Transmitter





“” and “” **buttons:** Press these buttons to adjust the shock and vibration intensity from levels 1 (lowest) to 10 (strongest).

“” **button:** This is the power switch; hold button for 2seconds to switch on power. LCD display will show “A01”. You may change the dog ID by pressing the relative buttons. If you want to switch off the power, hold this button for 2 seconds.

“” **button:** No-stimulation warning beep only

“” **button:** Vibration stimulation. Pressing once will vibrate the Receiver Collar 1 time. Press and hold will emit continuous vibration. Letting go of the button stops vibration. Vibrating will automatically stop if the button is held for 8 or more seconds.

“” **button:** Shock stimulation. Pressing once will emit a single static shock through the Receiver Collar 1 time.


 **button:** continuous static shock for about 8 seconds.

“A, B, C ”buttons: Dog selection button, default is **“A”**. Your transmitter is capable of training up to three dogs with optional receiver collars. Selecting **“A”** and the LCD displays the dog ID **“A XX”**. To add a second dog to train, press the **“B”** button and LCD will display **“BXX”**. To add a third dog to train, press the **“C”** button and the LCD will display **“C XX”**. The **“XX”** will show a number from 01 to 10 representing the shock and vibration level for the selected dog.

IMPORTANT: The red LED light will flash when the battery is low on power. Recharge the battery at once.

Receiver Collar

IMPORTANT: Charge the Receiver Collar and remote before first use for Min 6-8 Hours. If it doesn't charge, contact us immediately

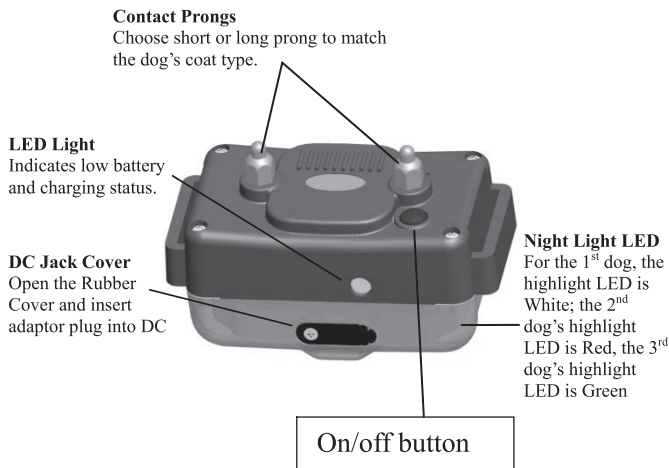

The On/off button

- Press and hold for approx. 4-6 seconds turns the collar on. Two confirming tones will sound and a green LED light will flash/pulse 1every per 5 seconds if Paired. The LED will flash/pulse fast continuously if the collar is not paired. Please note you will always receive a paired collar from purchase.
- Press and hold for approx. 4-6 seconds to turn the collar off. One long tone will sound and the green LED light will stop flashing and turn off. Turn the collar off when not in use to conserve battery

Important Receiver Collar Notes

1. Always charge before use. Ideal time to charge is 4 to 6 hours for the receiver and TX. This extends the life of the battery.
2. The on/off buttons need to be held down for several seconds to turn the units on and off.
3. If the receiver won't connect/react to a specific Letter A,B,C on the remote, try a different Letter.
4. If the green light flashes/pulses/flickers very fast all the time That means the collar is not matched (Follow matching instructions. Paired collars should always flash one pulse every 5 seconds
5. The receiver is waterproof without the rubber stopper in place. This does not affect performance. You may remove the receiver and attach it to a collar that you prefer to use instead the one provided.
6. You may apply the prong caps to prevent any static shock from being applied to your dog.

Spanner



Spanner

Change the Contact Prong depending on the pet's coat type.

IMPORTANT: If the contact prong is tight, don't continue to turn the spanner clockwise or the contact prong will be broken. Never turn the contact prong too tightly. Turn anticlockwise to loosen or remove.

You can expand your one dog trainer to a multi-dog remote trainer by yourself. Simply purchase extra receiver collars and add them to your system.

IMPORTANT: If the collar doesn't turn on please contact us for a new battery or charger.

Setting Up Multi-Dog System and pair your collar

Please note when you purchase either a 1,2 or 3 Collar Kit, all your collars should be matched to the remote control buttons A,B or C which was done at the factory so there is no need for you to unmatch/match collars. The only time you need to match/Unmatch

collars would if you are buying extra collars or if you replace your remote control etc....


If you do get an extra collar etc.... and the collar does not come unpaired (Fast Flashing LED= Unpaired), please make sure you follow instructions **to unpair it first and then pair it to the remote control you have got.**

Only turn on 1 collar at a time when pairing.

Step 1: Take out 1 Unpaired receiver collar. Press and hold “ON/OFF” button. After two “beep” sounds, release the button, the receiver power is on. Green LED light should be flashing frequently. This means the collar is unpaired from the remote.

(Note: Never have 1 or more unpaired ON receivers at the same time and work with 1 collar at a time only.)

Step 2: Take out the transmitter that you want to match to the

receiver. Press and hold on the “” button until LCD


display occurs then release, the transmitter is now on.

Step 3: Bring Both Collar receiver and the Transmitter very Close together and then Press and hold the **Dog selection**

button (A,B, or C) together with  button

at the same Time. Do Not release the two buttons.

If you want to match the 1st dog , press and hold on **“A”**

button and  button at same time until the digital

numbers on the LCD display starts counting up on the

screen. The numbers will be counting up e.g. “08, 09, 10,


11.....99”, increasing automatically, this is correct.

If you want to match the 2nd dog , press and hold on **“B”**

button and  button at same time until the digital

numbers on the LCD display starts counting up on the screen.


If you want to match the 3rd dog , press and hold on “C”

button and “” button at same time until the digital

numbers on the LCD display starts counting up on the screen.

After hearing 5 “beeps” sound from the receiver and you see the green LED flashing slow down to once every 4-5 seconds, you release the button. It should Pair pretty fast.

Step 4: Test Paired Receiver/collar


press “” button, if you can hear the “beep” sound from the matched receiver then congratulations, you have matched the receiver. You can also use the test light to place the prongs in the little gaps and press each button on the remote to see if the test light comes on. This shows that the collar is working. If you choose, you can also put



it on the lowest setting and test on the back of your hand/arm for confirmation if you're still unsure. You can also check by pressing the Vibrate button and making sure the collar Vibrates

If the collar didn't Pair, please repeat the step3 Make sure Collar is very Close to the remote or from different direction.

2. Unpair a Paired Receiver Follow the below steps one by one to unpaired a receiver/collar:

Step 1: Pick up the Paired receiver. Press and hold the “ON/OFF” button. After two “beep” sounds, the receiver's power is on. The green LED will flash 1 time per 5 seconds.

Step 2: Press and hold “” button on the transmitter until the LCD display occurs then release, the transmitter power is on.

Step 3: Bring the Receiver collar next to the transmitter and then Press and hold the “” button and “” button at the same time, until the digital number on the LCD display

counts up continuously (01,02,03...98,99). increasing automatically, this is correct. Not to release the two buttons.

You will hear for the 5 “beep” sounds from the receiver. The green LED light of the receiver should now be flashing frequently. Congratulations, you have cancelled or Unpaired receiver successfully.

If the collar didn't Unpair please repeat the step 3 and make sure collar and receiver are very close etc.....

Charging

The Transmitter and Receiver Collar charge rapidly in about 3-6 hours and can be charged at the same time

To recharge, open the rubber cover first. Plug the adapter contact pin into the AC power outlet and insert the adapter plug into the receiver DC Jack.

The transmitter and receiver collar can be charged by connecting a USB cable or other 5V DC power supply, such as cell phone adapter, notebook, or computer.

CAUTION: Do not charge batteries in hot areas. Keep far away from fire and flames.

IMPORTANT: If the collar doesn't turn on, please contact us for a new battery or charger.

Receiver collar charging

1. The red LED light is on when charging.
2. The green LED light is on and the red LED light is off when the receiver collar is full charged.
3. The receiver's red LED light will flash when the battery is low. power, recharge the battery immediately.





Transmitter Charging

1. The LCD display is "CHA" when charging.
2. The LCD display is "FUL" when the transmitter is full charged.
3. The transmitter's red LED light will flash when the battery is low.

Stimulation

Your remote trainer has 10 levels of intensity, so you can find the best level for your dog's temperament and the type of training. You

may also select either vibration or shock stimulation, depending on your dog's temperament and your training purpose.

You may press “” or “” buttons to select suitable shock or vibration level, then press the “” button for up to 8 seconds continuous vibration depending on how long you hold the button for, or press “” button for shock stimulation for up to 8 seconds depending on how long you hold the button for.

Highlight/Nightlight Beacon Flashing LED

Your remote trainer has 3 colors(white, red and green) of highlight flash. You can find out your pets from up to 300 meters (328 Yards) away in dark night without the remote control.

To get highlight flash to work, you must match the receive collar to transmitter first as instructed above and the collar needs to be in remote training Mode to active the flashing LEDS.

Continuous flash:

Press and hold on “A” button of Transmitter for 3 seconds, the 1stdog receive collar will highlight flash 5 times, then flash 1 time every 3 seconds continuously. To stop the continuous flash, press and hold on “A” button for 3 seconds again. The 1stdog Receiver

Collar will flash 2 times then stop the continuous flash.

Momentary flash:

Press “A” button one time, the Receive Collar will flash one time.

Press “B” button to operate the 2nd collar. Press “C” button to operate the 3rd collar.

Matching different dog Receiver Collars reveals different highlight flashing:

The 1st dog receive collar is White highlight LED.

The 2nd dog receive collar is Red highlight LED.

The 3rd dog receive collar is Green highlight LED.

Training Guide

Choosing the Appropriate Length of Contact Points

This is a critical step and is often overlooked. If you don't have the proper length contact points, the Receiver Collar won't work correctly. For smaller dogs, the short contact points should be used. For larger dogs, or dogs with a heavier coat of hair, you use the longer contact points. You may trim the hair if the coat is too thick,

but never shave completely to the skin as this may lead to a rash or infection.

Fitting Collar on the Dog

Make sure your dog is standing and then place the collar strap in the middle of the dog's neck. The receiver should be on the underside of his/her's neck. On some dog's necks, the receiver will naturally seek a slightly off-center position.

Tighten the buckle by holding it with two fingers as you pull the strap snug. Remote training collars must be put on a dog quite snugly to ensure consistent contact and reliable stimulation. The collar needs to be placed relatively high on the dog's neck, usually just a couple of inches below the dog's ears. The collar should be snug on the dog's neck and should not dangle. If the collar is too loose, the contact points will not be touching your dog and it will not work. A good indicator that the collar is fitted properly is if you can fit two fingers under the collar. Never over tighten as this will put a lot of pressure of the prongs on the neck. A collar that is too tight will increase the risk of pressure necrosis in the contact area.

Do not put any fingers under the strap as you tighten it. Check after several minutes if the collar is still fitted correctly. This is

something you should do regularly as well as checking and cleaning the area under the neck.

Battery Replacement

The battery is designed to last for over 2 years if used regularly. Any problems with charging or battery life, including not charging or turning on, please contact us. The batteries provided are designed and produced specifically for this device. If you need a new battery, please contact us or visit our website to order.

When removing the old battery pack, care must be taken when gripping the connector firmly to avoid damaging the wires. Never shorten the battery wires as though unlikely, it may cause fire or explosion.

General Training Tips

1. Make training sessions short and positive, between 10-15 minutes long for each session.
2. Train one dog at a time.
3. During the first initial training sessions, keep the dog in a familiar outdoor environment.
4. Use a long leash fastened to a non-metallic collar to help the dog's learning.

5. Be consistent. Give your dog a tone and/or stimulation with each misbehaviour.
6. Teach the dog a command first before reinforcing the command with the remote transmitter.
7. Issue one obedience command at a time. Do not use the training system for commands that the dog has not learned.
8. Do not overcorrect your dog. Use as few stimulations as possible to train your dog.
9. During training, look for all the positive changes in the dog's behavior and remember to reinforce them promptly with ample praise and reward.
10. If you notice one situation in which your dog misbehaves repeatedly, set up this situation as a training session. This will dramatically increase your chances of success.
11. If your dog has a timid reaction to the tone or stimulation (especially the first couple of times), do not be alarmed. Redirect his attention to a simple and appropriate behaviour (i.e. a known command such as "sit").
12. Please keep in mind, that you should keep training sessions short and end every session on a high note. Stop training and play with the dog as soon the dog has accomplished a new level of proficiency.
13. Never use the DT 2200 Dog Training Collar to correct or

eliminate any form of aggressive behaviour. If your dog exhibits such behaviour, contact a professional trainer. Aggression in dogs is the result of many factors. It may be a learned behaviour or it may be brought on as a result of fear. Another factor contributing to aggression in dogs is social dominance. Every dog is different.

Intensity Selection Tips

The correct intensity for training is normally one that will motivate the dog, but not overwhelm them. Dogs are like people in that they all have individual sensitivity levels. Also, different types of training call for different levels of intensity. So it's wise to test your dog to find the correct intensity level before you start training.

IMPORTANT: For best results when finding your dog's sensitivity, use continuous stimulation. If your transmitter has more than one button for continuous stimulation, use the button for the lowest level when finding your dog's sensitivity.

Test Light Instructions

1. Turn the collar receiver on.
2. Hold the test light contacts to the contact points.
3. Press a stimulation button on the remote transmitter.

4. The test light will flash.
5. Turn the collar receiver off.
6. Save the Test Light for future testing.

IMPORTANT: If the Test Light does not flash, recharge the battery and re-test.

How Dogs Learn

Here are some basic guidelines covering obedience commands using the DT 2200 Remote Dog Training Collar.

Follow a step-by-step introduction process on each command.

Don't assume that your dog will understand a remote trainer correction in connection with a command. The stimulus can confuse them initially, even if they know the command.

Don't introduce too high of an intensity level.

Use a level that is just high enough to cause your dog to respond to it after repetition. Do not introduce the collar at such a high level that your dog becomes worried or is vocalizing. The intensity level of remote trainers can be adjusted for a wide range of breeds and temperament types.

Don't introduce remote training around distractions.

Keep things simple for your dog in their first sessions. They can't learn well when there's too much going on.

Learning to Train

Every animal on the planet has an alpha or beta relationship with every other animal. We usually think of "beta" as submissive and beaten down, but in wild packs or herds, this is not the case. The beta dog in a pack of wild dogs is still quite happy and lives a good life. So your dog should live the comfortable life – while remaining in the beta position. Your dog will be quite happy being beta as long as you show the dog that beta is a good way to live. In dog terms, you are the "alpha," giving your dog everything it needs to survive. The essentials of food, shelter, and most importantly, companionship (the pack) are provided by you. For those things, your dog will work and be happy as long as you demonstrate that you will not submit to challenges.

To be sure, the beta dog will present regular challenges in hopes of gaining the alpha position. If the beta dog wins the challenge, there is a new leader of the pack, so do not give in. Some of the challenges are subtle. Those are the ones you must pay close attention to while training. If you win the small battles, the big

fights will be much easier to handle. Dogs see the world in black and white. To your dog, either you are in control or it is. There is no middle ground.

There are two most important points, **conditioned responses** and **substitution**, will be the cornerstones of your training program.

Conditioned responses to commands are mandatory for a properly trained dog. When you explain something one time to a person, he or she will understand it and quite often give a positive response when questioned on that topic. Canines are different in that they trust their instincts implicitly. Instincts have protected canines for thousands of years from wild animals and other threats, and those threats still live in their minds today. In your training program, you must totally condition the responses to the obedience commands to such a degree that your dog trusts you more than its own instincts.

This is a tall order, and you must take it seriously or you will not have success. Simple repetition is the only way to properly condition a dog. Simple repetition to the tune of around 1,000 repetitions per command will do this nicely. This may seem like an undoable task, but if you will train consistently, it will take a much shorter time than you think.

Substitution: This is where we use a stimulus to cause a response and then add another stimulus simultaneously until the second stimulus evokes the same response as the first. You might remember Dr. Pavlov's work with ringing the dinner bell as he was feeding his dog. It did not take long before simply ringing the dinner bell caused the dog to salivate. You will use this same practice in training your dog, beginning with a leash, progressing to words and then finishing with electrical stimulation. It may sound overwhelming right now but you will be successful and your dog will accept this without question if you follow the steps.

Frequently Asked Questions

Is the stimulation safe for my dog?

While the stimulation is unpleasant (it produces a static shock like we sometimes experience as humans), it is harmless to your dog. These devices also require interaction and training from the owner to achieve desired results.

Is the collar waterproof?

Yes, they are designed to be completely waterproof. Any problems please email us for a faster or similar response time.

If the rubber stopper comes away from the charging port, is the collar and remote still waterproof?

Yes, this makes no difference to the waterproof status of the device, though keep in place if possible to keep debris out and for peace of mind.

How old should my dog be before I use this device?

It is recommended that your dog be 6 months old and at least 10 pounds (4.5kg) to use a training collar. Your dog should have learned the basic commands such as “sit” or “stay”.

How big does my dog need to be to use this device?

Your dog needs to be over 10lbs (4.5kg) to use this device.

The collar is too long, is it ok to cut off the excess collar?

Yes.

Once my dog is trained, do I still need to use the collar?

This is up to you, you can keep the collar on for insurance, or only wear it in high risk environments. If you dog is completely trustworthy, you can choose either way. You may also just use it from time to time as a reinforcement or as a refresher for certain behaviors.

Can I use this on my aggressive dog?

We do not recommend any of our products to be used on aggressive dogs. In this situation please contact your local veterinarian or professional to trainer to determine if your dog might be aggressive.

Will I get exactly the 2200 meter (1.25 Miles) range as advertised?

Testing for the 2200 meter (1.25 miles) range is performed in perfect conditions. The range you get will vary according to terrain, weather, vegetation, as well as, transmission from other radio devices. For best results make sure the collar has the light closest to the dogs nose and you hold the remote horizontally and away from your body.

How long can I give continuous stimulation to my dog?

You can hold down the vibration or shock button for up to 8 seconds before the safety feature kicks in and it stops. You then need to press the button again if you want to shock for up to 8 seconds again.

What do I do if on the off chance my dog's neck becomes red and irritated?

This is due to the contact points irritating the skin. Discontinue use

for a few days. If the condition persists beyond 48 hours, see your veterinarian. Once the skin returns to normal, resume use and monitor the skin condition closely. You should be checking regularly for irritation as every dog responds differently.

Can I use a leash with the training collar on?

DO NOT attach a leash to the training collar. You may use a separate non-metallic collar on your dog's neck and attach a leash. Be sure the extra collar does not interfere with the contact prongs.

How do I know if the collar is working?

Use the test light that comes with your device. Set up the collar then match the prongs to the metal strip on the test light. You then press the shock to see if the button lights up. If they do then the collar is ready to go.

Can I test the collar on the back of my hand or arm?

This is up to you and we take no liability for this action. Some people choose to do this so they can feel the intensity that the dog is experiencing. The lower levels might not be felt by you depending on your sensitivity.

Is this a continuous or one-time shock?

Both. It will stop when you let go of the button. If you only press it once then it will be a one-time shock. If you hold down the button you can emit a shock for up to 8 seconds, before stopping and pressing the button again.

How many dogs can I set up on this system?

Three (3). Additional collars are required for more than one dog.

Do I need to set up the collar every time I use it?

No, even though it is quick once you know what you are doing, it has a memory function and saves your last settings and remains connected unless you have disconnected the collar.

How long does the battery last?

The length of time the battery lasts between charges depends on how much you use the device. If used often it will need to be charged every other day like a mobile phone. The batteries are designed to last 3-5 years if used regularly. Any problems please contact us and we can send a replacement.

Troubleshooting Guide

Problem#1: No stimulation when a button is pressed.

The receiver has not been activated. The receiver must be turned on otherwise it won't work at all. The receiver has not been matched to your transmitter. Follow the instructions to match.

Problem#2: The beeper of receiver doesn't make any sound when the receiver is turned on.

Press dog selection button to choose correct dog ID before pressing.

Problem#3: The stimulation seems too high, not high enough, or no feeling at all.

The collar strap is not tight enough. Make sure the contacts points connect to the dog's skin well. The intensity level is not correct, adjust the level. The batteries are low. Recharge as needed.

Problem#4: The receiver light changes color to indicate low battery very quickly.

The unit has been left turned on in between training session. Make sure the receiver is turned off after use. You are training in very cold weather.

Problem#5: The remote trainer doesn't have range or the range is significantly reduced.

Either you or the dog is shielded by a metal structure. Operate it far away from these structures. The receiver is on backwards. For best range, position the receiver so that the light faces toward the dog's nose. Radio interference. Wait a short while then try again, or move to another area.

Problem#6: The receiver cannot receive any signal or cannot work at all.

Check the receiver on/off button, make sure the receiver is turned on. Check the Receiver Collar light is green LED and flashing on every 5 seconds. Check the transmitter, if it has a low battery, charge transmitter first. The battery is broken, please contact us and we will send you a replacement battery. The batteries are specifically designed for this model. The charger is broken, please try in your computer. Cancel the receiver match, then re-match it with the transmitter.

