


Polimag Magnetic Tumbler

by Pepetools

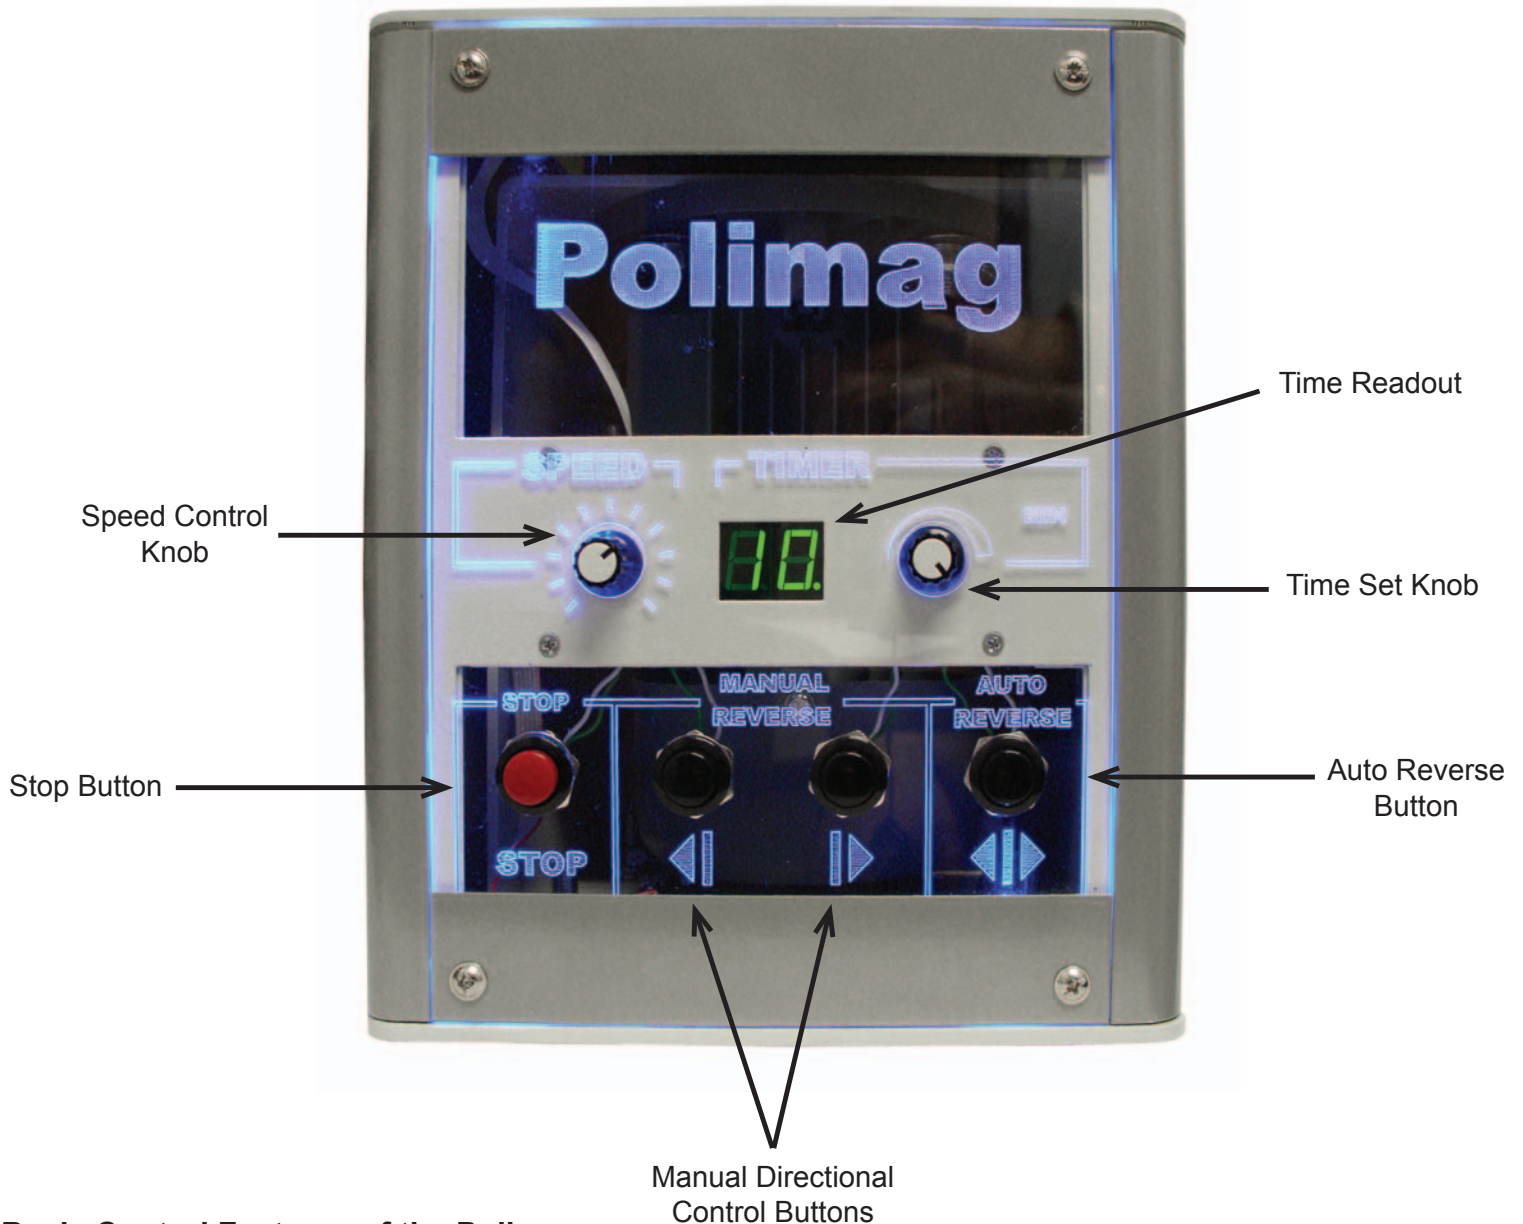

Basic Control Features of the Polimag:

Speed Control Knob- Controls the rate at which the pins spin in the bowl.

Time Set Knob- Turn to set the amount of time you would like the Polimag to run, up to 99 minutes.

Time Readout- When the unit is off and you turn the Time Set Knob, it will show what time you are setting. When the unit is in operation it will show you the time remaining before the unit stops spinning.

Auto Reverse Button- Pressing this button will start the unit. It will cycle in each direction for 40 seconds and continue to reverse until the timer is up.

Manual Directional Control Buttons- When pressed will start the unit spinning in a single direction until the timer is up.

Stop Button- Pressing this button will stop rotation of the unit.

Note: The color of the front panel changes depending on which mode the unit is in.

MANUAL




AUTO REVERSE



STOP



Note: The voltage for this unit is factory set to 220V. Before use ensure that the voltage is set to the proper setting using the switch beneath the power switch on the back of the unit.

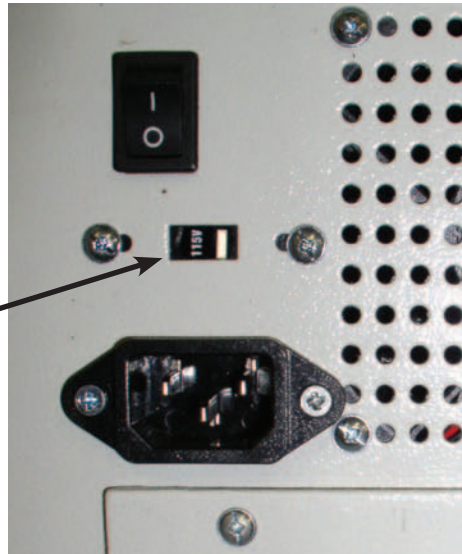

Also included with your unit are a 3.2 Liter canister with lid, 100 grams of high quality magnetic pins and 2 ounces of solution.



To begin use:

- Plug unit into appropriate power source and turn on power. Button is located on the back of the unit. When the unit turns on the front panel should be lit red.
- Place the pins and a capful of solution into the canister with approximately 1 liter (approximately 32 ounces) of water and up to 50 small to average sized pieces to be finished.
- Place the canister in the center of the top of the unit.
- Set the timer and push a Manual button or the Auto Button. The unit will run for the amount of time set, then the pieces can be removed and inspected.
- Water and solution should be changed each time you tumble new items.
- For best results pins should be kept clean, cola works very well as an occasional cleaning agent, add into canister with pins and run unit for one minute. Rinse canister and pins thoroughly, then resume normal procedures.