1 START FRAME INSTALLATION

Pivot the hangar bar feet 90° and nail to structure.

2 WIRING

Connect the wiring in the J-Box.

3 FINISH FRAME INSTALLATION

Swing the frame up and nail remaining feet to structure.

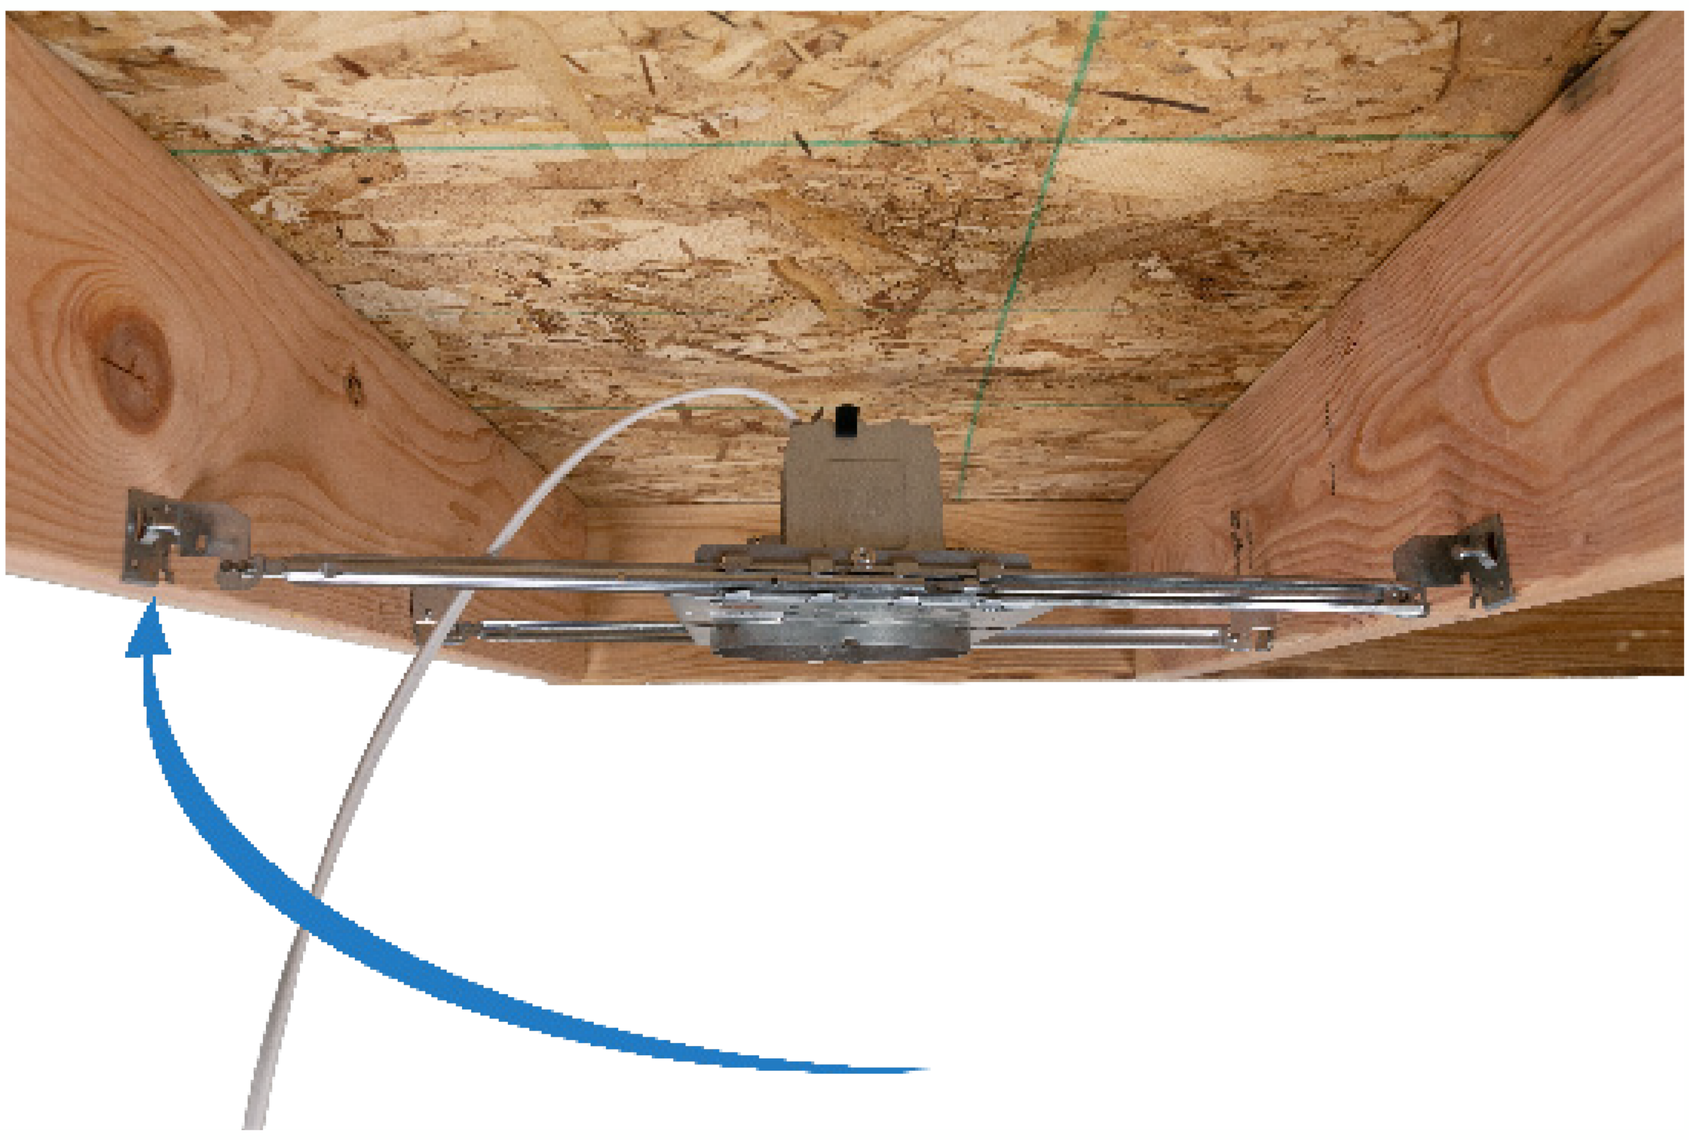

4 DOWNLIGHT INSTALLATION

Mate the IDEAL connector (A) and then easily snap the cap on the DLR (B). Mount DLR to frame (v-springs or friction clips per model) and push upward, flush to ceiling surface (C).