## THRUSLIDE TOP MOUNTED BAR TRACK

1830mm

103  406  406  406  406  103

H+43mm

H

Set the door to allow a correct overlap of the door in relation to door/wall opening

10mm

See additional website PDF and tables with clear guidance diagrams showing the track position

**A router is required**

Ø10

Ø5.5

(x5)

(x2)

(x2)

(x1)

(x1)

(x1)

M8x90 (x5)

(x2)

(x5)

M6x40 (x4)

ST4.2x25 (x2)

(x1)

(x2)

**1**

406  406  406  406

H+43mm

30mm
Ø10
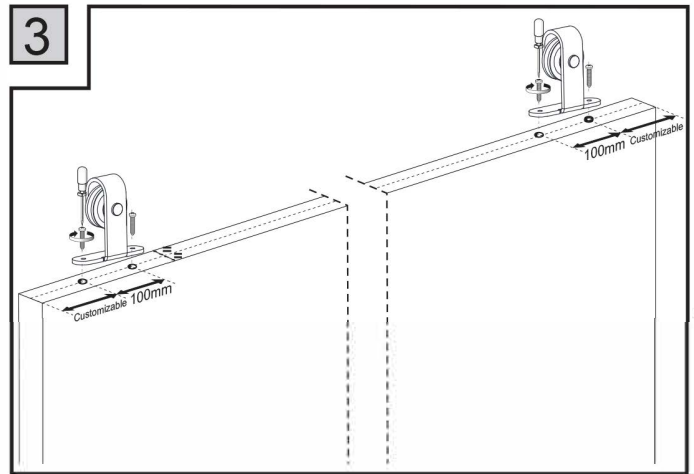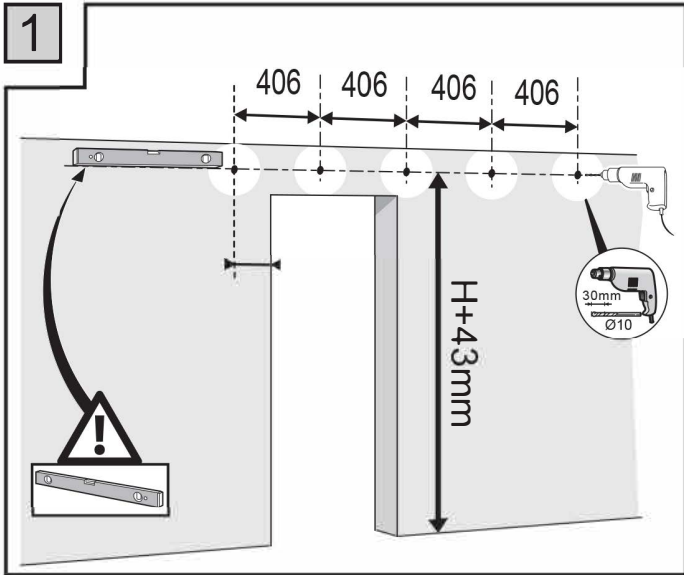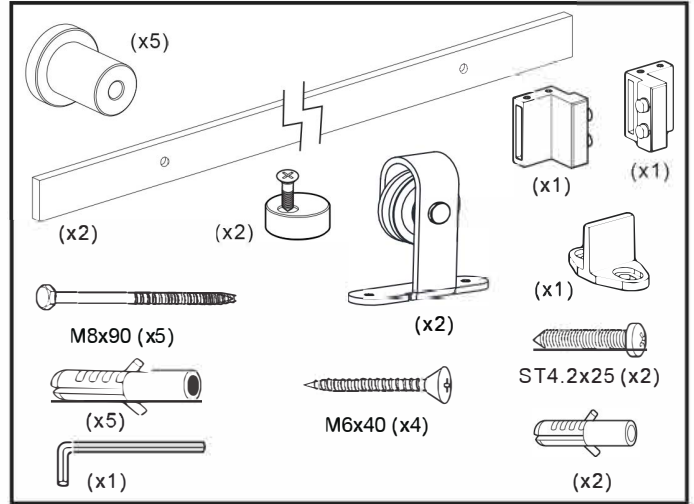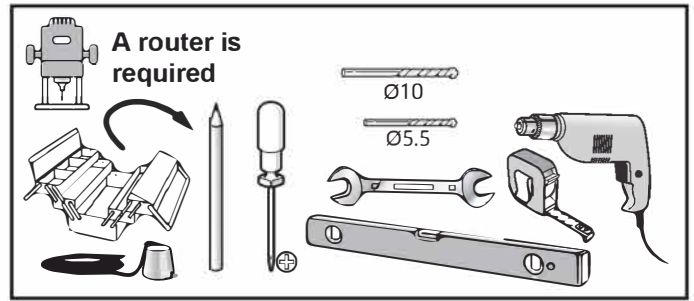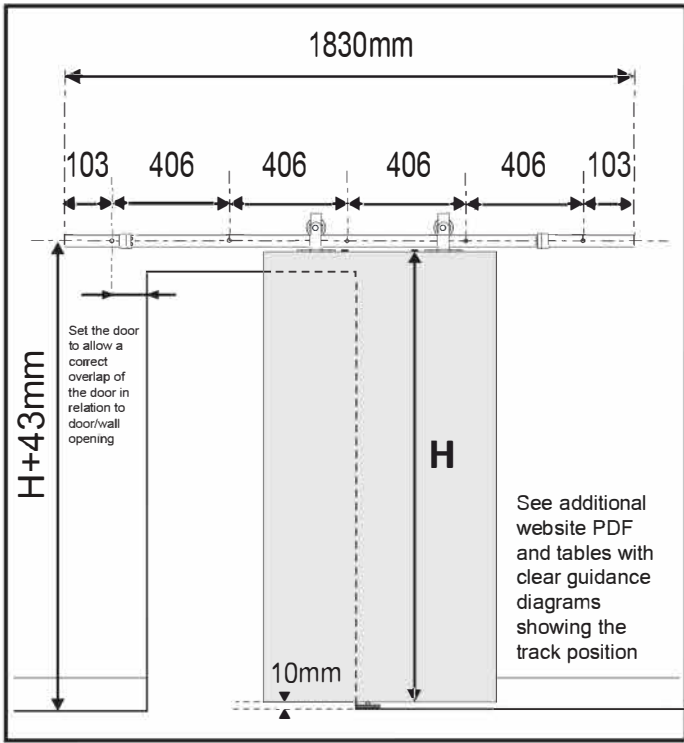
**2**  For the best results and minimal clearance between door and frame/architrave please investigate fitting this wall fixing spacer directly to the wall, this will require the lintol facing/architrave being removed from the doorway OR fitting timber spacers against the frame legs/lintol BUT please check what suits your situation best.

(X1)

(X4)

**3**

100mm  Customizable

Customizable  100mm
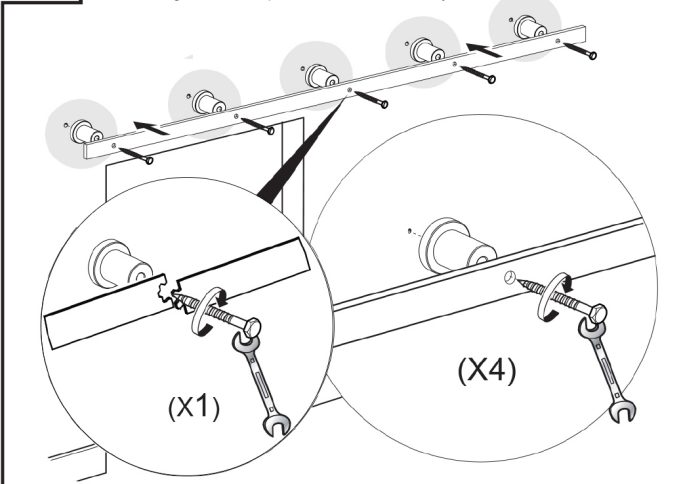
**4**  Anti-Jump Blocks

(X2)

Holes are offset, turn the blocks to the fixed position and tighten

**5**

7mm
20mm

1

2

**6**

30 mm
Ø5.5
36.5mm
25.1mm

**7**

Door stop
(X2)

It may be necessary to remove the
track end bolt (at each end) to
allow the door stop to be fitted
correctly, then re-fix the end bolt