Ergoplan Credenza

Assembly Instructions

Tools Required: Powered Screwdriver

Ergoplan Credenza

Assembly Instructions

- To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

Recommended
2-person Step

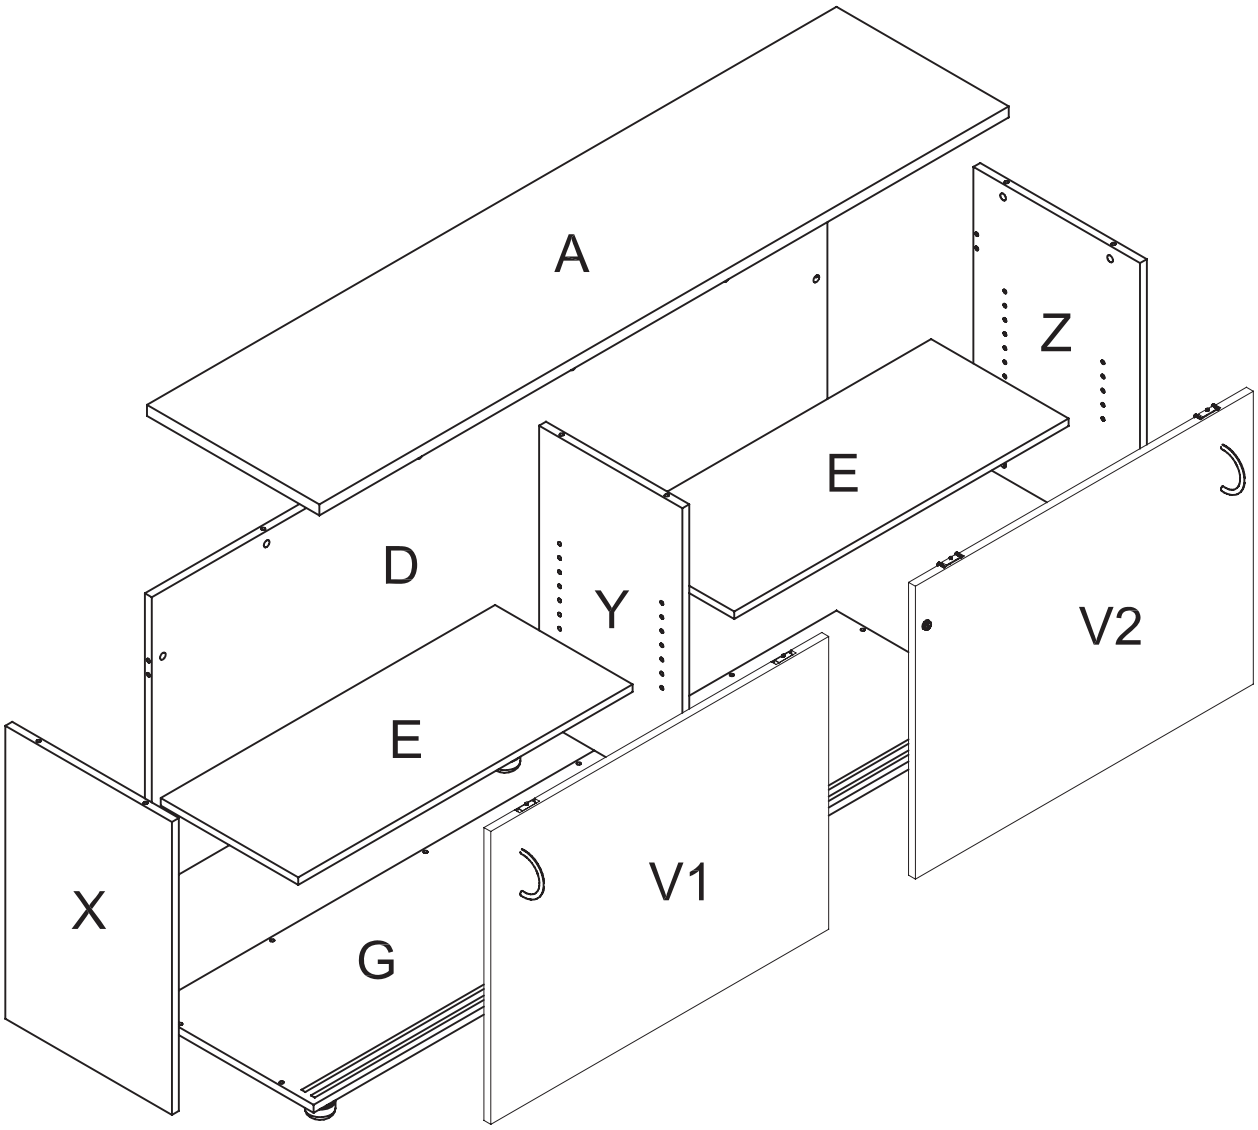

Ergoplan Credenza

Assembly Instructions

Pre-installed parts

c5 Cam

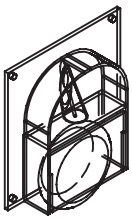

t2 Castor

PARTS LIST

Item	Decription	Quantity
A	Top Panel	1
X	Left side panel	1
Z	Right side panel	1
D	Back panel	1
G	Bottom panel	1
V1	Left Door panel	1
V2	Right Door panel	1
E	Moveable shelf	2
Y	Vertical panel	1

Item	Decription	Quantity
c1	6x35 Cam Bolt	24
d1	8x30 Dowel Pin	24
c2	(5/8")Cam Cover	24
p1	Threaded Dowel Pin	8
s7	4x22 Fix Bolt	4
h3	Handle	2
s1	3.5x15 Screw	10
b1	Bracket	2
c6	Cushion	6
s2	3.5x35 Screw	6
k3	Lock	1

c1 6*35 Cam Bolt-24



d1 8*30 Dowel Pin-24

c2 (⅝") Cam Cover-24

p1 Threaded Dowel Pin-8

s7 4*22 Fix Bolt-4

h3 Handle-2

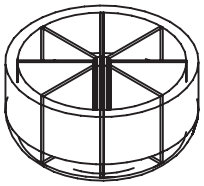

c6 Cushion- 6

s2 3.5*35 Screw-6

s1 3.5*15 Screw-10



b1 Bracket- 2

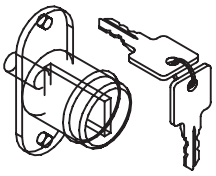

k3 Lock- 1

Step 1

Preparation for credenza top panel A, credenza bottom panel G, left side panel X, right side panel Z, door panel V1 and V2.

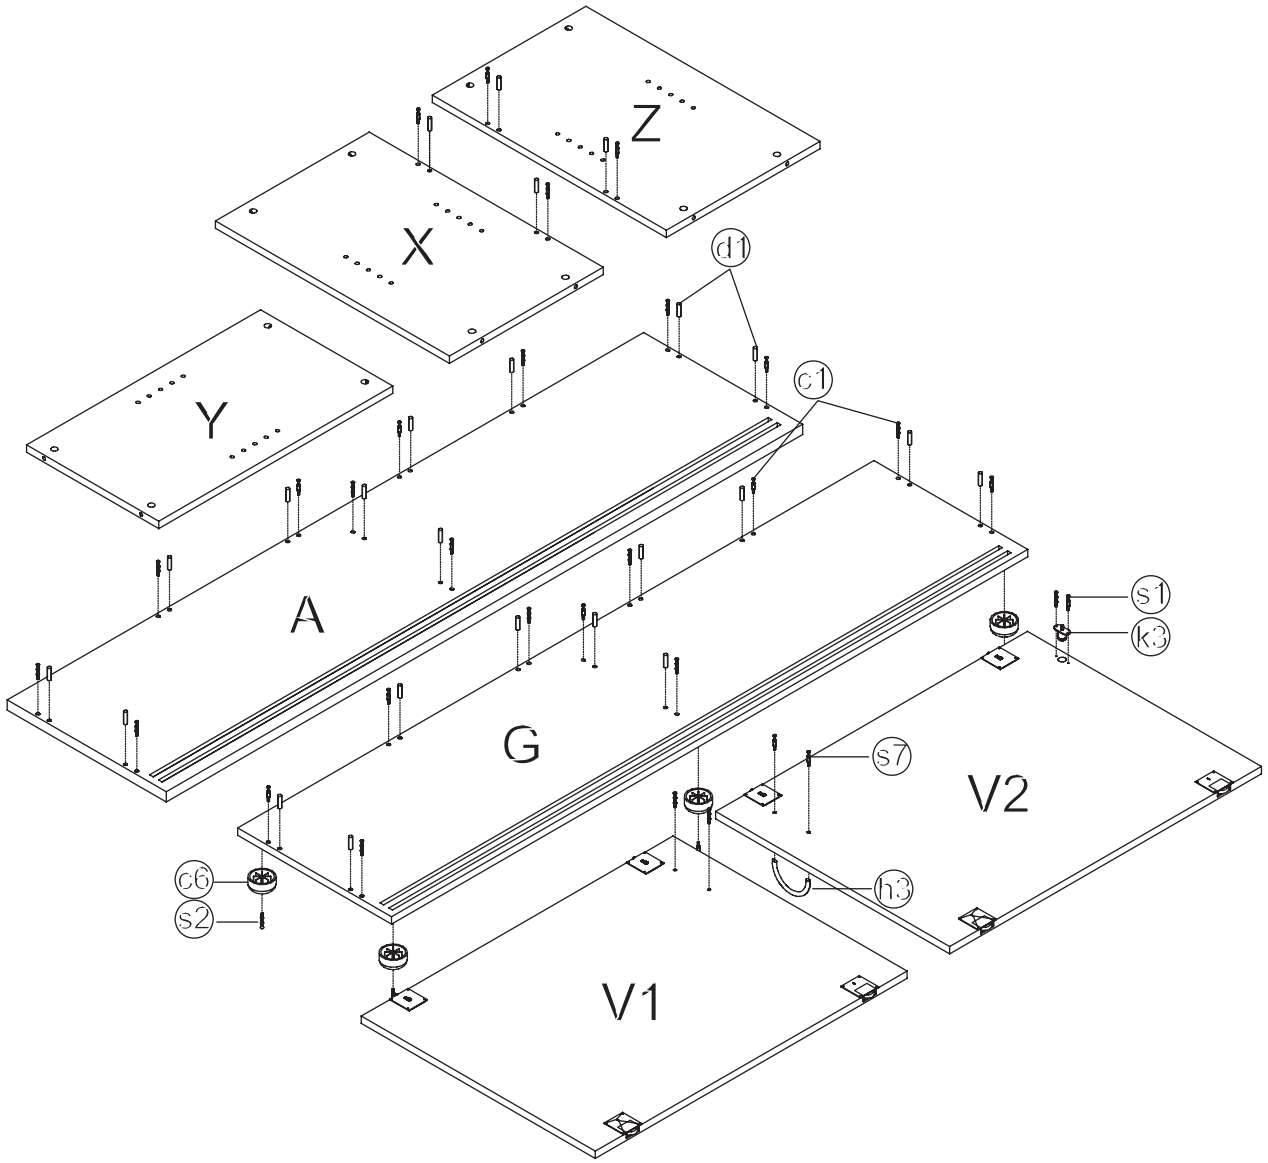

1. Insert cam bolt (c1) and dowel pins (d1) into panel A, G, X and Z as illustrated above.
2. Assemble handle (h3) with fix bolts (s7) on door panel V1 and V2 as illustrated above.
3. Assemble the lock (k3) with screws (s1) on door panels V2 as illustrated above.
4. Assemble Cushions (c6) with screws (s2) on bottom panel G as illustrated above.

Step 2

Insert cam bolt (c1) on panels X, Z into cams on panel D and fully tighten. Fix cams on panel Y, D, X and Z into cam bolts (c1) on panel A and fully tighten.

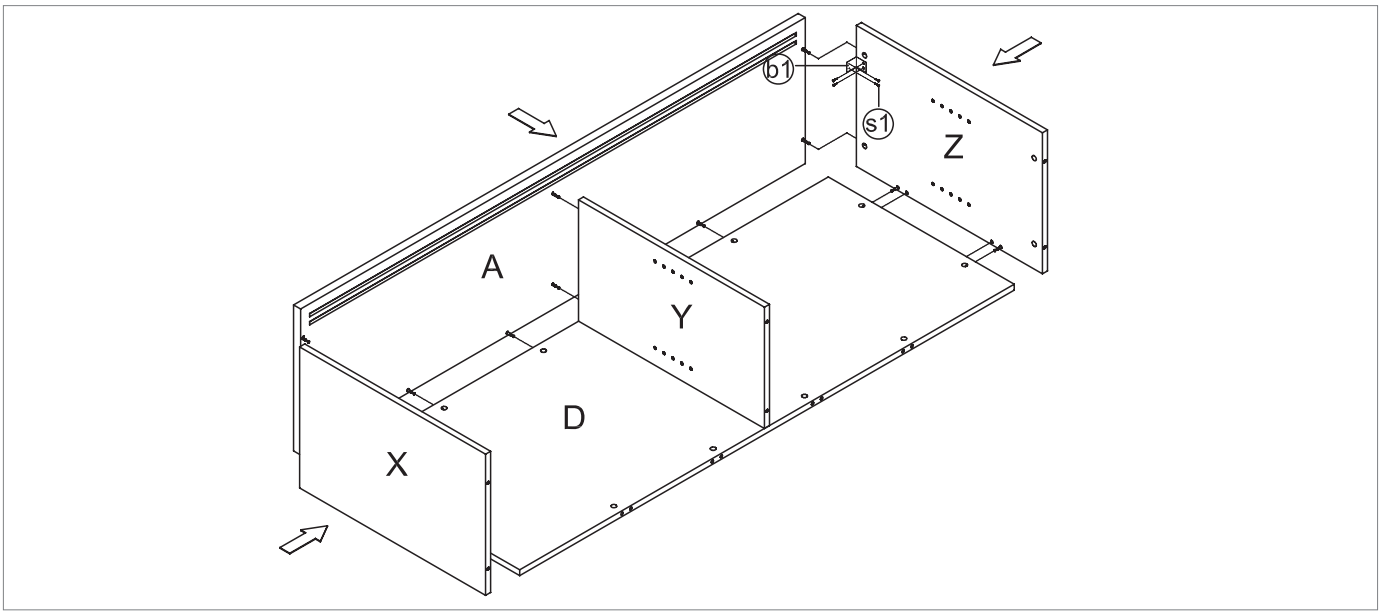

Step 3

Insert cam bolt (c1) on panel G into cams on panel X, Z, Y and D and fully tighten. Then place the cam covers (c2) on the top of cams.

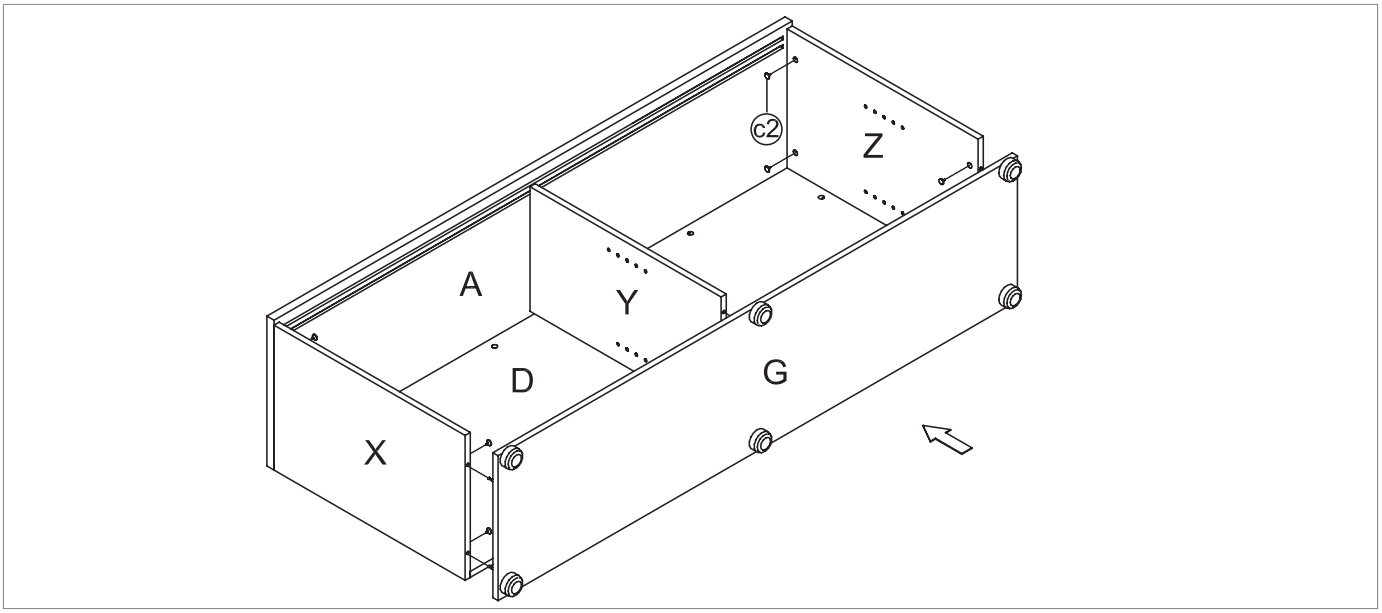

Step 4

Insert threaded dowel pins (p1) into panel X, Z and Y, put the two panels E on the top of threaded dowel pins (p1) as illustrated below.

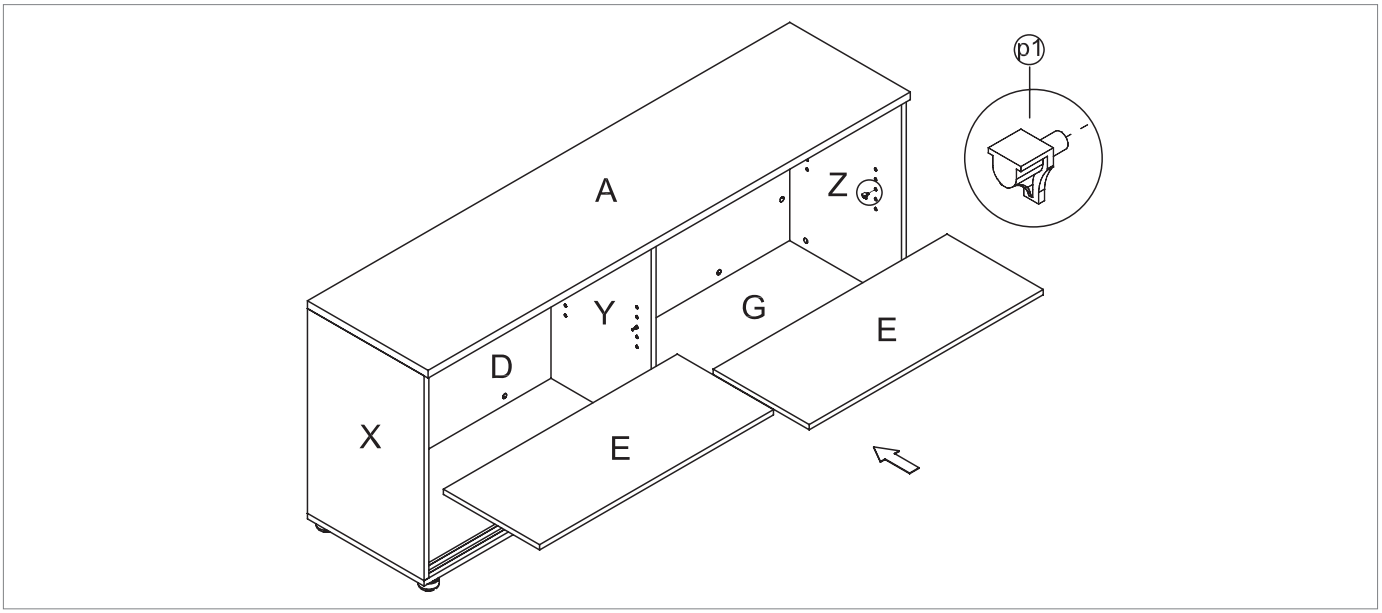

Step 5

Assembly credenza door V1 and V2.

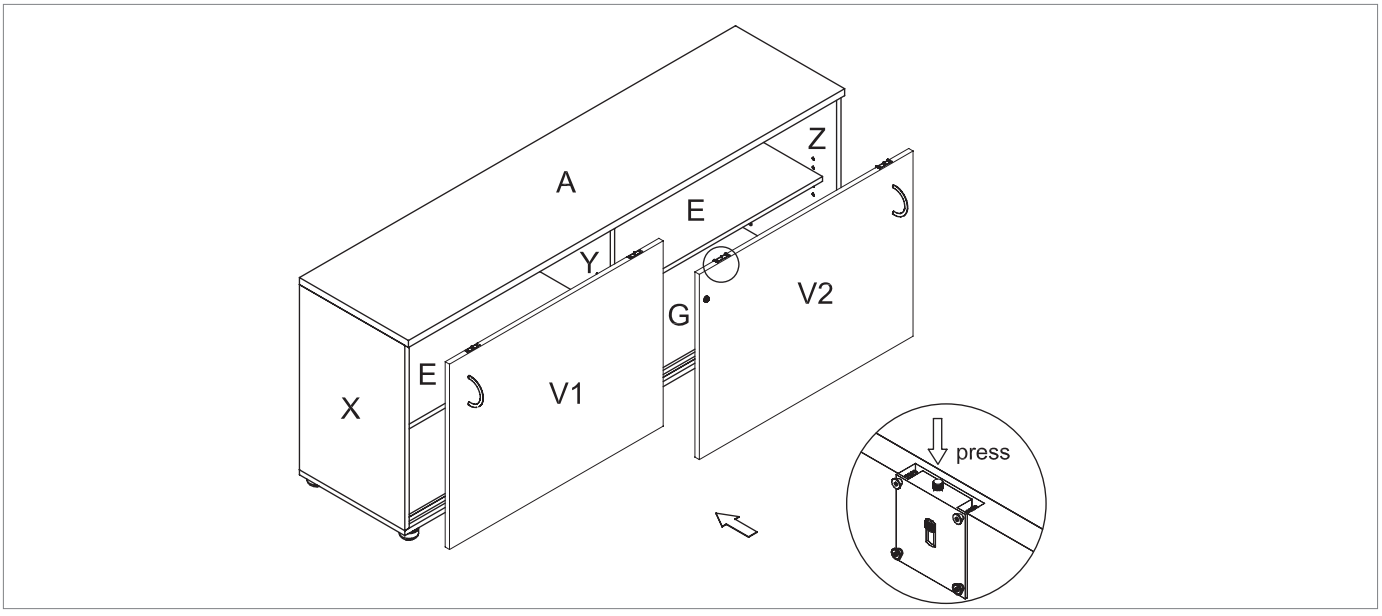
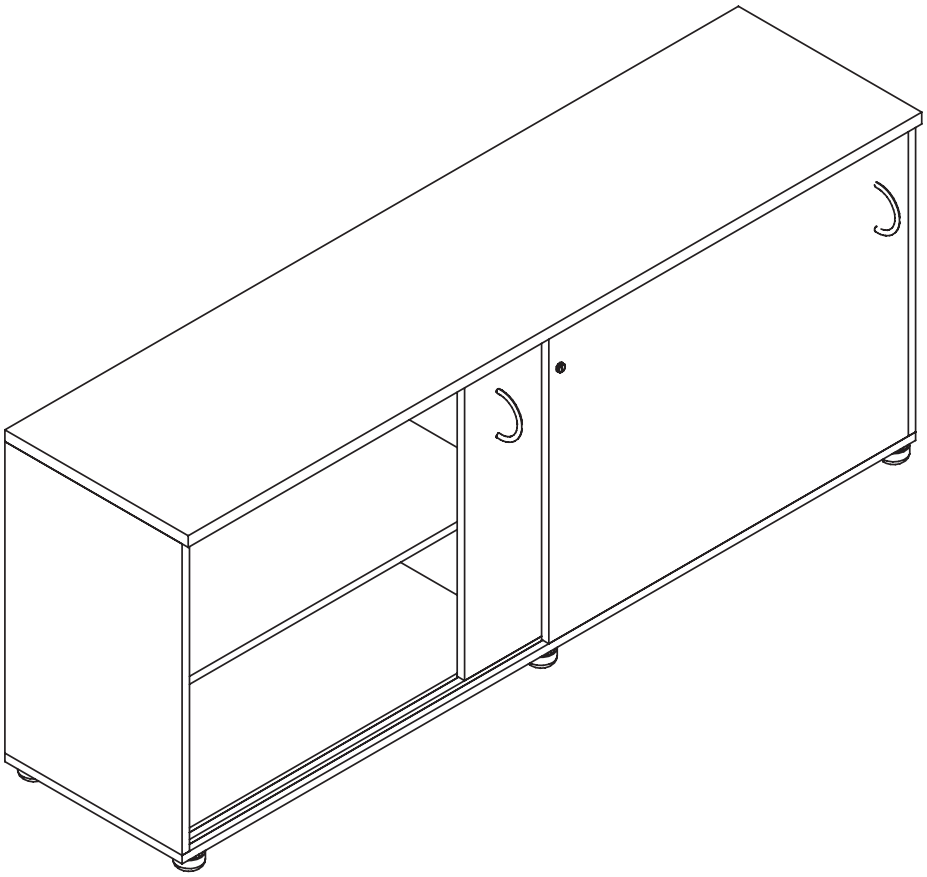
Complete