LINEA
LIGHTING

LL-P274

ASSEMBLY INSTRUCTIONS

ASSEMBLY STEPS:

1. REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.
2. SCREW TUBE [L] TO SOCKET PART [M], THEN SCREW [K] TO [L], SCREW [J] TO [K],[I] TO [J],[H] TO [I]. REMOVE PARTS [H], [I],[J],[K],[L] TO ADJUST THE HEIGHT OF THE FIXTURE AS NEEDED.
3. SCREW THE CANOPY [F] TO THE HARD STEMS [H] TIGHTLY.
4. REMOVE WALL BRACKET FROM THE LAMP FIXTURE AND ATTACH THE MOUNTING CROSS BAR [C] INTO THE CEILING BRACKET AND FASTEN WITH THE MOUNTING SCREWS [E] (2PCS).
5. CONNECT THE BLACK CORD OF LAMP WITH THE ANODE WIRE ON WALL BRACKET BY CONNECTOR[A], CONNECT WHITE CORD OF LAMP WITH CATHODE WIRE ON WALL BRACKET BY CONNECTOR [A]. CONNECT THE GROUND WIRE TO THE WALL GROUND WIRE BY CONNECTOR (B).
6. TIGHTEN THE CANOPY [F] ON THE MOUNTING CROSS BAR [C] TIGHTEN IT BY NUT [G].
7. SCREW THE BULB INTO THE SOCKET (BULB NOT INCLUDED).
8. PUT THE GLASS SHADE [O] ONTO [M] AND TIGHTEN BY SCREW RODS [N].

CAUTION: PULL ANY EXCESS WIRE THROUGH BOTTOM OF THE LAMP.
TO CLEAN, USE A SOFT CLOTH ONLY.
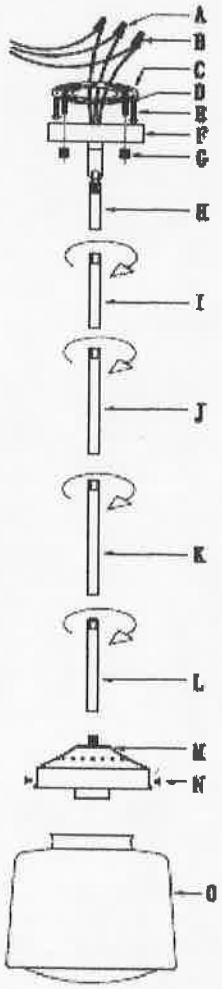
NOTE: TURN THE POWER OFF (UNPLUG FROM THE WALL OUTLET) BEFORE REPLACING THE BULB. MAKE SURE THE BULB HAS SUFFICIENT TIME TO COOL DOWN. DO NOT SUBJECT THE LAMP TO ANY SHOCK WHILE LIT AS SHATTERING OF LAMP MAY RESULT.