JUST BATHROOMS LLC

FREESTANDING BATH

CODE:HG1023

INSTALLATION GUIDE

JUST BATHROOMS LLC

Just Bathrooms LLC
13893 Willard RD Unit H
Chantilly,VA 20151
www.usajustbathrooms.com
www.heatgene.com

Exclusively available @

HEATGENE

Just Bathrooms LLC
13893 Willard RD Unit H
Chantilly,VA 20151

FREESTANDING BATH

AFTERCARE AND INSTALLATION

IMPORTANT

Before commencing installation, read these instructions carefully. Installation must comply with any requirements imposed by local authorities. Ensure that there is no damage to the bath. Remove the protective film before installation and check the surface for damages. Important dimensions are included on the adjacent page.

INSTALLATION PROCEDURES

1. Adjust the feet on the base of the bath so that they sit flush with the outer skirting of the bath. Adjust the locking nut so that the base of the foot is locked in place. Test with a spirit level to check the bath tub is level.

2. Mark the floor with the outline of the bath at the final installation position, with a pencil. Ensure there is enough room for the waste and pipework to be fitted.

3. Carefully tilt the bath on its side to allow access to both sides of the waste hole. With the waste washer (A) and waste drain (B) inside the bath tub, tighten the rubber washer (C) and fixing nut (D) on the underside of the bath. Ensure that the cut out inlets in the waste drain (B) line up with the outlets between the two layers of the bath so that the water drains through the waste from the overflow hole.

4. Screw the pop-up mechanism (E) into the waste drain before screwing the waste cover (F) on top. Connect the bath trap (G) (supplied separately) to the fitted bath waste and connect that to the bathroom's waste pipes.

5. Reposition the bath ensuring that all the pipework is covered by the base of the bath. Ensure that flexible connectors are not kinked upwards during installation as this will result in drainage issues.

6. Water test the bath to check that it is draining correctly and to check for any leaks.

7. Apply silicone around the base of the bath and allow 24 hours for it to cure fully.

AFTERCARE

To preserve the surface of the bath, after use clean with a soft cloth with warm soapy water to wash away any body oils or soap. It is recommended that the bath is only cleaned with warm soapy water and that powders, pastes, cream cleaners, thinners and window cleaning sprays are not used on the bath's surface.

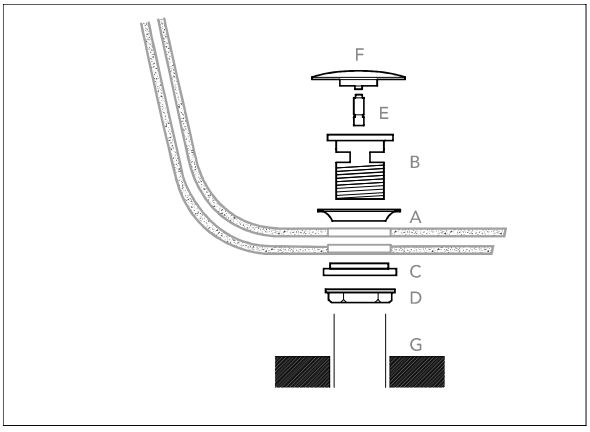

All dimensions in inches

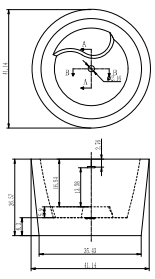

HG1023