FRESCA©

Stella
COLLECTION

LUCERA
FVN6136-VSL-R

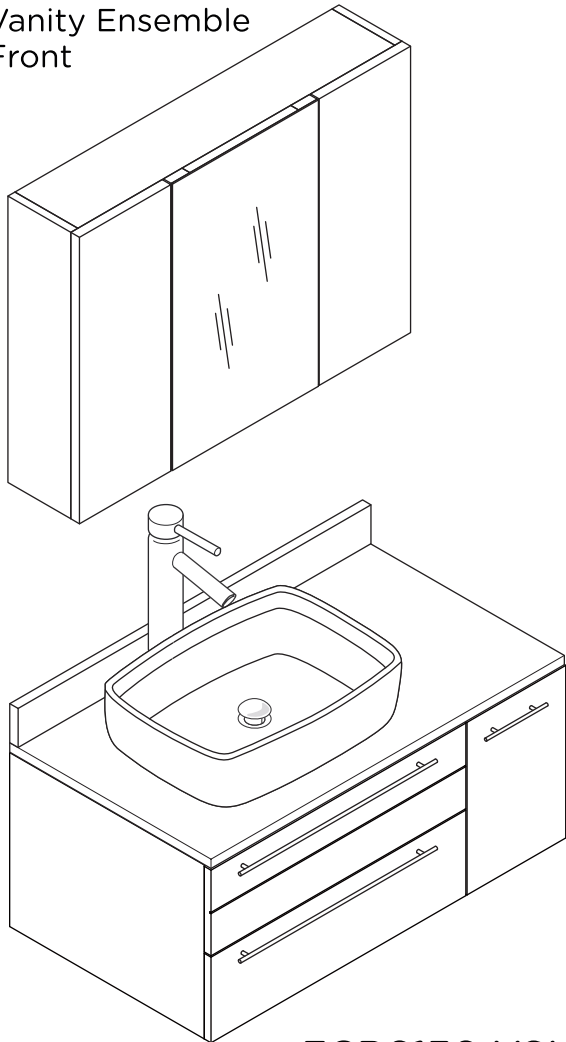## INSTALLATION GUIDE
CONTENTS:

FVN6136-VSL-R
Vanity Ensemble Front

FMC6183
Medicine Cabinet Front

6"
31.5"
23.6"
7.8"
15.9"
7.8"
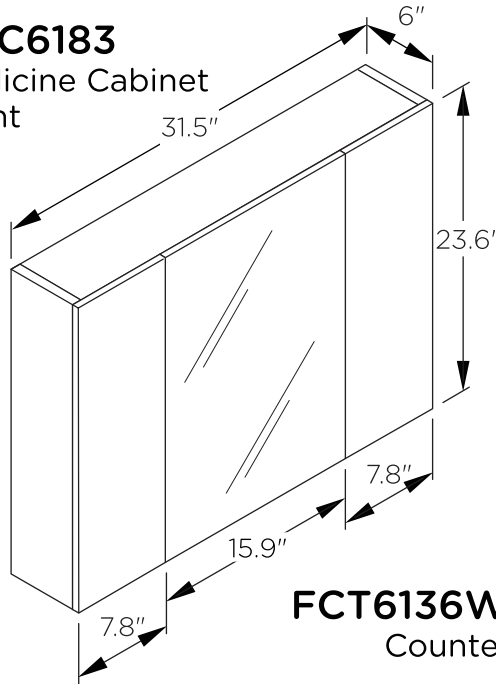
FCT6136WH-VSL-R
Counter Top Front

8.2"
5"
2.4"
14.9"
20.4"
36"
15.7"
5.4"

FVS6119WH
Sink Front

FCB6136-VSL-R
Cabinet Front

35.2"
20"
15"

FCB6136-VSL-R
Cabinet Back

3.1"
2.7"
6.5"
2.7"
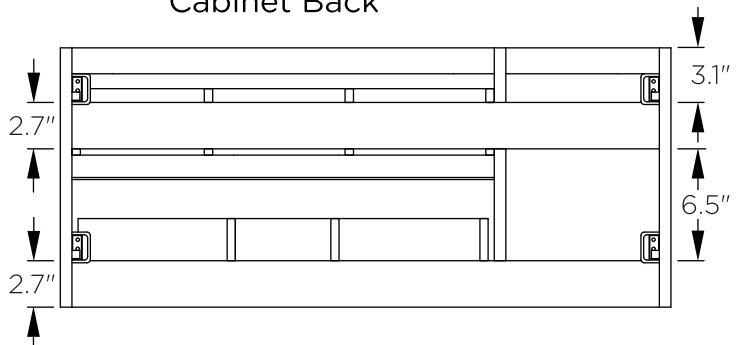
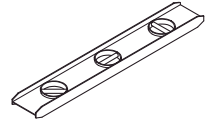*>All dimensions & specifications are approximate and subject to change without notice.*

FVN6136-VSL-R
LUCERA
INSTALLATION GUIDE

FRESCA©
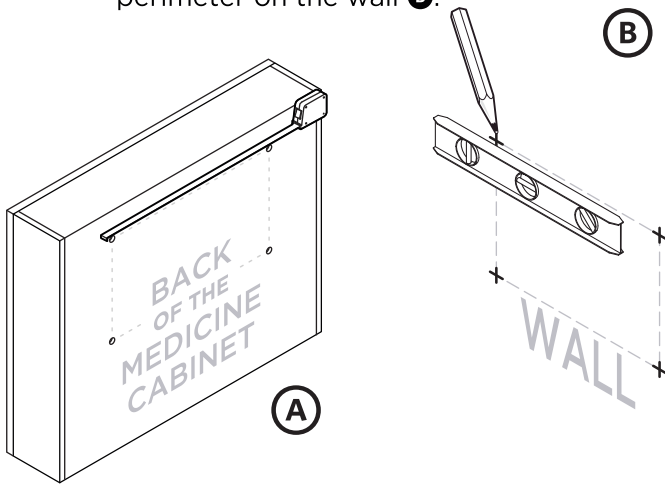

TOOLS FOR ASSEMBLY
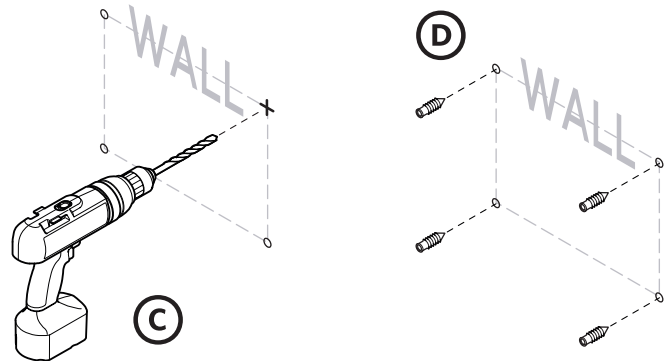
#2

3/8" & 1/4"
Drill Bit

SILICONE

MEDICINE CABINET INSTALLATION

1
Measure distance between the mounting holes on the back of medicine cabinet **A** and mark the perimeter on the wall **B**.

B

BACK OF THE MEDICINE CABINET

WALL

A

2
Once marked, drill the holes in the wall **C**.
*Insert the anchors in the holes **D**.

WALL

D

WALL

C

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided <u>do not</u> attach to all wall construction types. Anchors are not required if brackets are installed in stud.

3
Connect medicine cabinet to the wall using a drill.
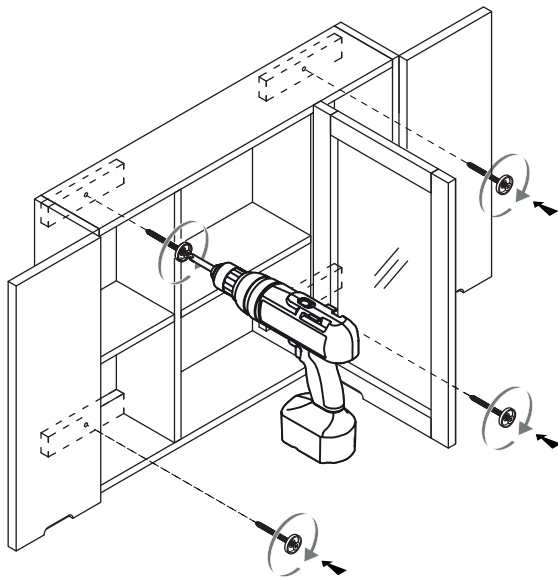
4
Cover the screws with the screw caps.

CABINET INSTALLATION

1 Place cabinet **(D)** in designated location and mark the bracket position on the wall.

WALL

D

28" to 32"

2 Attach wall brackets **(E)** to the wall with the screws **(F)**.
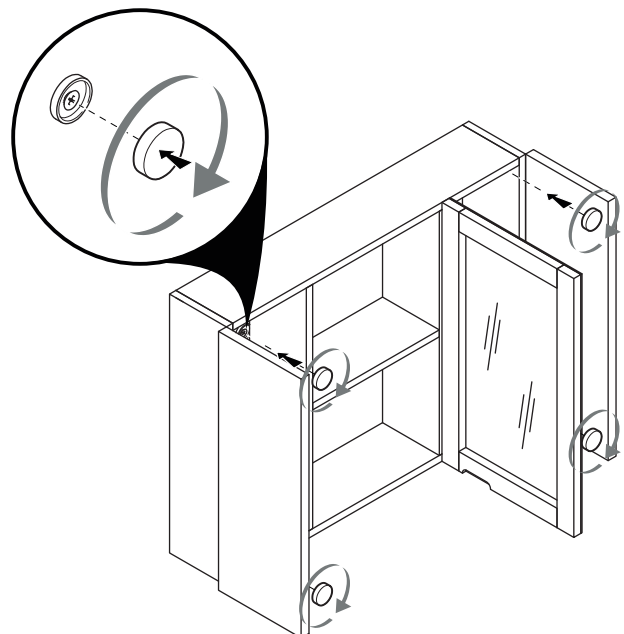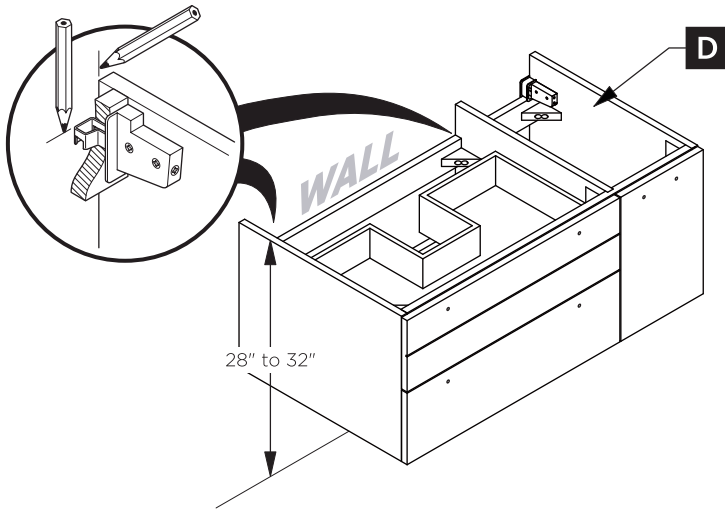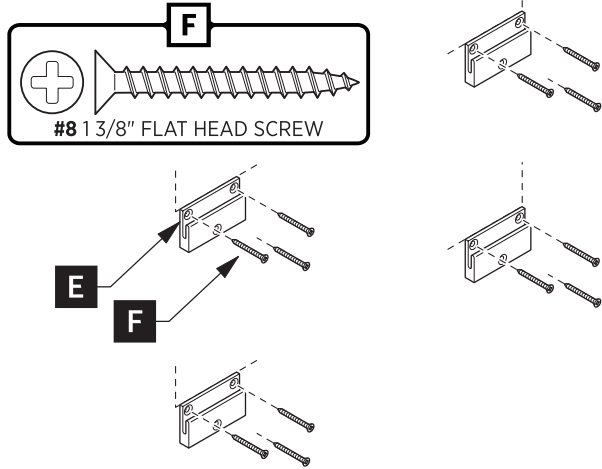

F

#8 1 3/8" FLAT HEAD SCREW

E

F

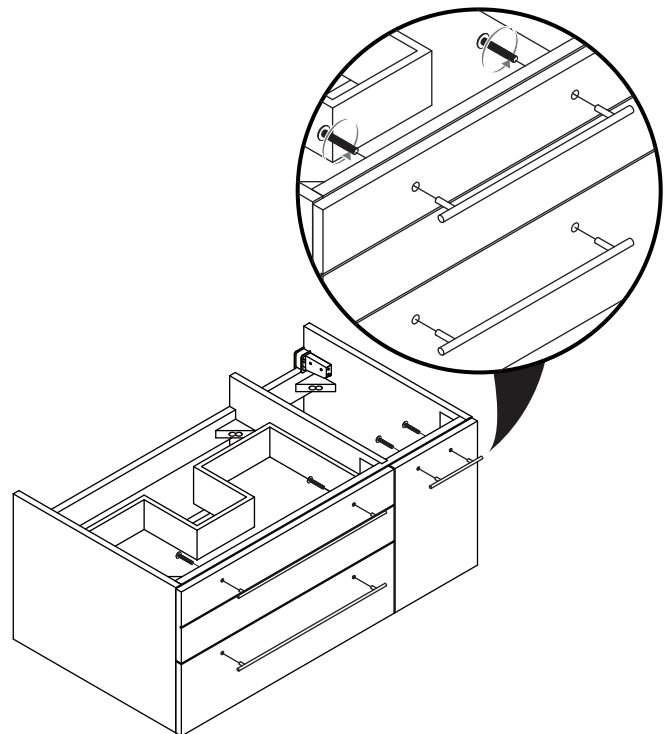*IMPORTANT:* Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided <u>do not</u> attach to all wall construction types. Anchors are not required if brackets are installed in stud.

3 Apply a bid of the silicone and hang a cabinet **(D)** on the brackets **(E)**.

2

3

E

D
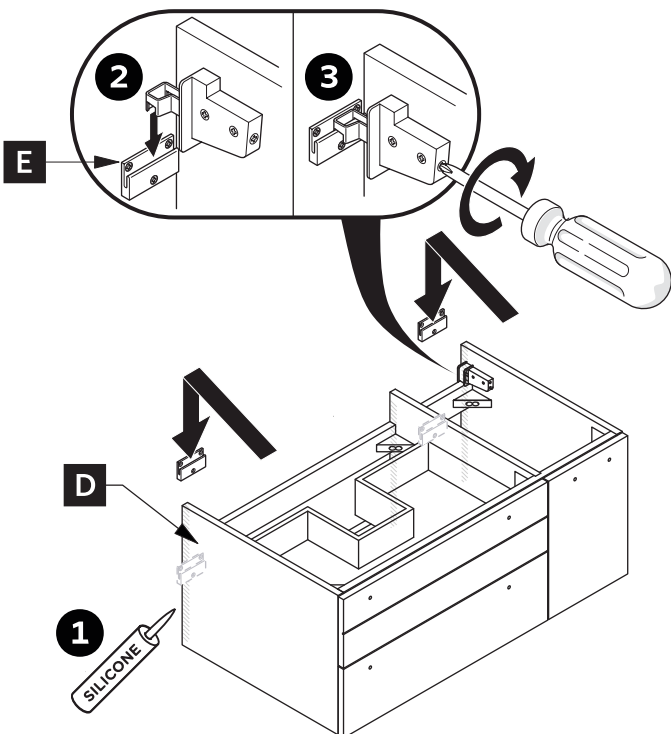
1 SILICONE
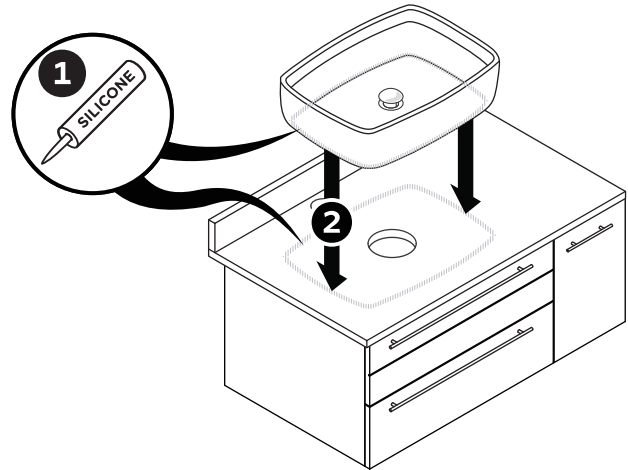
4 Attach the handles to cabinet.

CABINET INSTALLATION

5 Apply a bead of silicone on top of the cabinet. Place counter top on the cabinet.
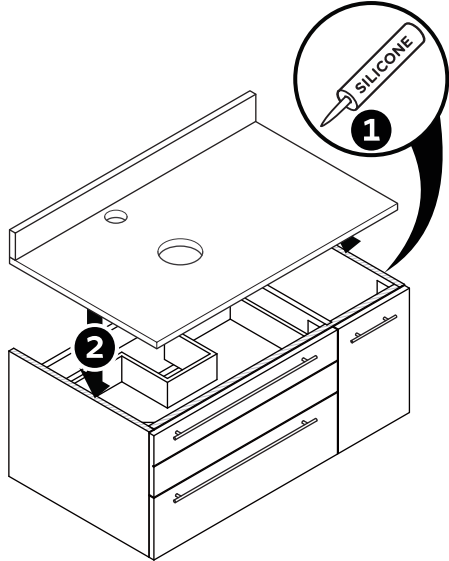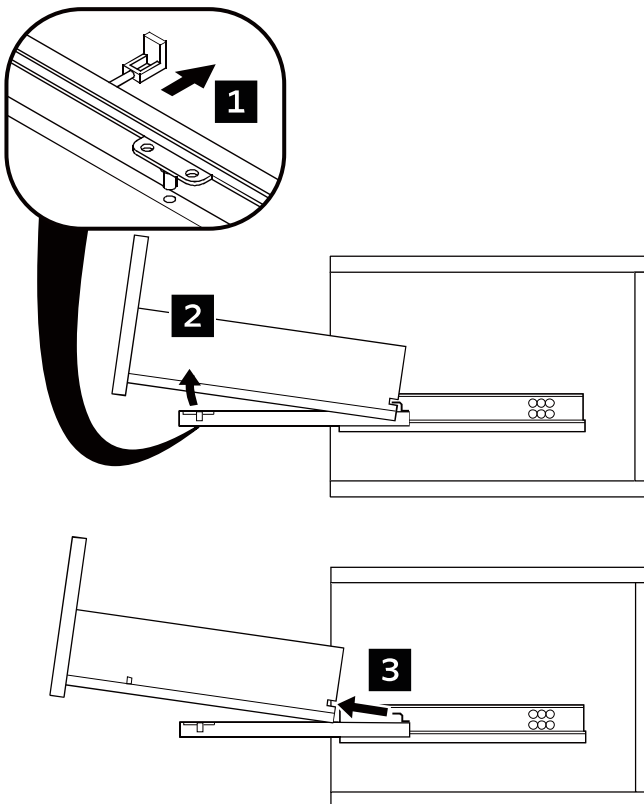

6 Apply a bead of silicone on top of the counter top and bottom of the sink. Connect sink to the counter top.
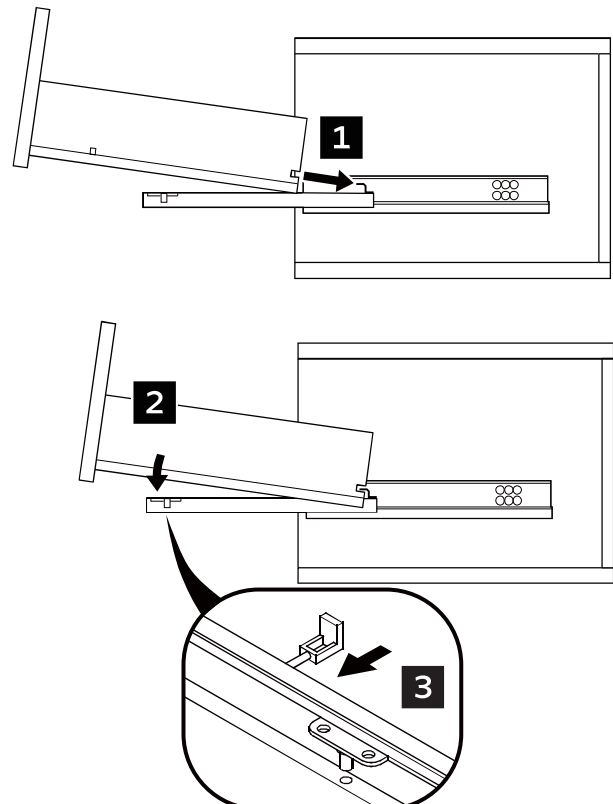

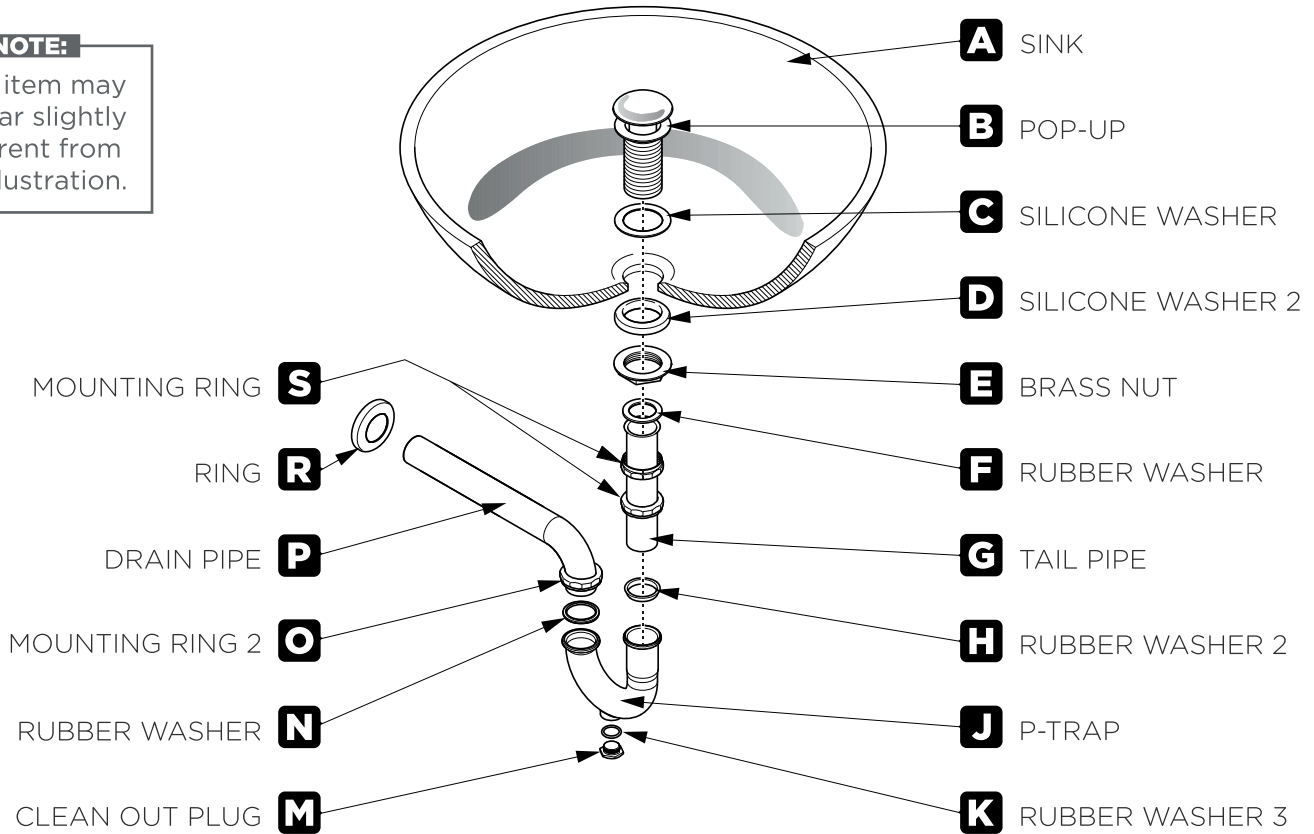## DRAWER REMOVAL & INSTALLATION

DRAWER REMOVAL

DRAWER INSTALLATION

P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

NOTE:
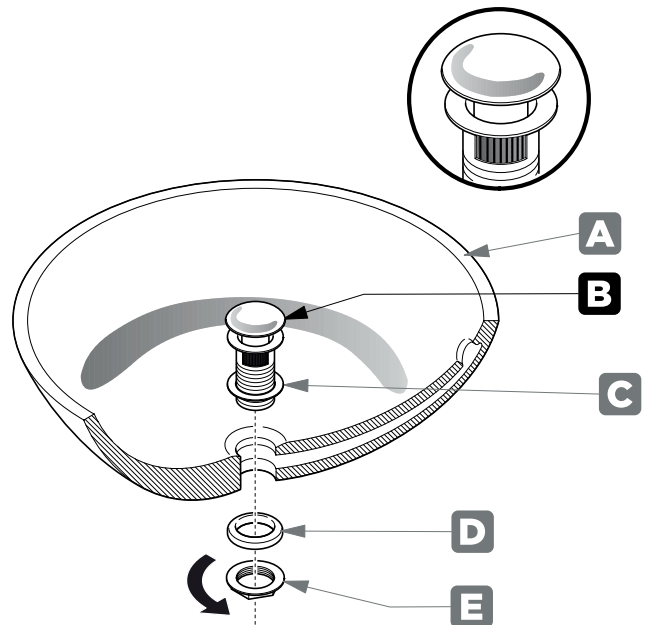Your item may appear slightly different from the illustration.

A — SINK
B — POP-UP
C — SILICONE WASHER
D — SILICONE WASHER 2
E — BRASS NUT
F — RUBBER WASHER
G — TAIL PIPE
H — RUBBER WASHER 2
J — P-TRAP
K — RUBBER WASHER 3

S — MOUNTING RING
R — RING
P — DRAIN PIPE
O — MOUNTING RING 2
N — RUBBER WASHER
M — CLEAN OUT PLUG

POP-UP INSTALLATION INSTRUCTIONS

FOR SINKS WITHOUT OVERFLOW

A
B
C
D
E
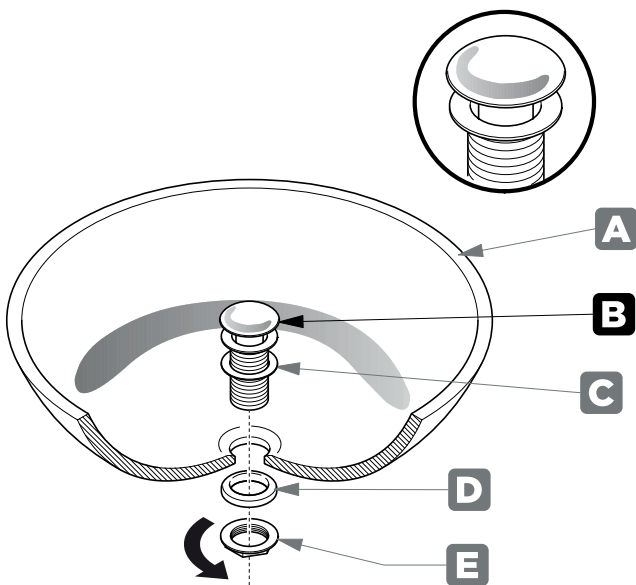
OR

FOR SINKS WITH OVERFLOW

A
B
C
D
E

P-TRAP INSTALLATION

1 Install a tale pipe **(G)**.

A
D
F
M
G

2 Connect a P-trap **(J)**.

A
G
H
O
R
P
N
J