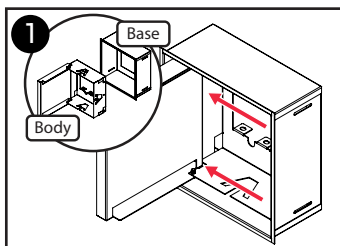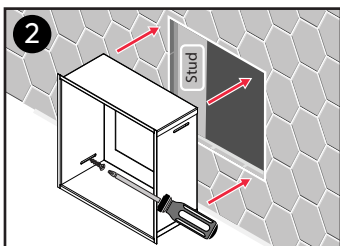# Fittes

Materials Needed

- Pre-cut piece of surface material for Tray insert.
    - *Size will vary depending on model.
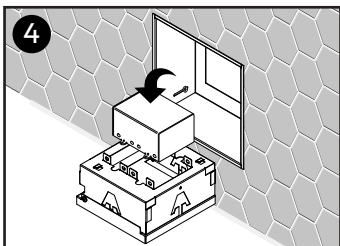- Bonding material (will vary depending on surface material)
- 4x self tapping screws

1

Base
Body

Disengage **Body** from **Base** by pushing firmly towards the hinged walls' innermost corner with the **Door** ajar.
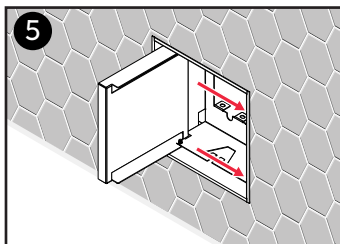
2

Stud

Dry fit **Base** into wall. Fasten **Base** to stud using provided pilot holes as necessary.
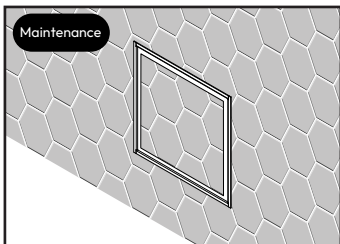
3
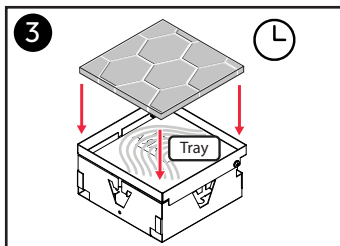
Tray

Apply silicone in **Tray**. Set pre-cut **Tray** insert into place. Allow time to cure.

4

Using the screws in the utility box, fasten the utility box to the rear of **Body** component.

5

Re-engage **Body** by aligning latches and pushing firmly towards the inner corners opposite of the hinged **Door**.

Maintenance

To hardwire electrical, have an electrician repeat steps #1 & #5 to access utility box.

NOTE To easily open the **Door**, simply press the side that has hinges. The **Door** will pop open!
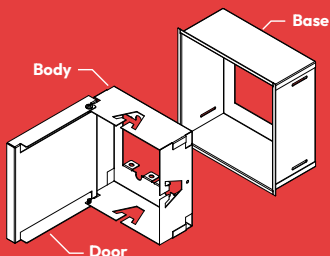

Additional Support

support@fittes.com / www.fittes.com

Patent Information

www.fittes.com/pages/patents
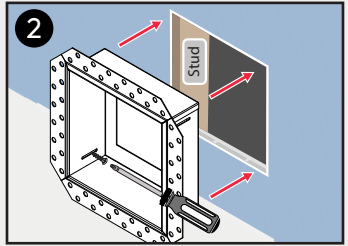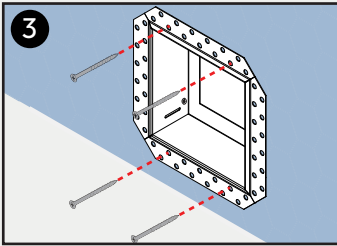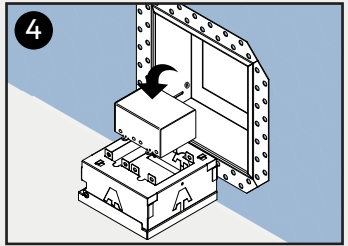
Made in Canada

Base
Body
Door

① Disengage **Body** from **Base** by pushing firmly towards the hinged walls' innermost corner with the **Door** ajar.
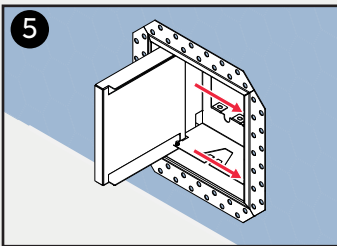
② Dry fit **Base** into wall. Fasten **Base** to stud using provided pilot holes as necessary.
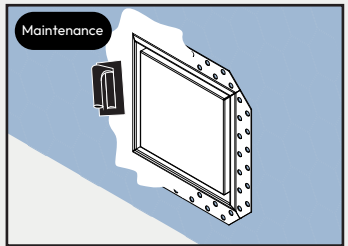
③ Ensure flange is flat to the wall. Use drywall screws to fasten.
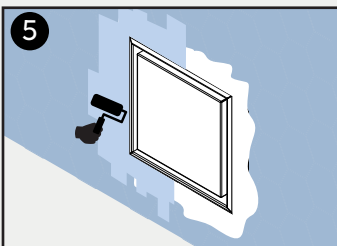
④ Using the screws in the utility box, fasten the utility box to the rear of **Body** component.
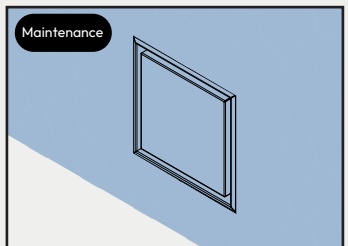
⑤ Re-engage **Body** by aligning latches and pushing firmly towards the inner corners opposite of the hinged **Door**.

Maintenance Use mud to cover flange surface. Wait to dry, then sand. Repeat as needed.

⑤ Paint to match wall colour. If using wallpaper, do not cover **Body**.

Maintenance To hardwire electrical, have an electrician repeat steps #1 & #5 to access utility box.

NOTE To easily open the **Door**, simply press the side that has hinges. The **Door** will pop open!

Additional Support

support@fittes.com / www.fittes.com

Patent Information

www.fittes.com/pages/patents

Made in Canada

Base
Body
Door