BMW F800GT from 2016 (Throttle-by-Wire)
Parts list for MCS 7040 kit

Item	Qty	Part Number	Description
1	1	MCS 7010 TBW	Computer
2	2 lengths		Self-Adhesive Velcro 8cm long
3	1	MCS GT1014-160	Slim Control Switch
	8cm		Foam mounting tape
	2		300mm cable ties
OR			
		MCS 7044	Switch assembly
4	1	MCS 820-160	Control Switch
5	1	MCS 4944A	Switch bracket (MCS 830T)
	4		4 gauge x 1/2” stainless steel pan head self-tap screw
	1		100mm cable tie
6	1		M6 x 35 socket head cap screw
7	3		6mm flat washer
8	1	MCS 7044B	6mm spacer
9	1	MCS 7043	Cruise Control Wiring Harness – no dongle patch
a			Computer plug (26 pin)
b			Fuse holder (3 amp fuse)
c			CAN-BUS connections with no dongle patch (8 pin)
d			Control switch plug (6 pin)
e			TPS connections (brown, green and black wires)
f			Power & brake sensor connections (6 pin)
OR			
10	1	MCS 7043-CBDP	Cruise Control Wiring Harness with dongle patch
a			Computer plug (26 pin)
b			Fuse holder (3 amp fuse)
c			CAN-BUS connections with dongle patch (8 pin)
d			Control switch plug (6 pin)
e			TPS connections (brown, green and black wires)
f			Power & brake sensor connections (6 pin)
	16cm	HST3	3mm heat shrink tube (TPS connection)
	8cm	HST4	4mm heat shrink tube (TPS connection)
	10		100mm cable ties
	10		150mm cable ties
	6		200mm cable ties
	6		300mm cable ties
			Information, Set up and Operation Manual
			Operation and User Manual
			Installation Manual
			Trouble shooting guide

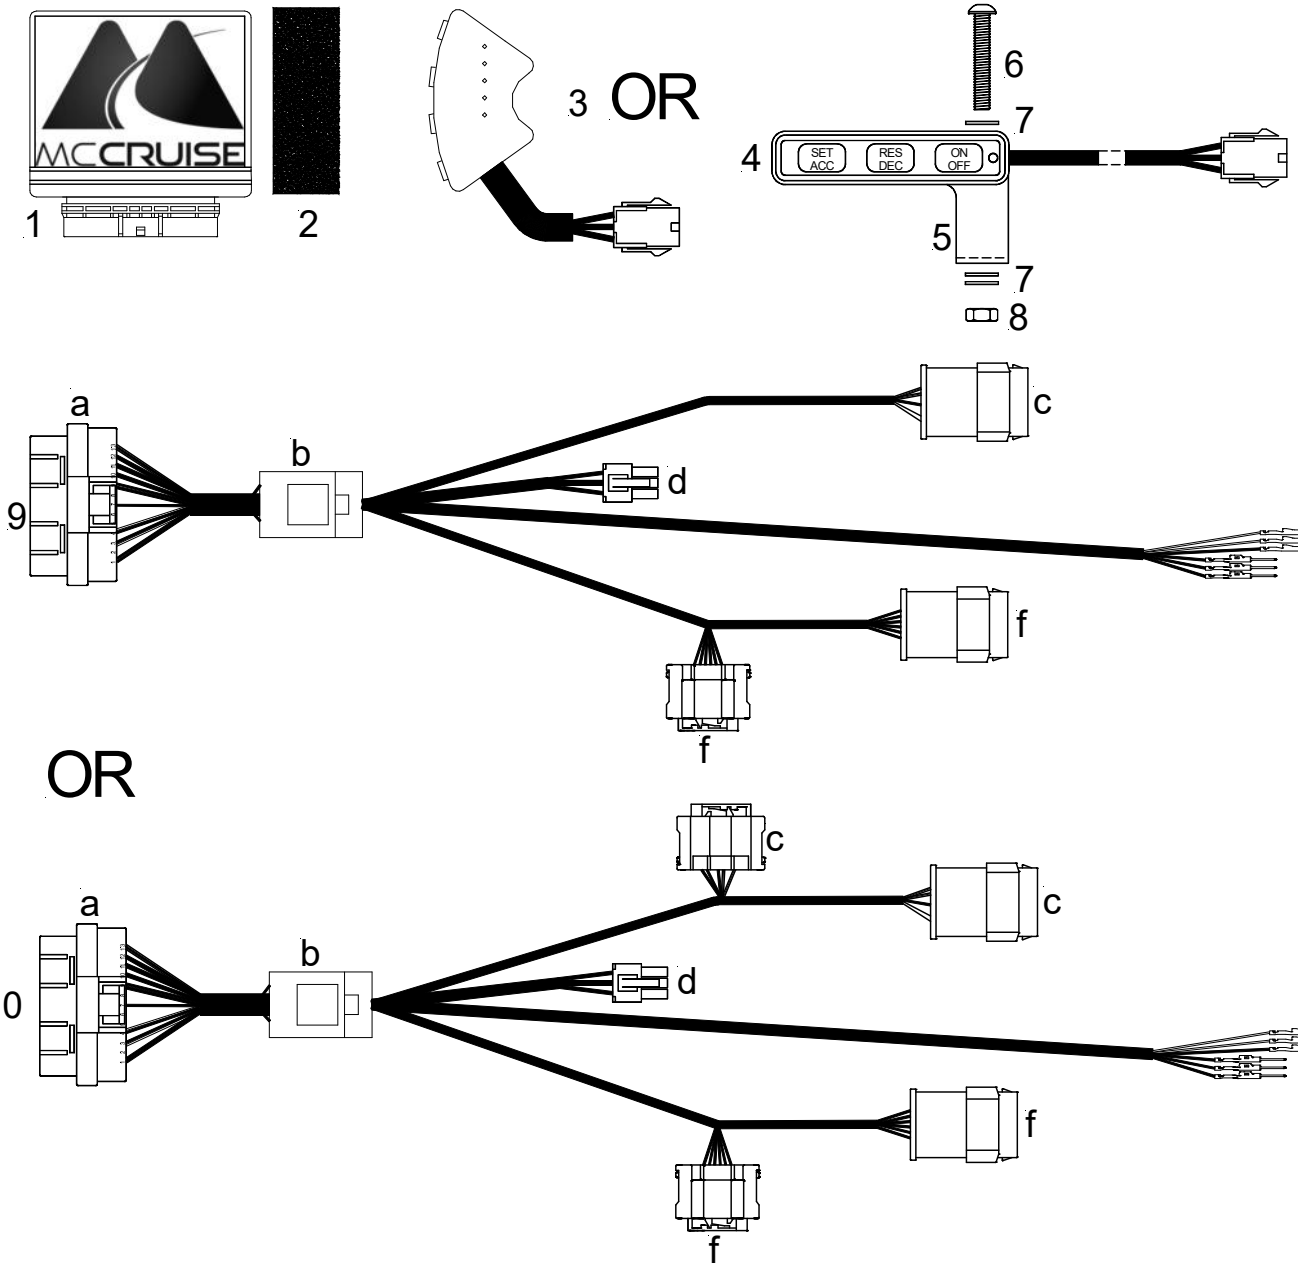
MCCRUISE
1
2
3 OR
4
SET ACC
RES DEC
ON OFF
5
6
7
7
8
9
a
b
c
d
e
f
f
OR
10
a
b
c
c
d
e
f
f