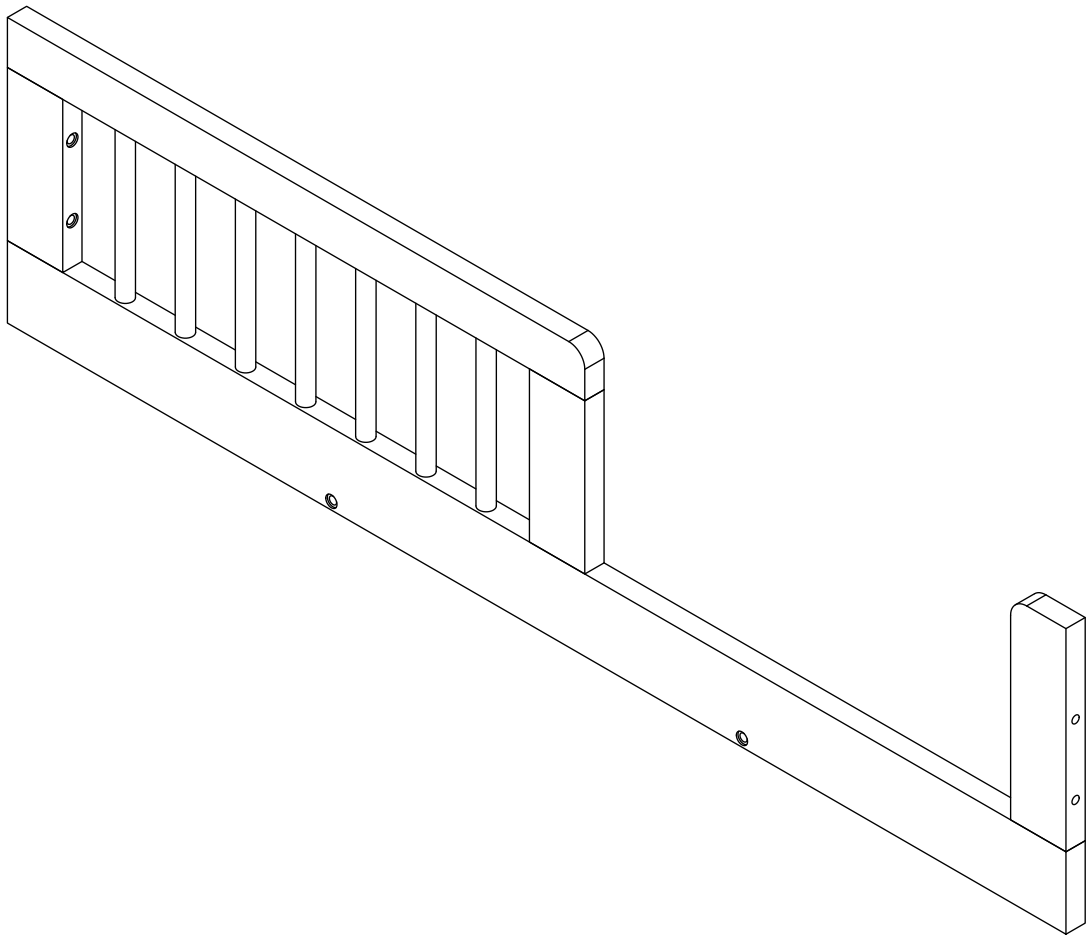# babyrest

KAYA BEDRAIL

ASSEMBLY INSTRUCTION

- The manufacturer's assembly instructions must be followed in detail to ensure the safety features to the cot are not compromised
- To clean surface use only water on a damp cloth. Do not use window cleaners or cleaning abrasives as it will scratch the surface and could damage the protective coating.
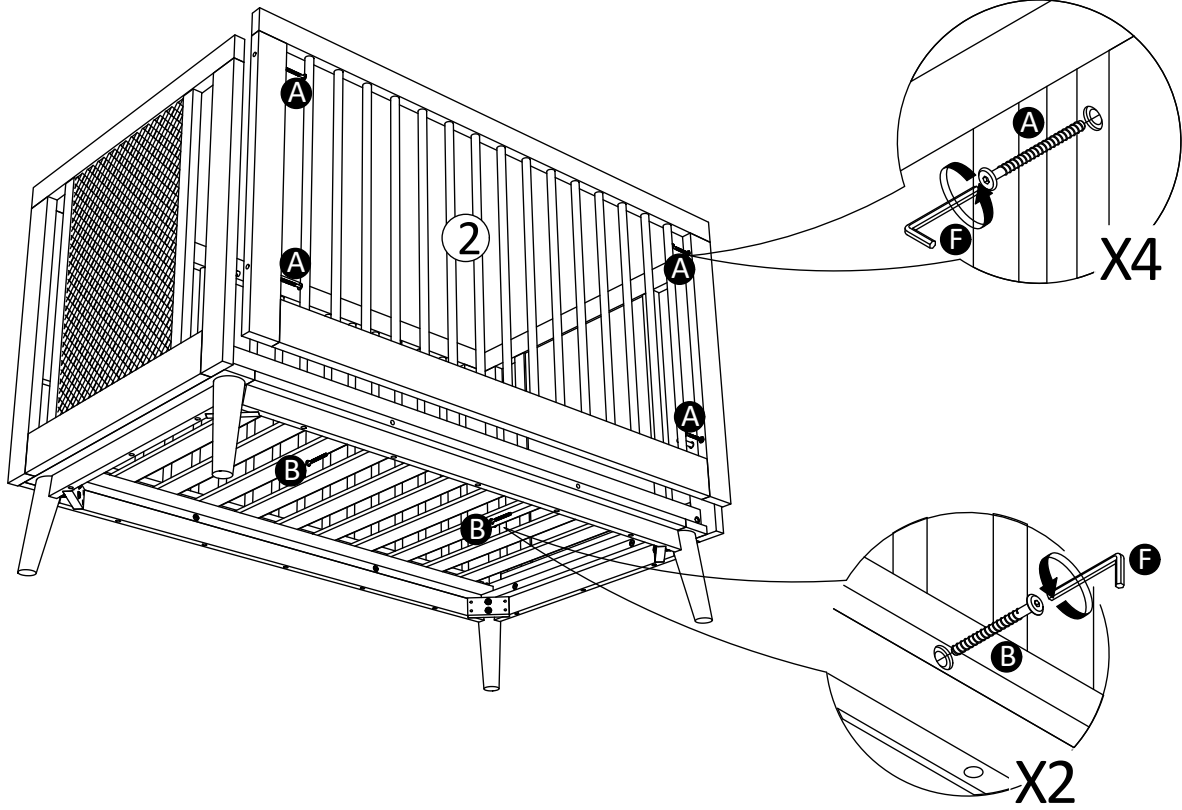
HARDWARE INVENTORY

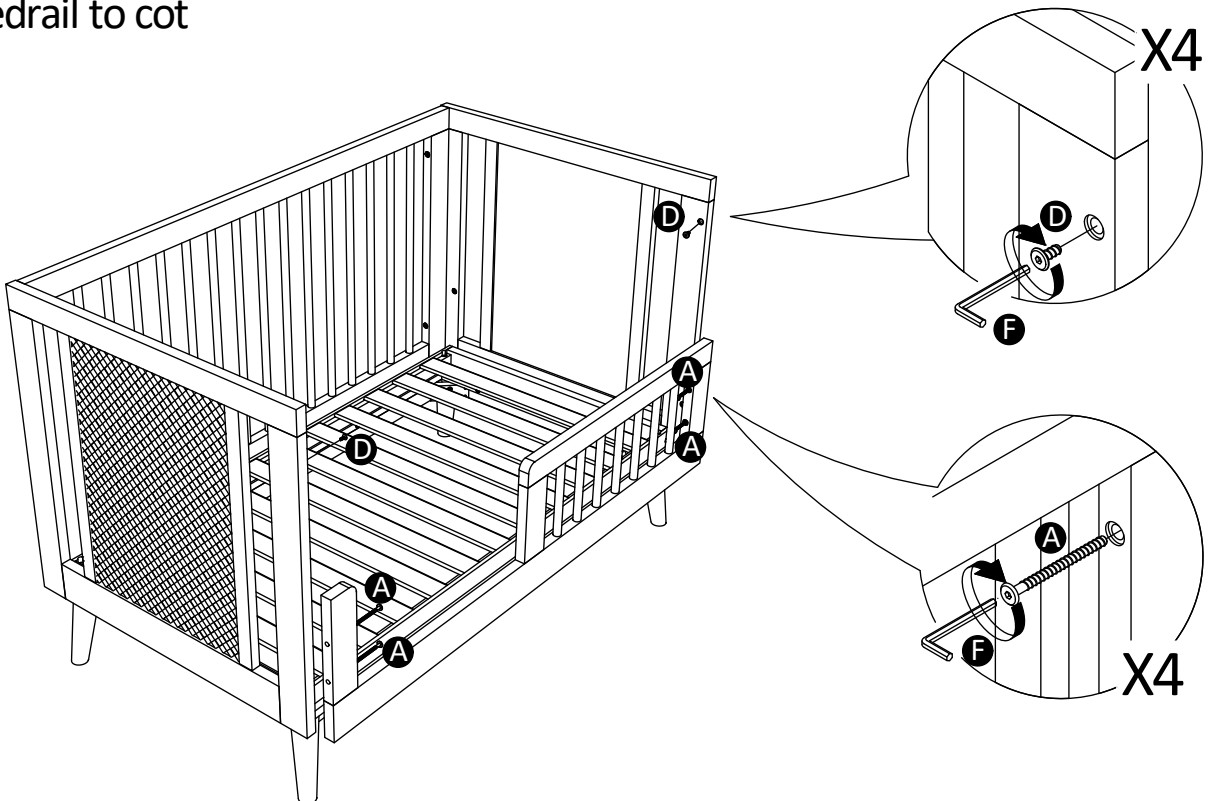**D** 15MM ALLEN HEAD BOLT
(2 PCS)

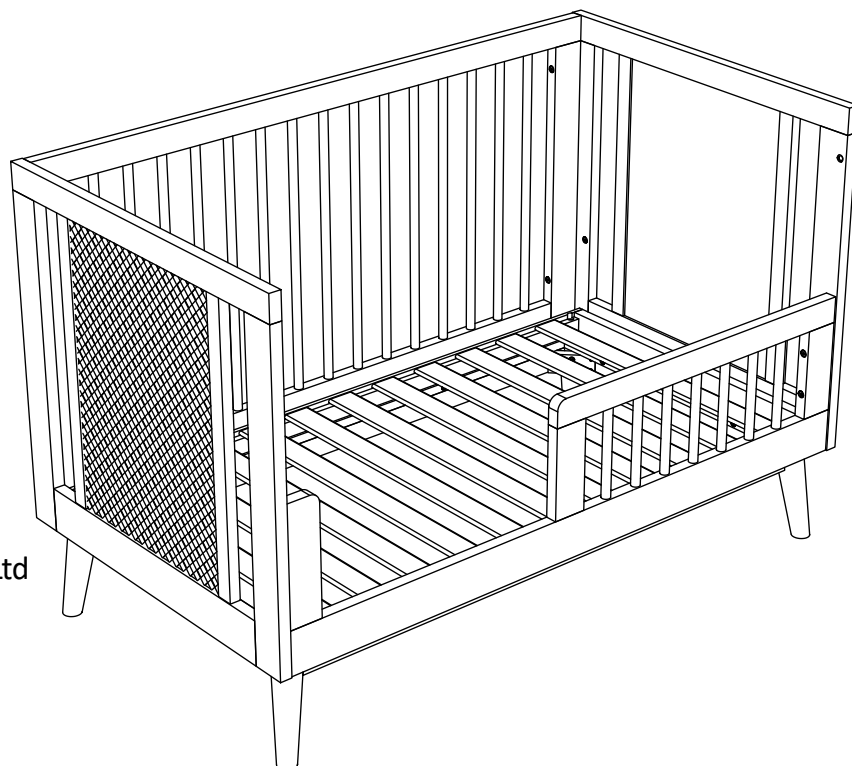**F** ALLEN WRENCH
(1 PC)

STEP 1
Remove cot side"2"

X4

X2

STEP 2
Attach bedrail to cot

X4

X4

STEP 3
Insert "B" screws underneath.

X2