EBL®

MP1000

USER MANUAL

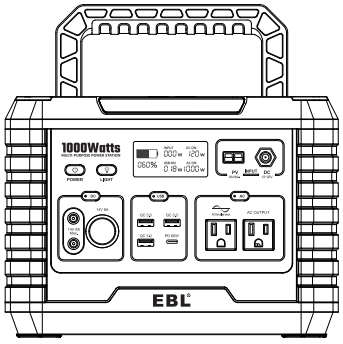

Thank you for purchasing MP1000 portable power station.

To make sure your personal safety, property security and user experience, please read this manual carefully before operating,and retain it for future reference.

⚠ CHARGE FIRST!

Before using your new Power Station MP1000, plug it into a suitable power outlet until it is fully charged.Then you can start your exciting journey with it.

■ Feature Details



1. LCD Screen Display
2. DC 5525 Output
3. Cigarttle Lighter Socket Output
4. USB-C Output
5. USB-A Output
6. 1000W Rated AC Output
7. Anti-Collision Strip
8. DC Input
9. PV Input
10. SOS Mode & LED Light
11. Folding Handle
12. Air Intake Vent with Cooling Fan
13. Wireless Charger

Note: No user-serviceable parts inside.
Recommended to fully charge the MP1000 before use.

■ MP1000 Accessory List

 MC4-7909 Connector Cable	 AC 100-240V Wall Plug Power Adapter	 12V Car Charger Cable	 User Manual

Recommend to use 100W/200W Solar panel (not included).

■ Button Feature



A: MP1000 Power ON/OFF Button
B: SOS Mode & LED Light Button
C: DC Output Power ON/OFF Button
D: USB Output Power ON/OFF Button
E: AC Output Power ON/OFF Button

■ Function Buttons

- **Button A: MP1000 POWER ON/OFF**
  Button A is the master switch. Press Button A to turn on the power or to shut down the output(s) when not in use.
- **Button B: SOS MODE& LED LIGHT**
  Function is available no matter the Button “POWER ON/OFF ” is activated or not as the following steps:
  Firstly, press Button B to turn on the LED light into the LED light mode. Secondly, double click it to turn on the SOS mode. Thirdly, press Button B back to LED light mode, then press it again, the light will be turn off.
- **Button C: DC OUTPUT POWER ON/OFF**
  Pls. make sure the button “POWER ON/OFF” is activated before pressing Button C to turn on; Press Button C to shut down the output(s) when not in use.
- **Button D: USB OUTPUT POWER ON/OFF**
  Pls. make sure the button “POWER ON/OFF” is activated before pressing Button D to turn on; Press Button D to shut down the output(s) when not in use. The USB-C cable of different devices need different endorsements of corresponding protocols, if the USB-C port doesn't work, try to use the AC adapter to charge.
- **Button E: AC OUTPUT POWER ON/OFF**
  Pls. make sure the button “POWER ON/OFF” is activated before pressing Button E to turn on; Press Button E to shut down the output (s) when not in use.
- **Wireless Charger**
  Pls. make sure the button"POWER ON/OFF" is activated before pressing Button D to turn on. Press Button D to shut down the output(s) when not in use.
- **Cooling Fan**

MP1000 utilizes an internal cooling fan to ensure the product is operating within the appropriate temperature range. MP1000, when it experiences a higher output load, will automatically turn on the fan during discharge or recharging, the fan may operate intermittently to keep internal temperature within operating range. The fan will likely start when the AC circuit is activated to ensure proper operation.

■ LCD Features



H: Battery Level Indicator
I: Input Status
J: DC Outputs Status
K: AC Outputs Status
L: USB Outputs Status

■ Details Displayed On LCD

Battery Level Indicator:

The battery level is provided by percentage of battery charge corresponding to the number of bars and percentage displayed. The segments in the battery level correspond to the current state of charge, 1-20% one segment, 21-40% two segments, 41-60% three segments, 61-80% four segments, and all five are lit when charge level is 81-100%.
Provides the user live telemetry data on time to completely charge, or deplete the battery based upon the energy entering or leaving the battery.
Highly recommend to fully charge MP1000 when first use. Higher battery level indicator show, more precise the data will indicate.
Please Be Aware that this value can adjust multiple times as the energy draw changes from the connected devices. This is evident during initial activation of ports with a connected device.
Recommended back to charge the MP1000 when battery indicate less than 20%. Note that when you first plug in a power source, whether it's a solar panel or a wall charger, the MP1000 may take a minute to detect and adjust its charge circuitry before it starts drawing power from the source.

INPUT Status: The MP1000 is capable of providing input energy in watts.

DC Output Status: The display will provide output watts of the DC port.

AC Output Status: The display will provide output watts of the AC port.

Power-Saving Mode:

When the device enters the input or output state, it will enter the screen-off mode after more than 20 seconds, which does not affect the normal operation of the device. When the output power of the device is less than 5W, the device will go into hibernation after more than 3 hours, and the input can be "awakened" when the input is charged or any button is pressed. When not in use, press the switch button to turn off the output.

■各部の名前



1. 液晶ディスプレー
2. DC 5525出力端子
3. シガーソケット
4. USB-C出力ポート
5. USB-A出力ポート
6. 1000W AC出力端子
7. 衝突防止ストリップ
8. DC入力ポート
9. PV入力ポート
10. SOS＆LEDライト
11. グリップ
12. 冷却ファン
13. ワイヤレス充電器

※分解・修理・改造は絶対しないでください。
ご使用前に、ポータブル電源をフル充電してください。

■MP1000の付属部品

 MC４ 7909 連続ケーブル	 100-240Vの ACアダプター	 12Vのカーチャージャーケーブル	 取扱説明書

※100W/200W ソーラーパネル は別途で買う必要

■各ボタンの名前



A: メイン電源ボタン
B: SOS＆LEDライト電源ボタン
C: DC出力電源ボタン
D: USB出力電源ボタン
E: AC出力電源ボタン

■ボタンについて

- **A メイン電源ボタン**
  メイン電源ボタンを押しすると、電源がONになり、DC/USB / AC出力端子から電気製品へ給電できます。もう１回押しすると、電源がOFFになります。
- **B SOS＆LEDライト電源ボタン**
  メイン電源ボタンがOFFしても、SOS＆LEDライト電源ボタンを1回押しすると、LEDライトが点灯します。連続2回押しすると、SOSモードに切り替えます。もう1回押しすると、LEDライトモードに戻ります。最後押しすると、OFFになります。
- **C DC出力ON/OFF ボタン**
  このボタンは電源ボタンと同時にONになっている場合、DC出力端子から給電できます。もう１回押しすると、OFFになります。
- **D USB出力ON/OFF ボタン**
  このボタンは電源ボタンと同時にONになっている場合、USB出力端子から給電できます。もう１回押しすると、OFFになります。
- **E AC出力ON/OFF ボタン**
  このボタンは電源ボタンと同時にONになっている場合、AC出力端子から給電できます。もう１回押しすると、OFFになります。
- **ワイヤレス充電器**
  このボタンは電源ボタンと同時にONになっている場合、USB出力端子とワイヤレス充電器から給電できます。もう１回押しすると、OFFになります。
- **冷却ファン**
  本体内部の温度が高くなると、自動的に冷却ファンが作動して、本体内部を冷却しますので、ふさがない状態でご使用ください。

■表示LCDの見方



H: 目安電池残量
I: 入力状態
J: DC 出力状態
K: AC 出力状態
L: USB 出力状態

■LCDに表示される詳細

電池残量のインジケーターH:

- バッテリの残量に応じて「バッテリ残量インジケーター」が点灯します。

充電表示LCDのパターンについて				
1%-20% 点灯	21%-40% 点灯	41%-61% 点灯	61%-80% 点灯	81%-100% 点灯

- リアルターム的に入力した電力或いは出力した電力を数値で表示されます。初めてご使用前に、必ずフル充電してから、お使いください。バッテリの残量が多ければ数値の精確性が高いです。
- 連続設備の電圧によって数値が変わります。特に連続した際に、数値の変化が大きいです。
- バッテリの残量が20％以下になった場合、連続設備への給電を止めて、本機を充電してください。
- 充電開始する前、約1分間バッテリの状態、充電環境と電路を自動診断し、最適的なモードで充電開始します。

入力状態：

提供可能な電力が表示されます。

DC出力状態：

DCポートの出力電力が表示されます。

AC 出力状態：

ACの出力電力が表示されます。

省エネモード

20秒以上動作がない場合（新しい出力負荷がない）、LCD表示は睡眠モードになります。充電コードを入力するか、いずれかボタンを押しすると、睡眠モードを解除します。

■General Specifications

General Specs		
	Rated Capacity	999Wh
	Weight (Net Weight)	≈8.5kg
	Weight (Including Accessories)	≈9.5kg
	Product Size	290mm*202mm*202mm
Input		
	Recharging Input Voltage	12-26V
	Recharging Input Power	150W
	AC/DC Adapter	150W MAX, AC 100-240V (50Hz/60Hz), DC 24V, 6.25A
	Solar Charge Input	12-26V, DC 8A MAX
	Car Charger	DC 12V, 8A MAX
Output		
	AC Output Voltage	110V±10%/60Hz
	Rated Output Power	1000W
	Output Waveform	Pure Sine Wave
	Overload Protection Power	1100±80W
	Cigarttle Lighter Socket Output	14V⎓8A(Max) (112W Max)
	DC 55*2.5 Output*2	
	Wireless Charger	10W
	Usb Output	QC3.0/18W
	Output Type-C	PD60W
Battery		
	Standard Capacity of Cells	3.7V/270000mAh
	Discharging Temperature	14 to 113°F (-10 to 45°C)
	Recharging Temperature	32 to 104°F (0 to 40°C)

■How To Charge



⚠ **It is recommended to fully charge MP1000 every 3 months to maintain the health of the battery pack.**

■AC Adapter Charging

It will take 7-8 hours to charge fully by using the AC adapter we provided.



■Solar Panel Charging

1. DO NOT charge the unit via solar panel that operate voltage outside of DC12-26V.
2. Place Solar Panels in direct sunlight as much as possible.
3. Support 60W/80W/100W/120W/150W/200W Max Solar Panels (Not included), the charging time is determined by the solar light intensity.



(Not Included)

■12V Car Charger Charging

Use the Car Charger we provided to charge this unit. The full charge time takes 9-11 hours. When the LCD display shows the battery power of 100%, it indicates that this unit is fully charged.



■Powering/Charging Devices with MP1000

Select the type of outlet required by pressing the Output ON/OFF Button C/D/E. The output port will NOT function until the appropriate button is pressed to activate the port. When activated, the indicator on the button will illuminate green, indicating that the output (s) are active, and the LCD display wil turn on and provide details on the charging output. The LCD Screen will automatically shut down when no outputs are activated.

Pass-through Charging

The advanced battery management system of the MP1000 allows it to charge a connected device via AC Output & DC output & USB output while charge the MP1000.

Overload Condition

If an overload condition occurs on the OUTPUT port, MP1000 will: Automatically turn off AC Output power.
The blue indicator light of LCD Screen still illuminated. DC OUTPUT Status J still the same status as usual.

Do following:

Check the input charge cable. The port will be efficient when the input charge cable meets the specification outlined in the General Specifications section. Only charge MP1000 with provided AC wall power adapter.

■What It Powers

Laptops (41.4Wh) **Around 20 Recharges**	32" TV(60W) **Around 14 Hours**	CPAP Without Heated Humidifier (15W) **56 Hours**	Gopro (5.9Wh) **Around 143 Recharges**	Floodlight(4W) **Around 212 Hours**
Mini Fridge(40W) **Around 21 Hours**	Drone(89.2Wh) **Around 9.5 Recharges**	Smartphone(10Wh) **Around 84 Recharges**	Switch(16Wh) **Around 53 Recharges**	**+MORE**

■製品仕様

一般仕様		
	電力	999Wh
	重量	約8.5kg
	重量 (付属品含む)	約9.5kg
	サイズ	290mm*202mm*202mm
入力		
	充電入力電圧	12-26V
	充電入力電力	150W
	AC/DC アダプター	150W MAX, AC 100-240V (50Hz/60Hz), DC 24V, 6.25A
	ソラーチャージャー入力	12-26V, DC 8A MAX
	カーチャージャー入力	DC 12V, 8A MAX
出力		
	AC出力	110V±10%/60Hz
	定格電力	1000W
	出力波形	純正弦波
	最大出力	1100±80W
	シガーソケット	14V⎓8A(Max) (112W Max)
	DC55*2.5 出力*2	
	ワイヤレス充電器	10W
	USB 出力	QC3.0/18W
	Type-C 出力	PD60W
バッテリー		
	標準容量	3.7V/270000mAh
	作動温度	14 to 113°F (-10 to 45°C)
	充電温度	32 to 104°F (0 to 40°C)

■充電方法


150W ソーラーパネルによる充電
約6～9時間がかかる
※ご利用環境によって、充電時間の変化があります。
12V 車載向けシガーソケットによる充電
約9-11時間がかかる
110VのACによる充電
約7~8時間がかかる

⚠ **1ヶ月以上に保管される場合、保管の前に満充電してください。安全上、約3ヶ月に1回満充電して充電容量の確認、維持してください。**

■ACによる充電

付属のACアダプターで約7-8時間がかかります。



■ソーラーパネルによる充電

1. DC12-26V以上の入力に対応しませんので、ソーラーパネルの製品仕様をよく確認してから接続してください。
2. ソーラーパネルはできるだけ直射日光の当たる場所に設置してください。
3. 最大60W/80W/100W/150W/200Wの入力に対応しています。ご利用環境によって、充電時間の変化があります。



(別途で買う必要)

■12Vの車載向けアクセサリーソケットによる充電

付属の専用車載充電ケーブルで充電してください。満充電まで約9-11時間がかかります。LCDディスプレーに100%が表示されると満充電になります。



■MP1000 出力の仕方

メイン電源ボタンAをONに押します;
給電する電気製品に応じてC/D/Eの電源ボタンをONに押しすると、LEDライトが緑点灯します。
LCDディスプレイで電気機器の消費電力が表示されます。
20秒以上動作がない場合(新しい出力負荷がない)、LCD表示は睡眠モードになります。充電コードを入力するか、いずれかボタンを押しすると、睡眠モードを解除します。

充電しながら給電可能

最先端の電池管理システムにより、本機を充電する同時に、AC出力端子、DC出力端子とUSB出力端子から電気製品へ給電できます。

過負荷の場合

過負荷状態になると、
- 保護機能が作動しAC出力側の給電を自動的に停止します。
- LCD画面の青いライトは点灯継続します。
- DC側の給電に影響しません。

必ず付属の充電ケーブルで充電してください。

■主な機器の使用時間の目安

ノートPC (41.4Wh) **約20回**	32"TV (60W) **約14時間**	加湿器 (15W) **約56 h**	ビデオカメラ (5.9Wh) **約143回**	照明灯 **約212 h**
ミニ冷蔵庫 **約21 h**	ドローン (89.2Wh) **約9.5回**	スマホ (10Wh) **約84回**	Switch (16Wh) **約53回**	**そのほか**

Safety Instructions

Read the following instructions to ensure safety before using. Improper use may result in fire, property damage or personal injury.

⚠ Product Use:

- **DO NOT** use any inappropriate power cords.
- **DO NOT** place the unit close to or in a fire on expose it to heat. Keep out of direct sunlight.
- **DO NOT** charge, use or store the unit in a bathroom or in an area exposed to rain or moisture. Do not drop the unit into the water. If the battery in the unit comes into contact with water, it may cause chemical decomposition of the battery. This may cause the battery to catch fire or explode. Never use or charge swollen, leaky, or damaged batteries. If your battery is abnormal, contact us to get support.
- Never install or remove a battery from the unit when it is turned on.
- **DO NOT** use the batteries in strong electrostatic or electromagnetic environments. Otherwise, the battery control board may malfunction and cause a serious accident.
- Never disassemble or pierce the product in any way. Otherwise, it may leak, catch on fire, or explode.
- **DO NOT** use the product if it was involved in a crash or a heavy bump.
- If the product falls into the water during use,take the product out immediately and put it in a safe and open area. Keep a safe distance from it until it is completely dry. Never use it again and dispose it properly as described in the Battery Disposal section below. If the product catches fire, it is recommended to use fire extinguishing equipment in the following: sand, fire blanket, dry powder, carbon dioxide fire extinguisher.
- Do Not allow pins, wires or other metal pieces to insert to the device case, outlets or controls. Metal pieces may short circuit the product.
- Avoid collision. **DO NOT** place heavy objects on the machine.
- Use and store the unit only in a clean and dry environment. Do not use and store in dusty and wet environment.
- If there is dirt on any plug or outlet surface, use a dry cloth to clean it. Otherwise, it will cause abrasion and result in energy loss or inability to charge.
- **DO NOT** put the machine in a microwave oven or in a pressurized container.

⚠ Product Recharging:

- **DO NOT** charge the unit via power supply systems that operate outside of AC100-240V.
- **DO NOT** charge the unit via solar panel that operate voltage outside of DC12-26V.

- Always use approved attachment charging cables. we take no responsibility for any damage caused by using other brand charging cable.
- When charging, please place the product on the ground with no flammable or combustible materials around. To prevent accidents, never leave the machine unattended during charging.
- **DO NOT** charge a product immediately after a long heavy load, because the product's temperature may be too high. DO NOT charge a product until it cools down to room temperature.
- Only charge, use the unit within an ambient temperature of 0 to 40°C (32~104°F). The ideal charging temperature is 71ºF to 82ºF(22°C to 28°C).

⚠ Product Storage and Transportation:

- Keep the product out of the reach of children. If any children accidentally swallow parts, please go to a doctor immediately.
- If a low-battery warning appears, charge the battery before store it.
- Store the product in dry environments. DO NOT place the product where it may contact with water.
- Make sure no small metal objects can fall on or around the product while in storage.
- Never transport a product by air when battery power level higher than 30%.

⚠ Product Maintenance:

- Never store the product in environments below -20°C or above 45°C.
- Battery life may be reduced if not used for a long time.
- Fully charge and discharge the battery at least once every 3 months to maintain battery health.

Cleaning

Be sure that MP1000 is disconnected from all input power sources and output devices. Use a clean, dry, soft-lint-free cloth to wipe down it. Remove any debris, dirt, or other blockages on both side vents. When cleaning debris from the side vents, do not allow the debris, dirt, or other blockages to enter the body of MP1000.

DO NOT use abrasive cleaners or solvents.
DO NOT use compressed air to clean side cooling vents, as this will force foreign particles into the internal circuitry.

⚠ To avoid the risk of electrical shock, **DO NOT** use metal objects to cleanports.

Storage

If storing for more than 1 month, charge completely before storage and recharge approximately every 3 months to avoid full discharge and possible damage. Store indoors, in cool temperatures, mild humidity, and away from direct sunlight (See General Specifications Section). Leaving in a vehicle or other confined spaces in extreme hot.

Temperatures can lead to decreased service life, overheating, and fire. Extreme cold conditions below specific storage range can also harm MP1000 performance and service life. Keep away from corrosion chemicals and gases.
After taking out of storage, visually inspect to make sure MP1000 and all accessories look satisfactory. This increase review the intake and exhaust side vents to ensure they are clear of debris. Allow MP1000 to return to ambient conditions before recharging, or charging other devices.

Attention

Transportation: MP1000 complies with all legal requirements for transport of dangerous goods. The capacity of the lithium battery pack exceeds 100Wh. Based on international standards, if MP1000 is transported by airplane, it must be transported in accordance with IATA standard packaging. IATA instructions and labeling requirements and the relevant declarations must be completed.

Not Permitted on Aircrafts	Avoid Dropping
To Preserve The Battery Lifespans, Please Use and Recharge at Least Once Every 3 Months	Do Not Disassemble
Use Original or Cerified Charger and Cables	It's Not Waterproof, do Not Expose to Liquids
Avoid Extreme Temperature	Please Dispose of Batteries And Electronic Goods in Accordance with Local Regulations

UL Note

A photovoltaic panel as input for charging the internal battery shall be provided with an inverter and/or a charge controller in accordance with UL 1741 or UL 62109-1; The external power supply shall be a power source in accordance with the Standard UL 60950-1 and CAN/CSA C22.2 No. 60950-1, or UL 1310 and No. 1, CAN/CSA C22.2 No. 223, or No.1, CAN/CSA C22.2 No. 223; A vehicle adapter that complies with the enclosure and input contacts requirements in the Standard for Vehicle Battery Adapters, UL 2089, and Power Supplies, CAN/CSA C22.2 No. 107.1. The connector plug shall incorporate a fuse or other protective device having a current rating not greater than 15 A.
INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.
IMPORTANT SAFETY INSTRUCTIONS
1. WARNING – When using this product, basic precautions should always be followed, including the following:
a) Read all the instructions before using the product.
b) To reduce the risk of injury, close supervision is necessary when the product is used near children.
c) Do not put fingers or hands into the product.
d) Use of an attachment not recommended or sold by power pack manufacturer may result in a risk of fire, electric shock, or injury to persons.
e) To reduce the risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the power pack.
f) Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
g) Do not operate the power pack with a damaged cord or plug, or a damaged output cable.
h) Do not disassemble the power pack, take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
i) To reduce the risk of electric shock, unplug the power pack from the outlet before attempting any instructed servicing.
j) WARNING – RISK OF EXPLOSIVE GASES.
1) To reduce the risk of battery explosion, follow these instructions and those published by the battery manufacturer and manufacturer of any equipment you intend to use in the vicinity of the battery. Review cautionary marking on these products and on engines.
k) PERSONAL PRECAUTIONS
1) Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
2) Wear complete eye protection and clothing protection. Avoid touching eyes while working near the battery.
3) If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters the eye, immediately flood the eye with running cold

安全上の警告

取り扱いを誤ると、火災や物·人身の損害に至る可能性があります。本製品に対する安全なご使用と、性能を十分に発揮するために、ご使用の前には必ず本書をご読みいただき、正しくご使用ください。

⚠ 安全にお使いいただくために

- 必ずケーブルの仕様をよく確認してから接続してください。
- 火中、焼却炉への投入や電子レンジ、オーブンなどでの加熱は、爆発事故につながりますので、絶対にしないでください。直射日光にあたる場所での使用及び保管はしないでください。
- 雨や雪の中及び浴室などの湿気の多い場所では使用、保管しないでください。火災、怪我、爆発のおそれがあります。本製品が損傷、液漏れ、発熱、変形などの異常が生じた場合には、絶対に使用せず、弊社お問い合わせ窓口へご連絡くさだい。
- 分解・改造したり、部品を取り外したまま使用しないでください。
- 静電気や電磁波の強い環境ではバッテリーを絶対使用しないでください。フライト中にバッテリーの制御盤が誤作動し、重大な事故につながるおそれがあります。
- 本製品に強い衝撃、振動をあたえないでください。
- 本製品を水没させないでください。水没した場合、安全な場所に置いて乾燥してください。その場を離れ、二度と使用しないでください。下記の廃棄方法を参照して適切な手段で廃棄してください。
- コンセントや端子に指などの体の一部、ピンや針などの金属物を差し込まないでください。
- 高温、低温、多湿を避け、直射日光の当たらない風通しの良い場所に保管してください。
  夏の車内やストーブの近くなど高温環境下での使用・保管はしないでください。使用寿命の短縮、加熱、火災に至る可能性があります。
- 製品本体についた汚れや埃は、思わぬ故障や変色などを招く場合があります。溶剤やクリーナーの使用は避け、乾いた布や固く絞った布で本体を拭いてください。

⚠ 充電のご注意

- AC100-240V以外の入力対応はしておりません。
- DC12-26V以上の入力に対応しておりません。
- 付属の充電ケーブルを含む弊社のアクセサリ以外は、使用しないでください。他のブランドの充電ケーブルを使用したことによる損害については、当社は一切責任を負いませんのでご了承ください。

- 充電の際には製品を地面に置き、周囲に燃えやすいものや可燃性のものがないようにしてください。事故防止のため、充電中に製品を放置しないでください。
- 長時間運転した場合、製品の温度が上がりすぎるため、すぐに充電しないでください。常温になるまで充電しないでください。充電や使用は、周囲の温度が0～40℃(32~104°F)の範囲内で行ってください。最適な充電温度は71ºF～82ºF（22°C～28°C）です。

⚠ 保管と運輸のご注意

- 小さなお子様だけの使用は避け、お子様の近くで使用する場合も十分安全に配慮して使用してください。また、お子様の手の届く範囲内での保管はしないでください。
- 1ヶ月以上に保管される場合、保管の前に満充電してください。
- 高温、低温、多湿を避け、直射日光の当たらない風通しの良い場所に保管してください。
- 空輸の場合、バッテリーの電量は30%以上を超えてはいけません。

⚠ メンテナンスのご注意

- -20℃～45℃の環境で保管してください。
- 安全上、約3ヶ月に1回充電して充電容量の確認、維持してください。充電容量を0%の状態で放置すると、電池に劣化、或いは故障が生じるおそれがあります。

お手入れ

本体をお手入れする前には、必ず充電器を外し、本体の電源がOFFになっていることを確認してください。
製品本体についた汚れや埃は、思わぬ故障や変色などを招く場合があります。
溶剤やクリーナーの使用は避け、乾いた布や固く絞った布で本体を拭いてください。
コンセントや端子に指などの体の一部、ピンや針などの金属物を差し込まないでください。
本体コネクタ部分に水分や湿気が残った状態で使用しないでください。

保管の仕方

1ヶ月以上に保管される場合、保管の前に満充電してください。安全上、約3ヶ月に1回充電して充電容量の確認、維持してください。充電容量を0%の状態で放置すると、電池に劣化、或いは故障が生じるおそれがあります。
高温、低温、多湿を避け、直射日光の当たらない風通しの良い場所に保管してください。
夏の車内やストーブの近くなど高温環境下での使用・保管はしないでください。
使用寿命の短縮、加熱、火災に至る可能性があります。
極端な低温環境でも性能と使用寿命に影響があります。
腐食性がある化合物とガスから遠げてください。
使用前に行う始業点検は毎回実施してください。
本製品が損傷（錆、変形、変色、正常に作動しない）した場合、使用しないでください。

ご注意

運輸に関して、本製品は危険物輸送に関するすべての法的要件に準拠しています。
リチウムバッテリの容量は100Whを超えていますので、空輸の場合、IATA標準に従ってしかっり梱包して運送してください。
要求されてラベルも貼り付けてください。

飛行機には持ち込めません。	落下や衝撃を与えないでください。
長期保管の場合、3ヶ月ごとに充電してください。	分解、改造はしないでください。
純正または認証されたケーブルをご使用ください。	本製品は防水仕様ではありません。
極端な温度下では使用しないでください。	バッテリーや電子機器の廃棄は各地方自治体の規則に従ってください

注意

内部バッテリーを充電するための入力としての太陽光発電パネルには、UL1741またはUL62109-1に準拠したインバーターおよび/または充電コントローラーを備えなければなりません。外部電源は、規格UL60950-1およびCAN/CSA C22.2 No. 60950-1、またはUL1310およびNo.1、CAN / CSA C22.2 No. 223、またはNo.1、CAN / CSA C22.2 No.223を兼ねて、
車両用バッテリーアダプタの規格、UL 2089、および電源装置、CAN / CSA C22.2No.107.1のエンクロージャおよび入力接点の要件に準拠する車両用アダプタです。コネクタプラグには、定格電流が15A以下のヒューズまたはその他の保護装置を組み込む必要があります。
火災、感電、または人体への傷害の危険性に関する指示。
重要な安全に関する注意事項
1.警告–この製品を使用するときは、次のような基本的な注意事項をご注意ください。
a）製品を使用する前に、すべての指示をお読みください。
b）怪我のリスクを減らすために、子供がいる場所で製品を使用する場合は、一層注意してください。
c）製品に指や手を入れないでください。
d）パワーパックの製造元が推奨または販売していないアタッチメントを使用すると、火災、感電、または人体への傷害の恐れがあります。
e）電気プラグとコードの損傷のリスクを減らすために、パワーパックを取り外すときはコードではなくプラグを引っ張ってください。
f）損傷または改造されたバッテリーパックまたはアプライアンスを使用しないでください。損傷または改造されたバッテリーは、予期しない動作を示し、火災、爆発、または怪我の恐れがあります。
g）破損したコードやプラグ、または破損した出力ケーブルでパワーパックを操作しないでください。
h）パワーパックを分解しないでください。サービスまたは修理が必要な場合は、資格のあるサービス担当者に持って行ってください。再組み立てを誤ると、火災や感電の恐れがあります。
i）感電の危険を減らすために、指示されたサービスを試みる前に、電源パックをコンセントから抜いてください。
j）警告–爆発性ガスの危険性。
1）バッテリーの爆発の危険性を減らすために、これらの指示と、バッテリーの製造元およびバッテリーの近くで使用する予定の機器の製造元によって公開されている指示に従ってください。これらの製品およびエンジンの注意マークを確認してください。
k）個人的な注意事項
1）バッテリーの酸が皮膚、衣服、または目に接触した場合に備えて、近くにたくさんの真水と石鹸を用意してください。
2）完全な目の保護と衣服の保護を着用してください。バッテリーの近くで作業しているときは、目に触れないでください。

water for at least 10 minutes and get medical attention immediately.
4) NEVER smoke or allow a spark or flame in the vicinity of the battery or engine.
5) Be extra cautious to reduce the risk of dropping a metal tool onto the battery. It might spark or short-circuit battery or other electrical parts that may cause an explosion.
l) When charging the internal battery, work in a well-ventilated area and do not restrict ventilation in any way.
m) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
n) Do not expose a power pack to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause an explosion. The temperature of 130°C can be replaced by the temperature of 265°F.
o) Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
SAVE THESE INSTRUCTIONS.

FCC Note

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different
from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.
FCC ID: 2A4UPMP1000MV1000

Troubleshooting

MP1000 Will Not Charge or Operate connected devices:
Ensure that the DC/USB/AC output ports are activated by pressing the Button (s) A & C/D/E for the port(s) in use.
Confirm the connected device is suitable for the MP1000 by reviewing the output specifications provided in the General Specifications section. Confirm MP1000 is charged by reviewing the Battery Level Indicator H.
Verify the watt data displayed on the Status Indicator I/J/K of LCD Screen for overload condition.

MP1000 Will Not Charge:
Confirm that the wall plug power adapter's cord is inserted fully into the DC Input. Confirm that the AC wall plug power adapter is the charger provided with MP1000. If the input does not comply with the requirements located in the General Specifications section, the Low Watt range 0 to 10 may be displayed on. Input Status I of LCD screen.

Maintenance

Recharge as needed. There are no pre-designated intervals at which to recharge as long as the MP1000 is being used regularly. Avoid discharging completed on a regular basis, as this can impact overall life.
Regularly inspect all ports and wall charger for any debris, dirt, damage and corrosion.
DO NOT attempt to fix.
DO NOT cover the MP1000 with towels, clothing or other items.
Regularly observe if the side vents are collecting dirt or dust, and clean following cleaning procedures noted in manual.

Disposal/recycle

Do not place equipment and its accessories in the trash. Items must be properly disposed of in accordance with local regulations.
See www.epa.gov for additional information.

Statement

Copyright EBL. All rights reserved. All trademarks cited herein are the property of their respective owners.

Limited Warranty

We warrant to the original consumer purchaser that our product will be free from defects in workmanship and material under normal consumer use during applicable warranty period identified in the "Warranty Period" section below, subject to the exclusion set forth below. This warranty statement sets forth ours total and exclusive warranty obligation. We wil not assume, not authorize any person to assume for us, any other liability in connection with the sale of our products.

Warranty Period

The warranty period is 12 months. In each case, the warranty period is measured starting on the date of purchase by the original consumer purchaser. The sales receipt from the first consumer purchase, or other reasonable documentary proof, is required in order establish the start date of the warranty period.

Remedy

We will repair or replace any our products that fails to operate during the applicable warranty period due to defect in workmanship or material. If a valid claim is made during the applicable period,We, at its option, will either replace the product. A replacement product assumes the remaining warranty of the original product or ninety (90) days from the date of replacement, whichever is greater. Customer is responsible for the return shipping costs.

Limited To Original Consumer Buyer

The warranty on ours product is limited to the original consumer purchaser and to any subsequent owner.

Exclusions

Our warranty does not apply to (1) any product that is damages caused by fire, earthquak, use by a third party, other accidents, intentional miscoduct on the part of the customer, abuse or other abnormal conditions. or used for anything other than normal consumer use as authorized in EBL's current product literature, or (2) any product purchased through an online auction house. Ours warranty does not apply to the battery cell unless the battery cell is fully charged by you within 7 days after you purchase the product at least every months thereafter.

How To Receive Service

To obtain warranty service, contact our customer service team at
service@eblmall.com

3）バッテリーの酸が皮膚や衣服に付着した場合は、すぐに石鹸と水で洗ってください。酸が目に入った場合は、すぐに10分以上水で目を流した後、即時に診察を受けてください。
4）バッテリーやエンジンの近くで発煙したり、火花や炎を出さないでください。
5）金属製の工具をバッテリーに落とすリスクを減らすために特に注意してください。バッテリーなどの電気部品に火花を散らしたり、ショートさせたりして、爆発の原因となります。
l）内蔵バッテリーを充電するときは、風通しの良い場所で作業し、換気を制限しないでください。
m）濫用状態では、バッテリーから液体が排出される恐れがありますので、接触を避けてください。万が一接触した場合は、すぐに水で洗い流してください。液体が目に入った場合は、医師の診察を受けてください。バッテリーから液体が排出されると、刺激や火傷を引き起こす可能性があります。
n）パワーパックを火や過度の温度にさらさないでください。火災または130°Cを超える温度にさらされると、爆発を引き起こす可能性があります。130°Cの温度は265°Fの温度に置き換えることができます。
o）同一の交換部品のみを使用して、資格のある修理担当者にサービスを実施してください。これにより、製品の安全性が維持され、これらの指示を保存してください。

FCC注

コンプライアンスの責任を負う当事者によって明示的に承認されていない変更または修正を行うと、機器を操作するユーザーの権限が無効になる可能性があります。
注：この機器はテスト済みであり、FCC規則のパート15に準拠したクラスBデジタルデバイスの制限に準拠していることが確認されています。これらの制限は、住宅設備での有害な干渉に対する合理的な保護を提供するように設計されています。この装置は、無線周波数エネルギーを生成、使用、および放射する可能性があり、指示に従って設置および使用しない場合、無線通信に有害な干渉を引き起こす可能性があります。ただし、特定の設置で干渉が発生しないという保証はありません。
この機器がラジオやテレビの受信に有害な干渉を引き起こす場合は、これは、機器の電源をオフにしてからオンにすることで判断できます。ユーザーは、次の1つ以上の方法で干渉を修正することをお勧めします。
-受信アンテナの向きを変えるか、位置を変えます。
-機器と受信機の間隔を広げます。
-機器を別の回路のコンセントに接続します
受信機が接続されているものから。
-販売店または経験豊富なラジオ/テレビ技術者に相談してください。
デバイスは、一般的なRF曝露要件を満たすように評価されています。この装置は、携帯型の露出状態で制限なく使用できます。
FCC ID：2A4UPMP1000MV1000

故障かなと思ったら

電力が取り出せない：
メイン電源ボタンと電源ボタンC/D/Eを押します。DC/USB/AC出力端子が作動しているかどうかを確認してください。
連続機器が使用範囲内であること確認してください。
LCDディスプレー（１）にバッテリーの残量を確認してください。
LCDディスプレー（１）にI/J/K/Lの消費電力を過負荷しているかどうか確認してください。

充電できない：
充電コードが完全に接続されていないかどうかを確認してください。
本機に付属の充電器であることを確認してください。
入力電力が仕様範囲内であることを確認してください。
バッテリ-の残量が0から10Wの範囲ので、LCDディスプレーに表示されない場合もあります。

メンテナンス

1ヶ月以上に保管される場合、保管の前に満充電してください。安全上、約3ヶ月に1回充電して充電容量の確認、維持してください。充電容量を0%の状態で放置すると、電池に劣化、或いは故障が生じるおそれがあります。ご使用になる時、過放電しないでください。
全てのポートやプラグに屑、埃、損傷がないかどうか定期的に検査してください。
修理しようとしないでください。
本製品を布や毛布などを被せないでください。
通風口に屑、埃が詰まっているかどうか定期的に検査し、取扱説明書に従ってお手入れしてください。

廃棄について

本製品と付属品を直接にゴミ箱に捨てはいけません。廃棄する時、自治体の規則に従ってリサイクルにご協力いただきますようお願いいたします。

声明

EBLに関するここに掲載されるすべての商標は、それぞれの所有者の知的財産です。

保証

保証規定に明示した条件のもと、修理または交換を行うことを保証するものです。
保証内容をよくお読みいただき、大切に保管してください。

当店の交換・返品のサービスはEBLの販売店で購入されたものに限ります。
その他の店で購入した場合、お買い上げの販売店にお問い合わせください。
EBLは責任を負いかねます。

保証期間

保証書登録票記載のお買い上げ日から１年間といたします。

付属の取扱説明書及び製品本体に貼付のラベルに記載の注意事項に従った使用状態において製品が故障した場合、弊社はこの保証書が定める条件にしたがって、工賃・部品代を弊社負担の上、製品を修理いたします。

お買い上げ日から30日以上、お客様のご都合による返品・交換の場合の送料はお客様のご負担となります。倉庫が返品を受け取ってから新しい商品を手配いたします。

保証修理の対象とならない場合

製品が次のいずれかに該当する場合には、保証修理の対象外とし、修理は有償となります。

- EBLの販売店の以外に購入した時
- 取扱説明書に定めるとおりの保管及びお手入れ（定期的な充電を含む）を実施しなかった時
- 分解、改造が行われたとき
- 保証期間ないに発生することが通常予想される経年変化
- 地震、台風、水害、落雷等の天災、および火災、塩害、異常電圧等の事故による被害を受けたとき
- 故意または重過失により故障したとき

保証修理のお申し込み

購入された販売店またはお問い合わせ窓口service@ eblmall.comに直接保証修理をお申し込みください。その時、この保証書を保証期間内にご呈示いただくことが必要となります。