Seat swivel installation for
CBTO20D2

**PASSENGER**
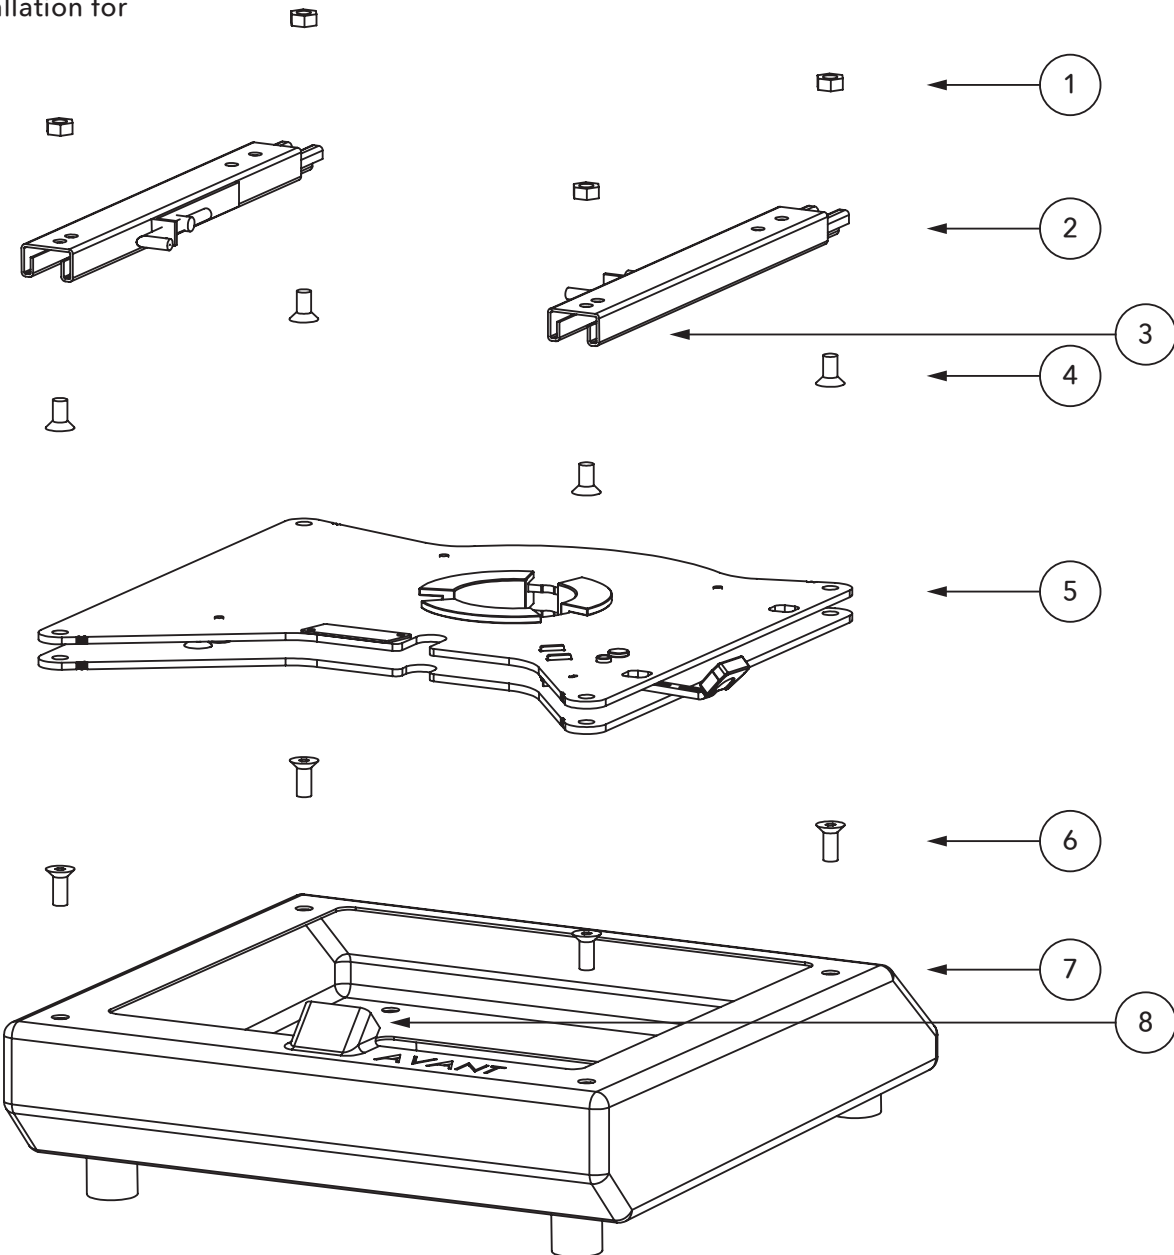
| | |
|---|---|
| 1 | 4 nuts M10 |
| 2 | Original Trafic X82 sliders |
| 3 | Cut off the 2 pins under the left rail |
| 4 | 4 Countersunk hexagon bolts M10x18 with threadlocker 25 N.m |
| 5 | Swivel base CBTO20D2 |
| 6 | 4 Countersunk hexagon bolts M10x25 - 30 N.m |
| 7 | Original Trafic X82 seat base |
| 8 | Fold the metallic flap towards the inside of the box |



This diagram shows a left hand drive seat. Right Hand drives are simply a mirror image.