Configurations

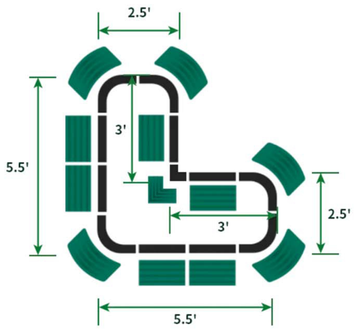

L-Shaped Bed Kit - Standard Size

- Length: 5.5 ft
- Width: 5.5 ft
- Height: 17 in
- Growing Area: 21 sqft
- Cubic Feet: 30
- Cubic Yard: 1.1

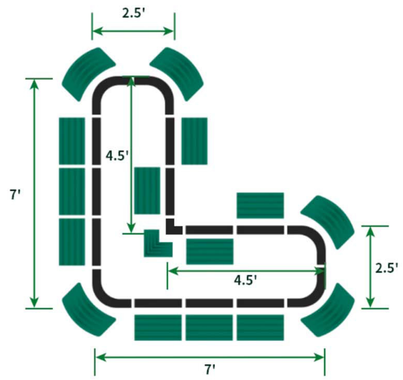

L-Shaped Bed Kit - Large Size

- Length: 7 ft
- Width: 7 ft
- Height: 17 in
- Growing Area: 29 sqft
- Cubic Feet: 41
- Cubic Yard: 1.5

Product Photos

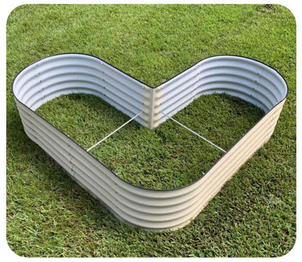

Contact Us

+1 (866) 597-1888 hello@vegogarden.com www.vegogarden.com Houston, TX 77023

© 2022 Vego Garden Inc. All rights reserved.

vegō gardeń®

17" Tall L-Shaped Raised Garden Bed Kit

(Note: This manual is designed for all L-Shaped Raised Garden Bed Kits, and the variety of parts & quantity will vary depending on the model that was purchased.)

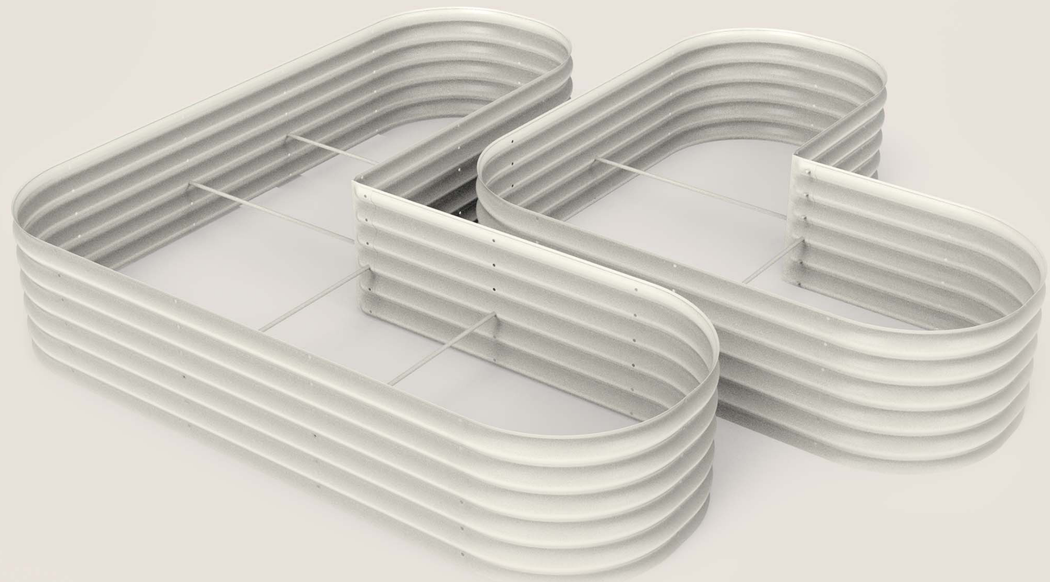

CAUTION: Please be aware that there are sharp metal edges. The use of protective equipment such as gloves and closed toe shoes is recommended.

CHOKING HAZARD: Small parts. Keep product away from children.

Parts List

(This general manual applies to all Vego Garden L-shaped garden beds. The package of a product model may not contain all the parts below. The quantity of parts for each product model may vary.)



A. Corner Panels



B. Straight Panels



C. Angled Joint Panels

D. Cap Nut Fastener Set

E. Standard Fastener Set



F. Safety Edging

G. Bracing Rods



H. Hand Wrench

Bracing Rod Installation Guide

1 Bracing Rods

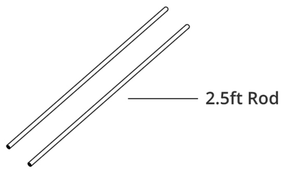

Vego Garden bracing rods are used to reinforce the structure of oversized raised beds. 17" Tall L-Shaped Raised Garden Bed Kits include **2.5ft** bracing rods.

2 Bracing Rod Installation

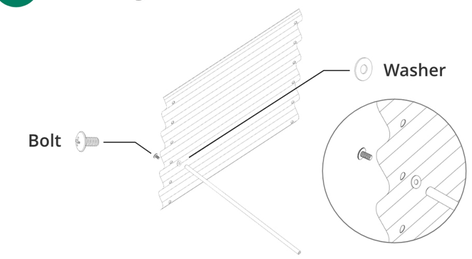

Install bracing rods in the **4th** bolt holes from the top, making sure the rods are in parallel holes. Attach bolt, panel, washer, and rod loosely, then tighten the bolts with the included hand tool for reinforcement.

Note: Bolts and washers used for rod installation are the same as those used to assemble the panels of the raised bed.

3 Reference Pictures

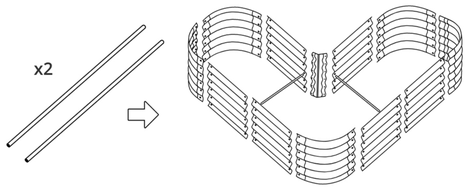

L-Shaped Bed Kit - Standard Size

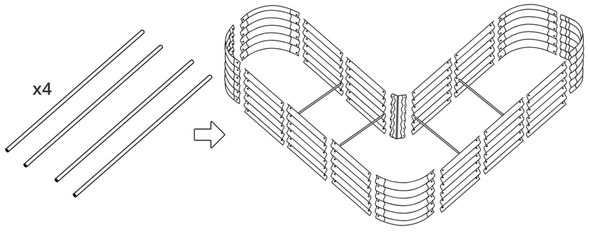

L-Shaped Bed Kit - Large Size

Assembly Guide

1 Remove Protective Film

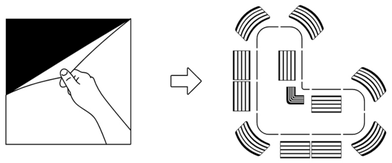

Remove protective films from all panels, and lay panels on a flat surface according to the L-shaped configuration.

2 Assemble Straight Panels

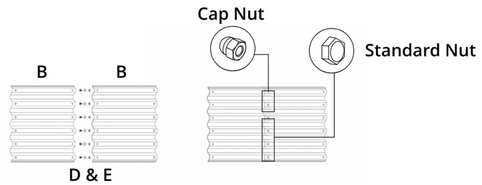

Cap nuts are used for top 2 rows, standard nuts are used for lower 4 rows. Assemble all straight panels: initially attach all washers and nuts loosely, and then tighten up using the included hand wrench and a screwdriver/cordless drill.

3 Tighten Nuts & Bolts

Make sure to tighten each nut and bolt for reinforcement of garden raised bed.

4 Attach Corner Panels

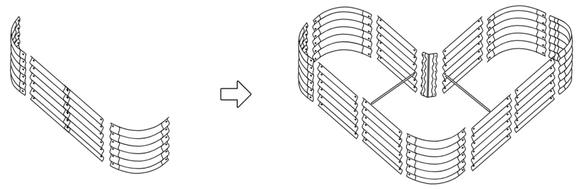

After straight panels are assembled, attach corner panels to straight panels using the same method. Make sure corner panels are attached on the outside of the straight panels. (Please refer to Bracing Rod Installation Guide for rod assembly instructions.)

5 Attach Angled Joint Panel

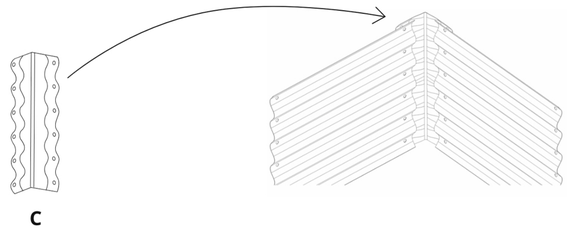

After all straight and corner panels are assembled, attach the angled joint panel to the straight panels using the same method. Make sure to attached the straight panels outside of the angled joint panel. (Please refer to the Bracing Rod Installation Guide for rod assembly instructions.)

6 Safety Edging

Push the safety edging down along the top rolled steel edge, covering the perimeter of the bed, and cut off the extra length. Make sure edging is attached securely.

✔ Complete

Congratulations on completing assembly! We are sure there are more configurations you can make with your great imagination!