Tote Trolley Tray - Triple Column
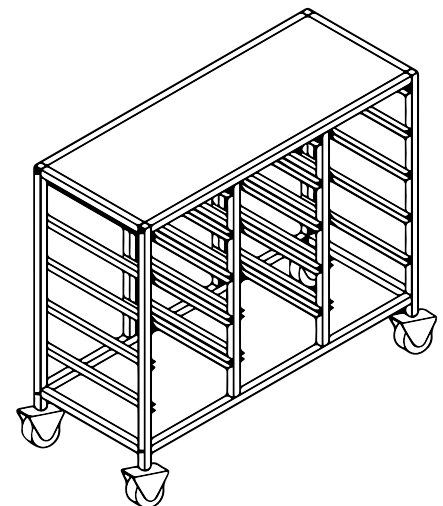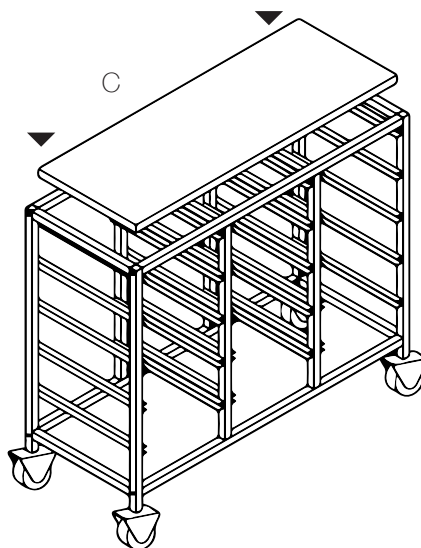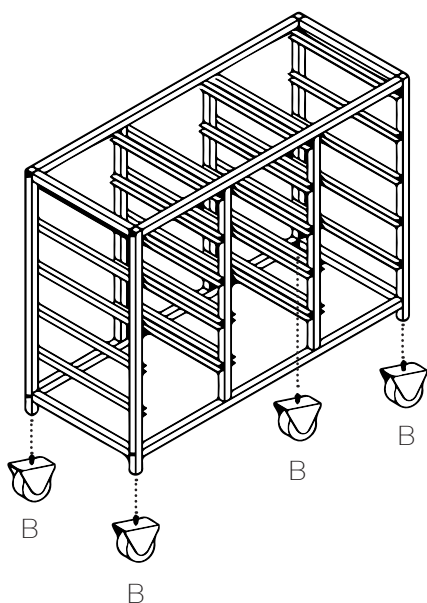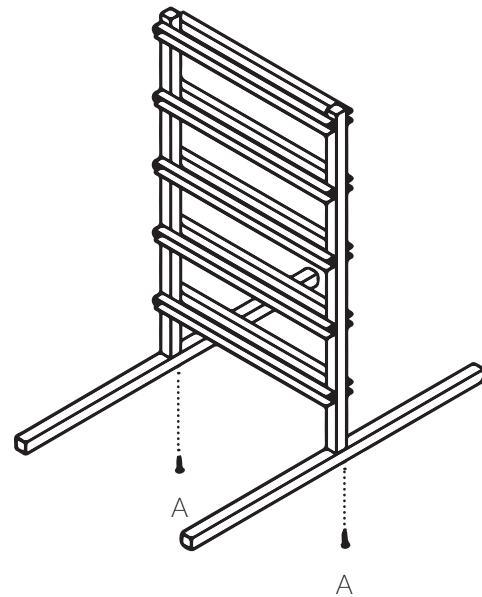
Code: EMTTT

VISIONCHART

Contents

2x Top rails with holes for top shelf attachment
2x Bottom rails
2x End frames
2x Centre frames
1x Wooden top shelf
16x 40mm M6 bolts
4x Casters

Hardware

A		16
B		4
C		1

Unpack contents and lay out on the floor

1. Identify the top and bottom cross-rails - the top cross-rails have holes for attaching the top shelf
2. Take the two centre runner frames (with runners on both sides). Attach the two bottom cross-rails using bolt A. Do not fully tighten bolts.
3. Attach the two top cross-rails using bolt A. Do not fully tighten bolts.
4. Take the two end frames and attach the cross-rails using 8 x bolt A.
5. Screw the casters B to the bottom of the end frames.
6. Place the wooden shelf (preferred surface facing up} within the recess created by the top of the frame.
7. Fully tighten all bolts. Turn unit upright and insert your selection of our colourful tote trays.